


1. ARC403 Series

ARC403A1

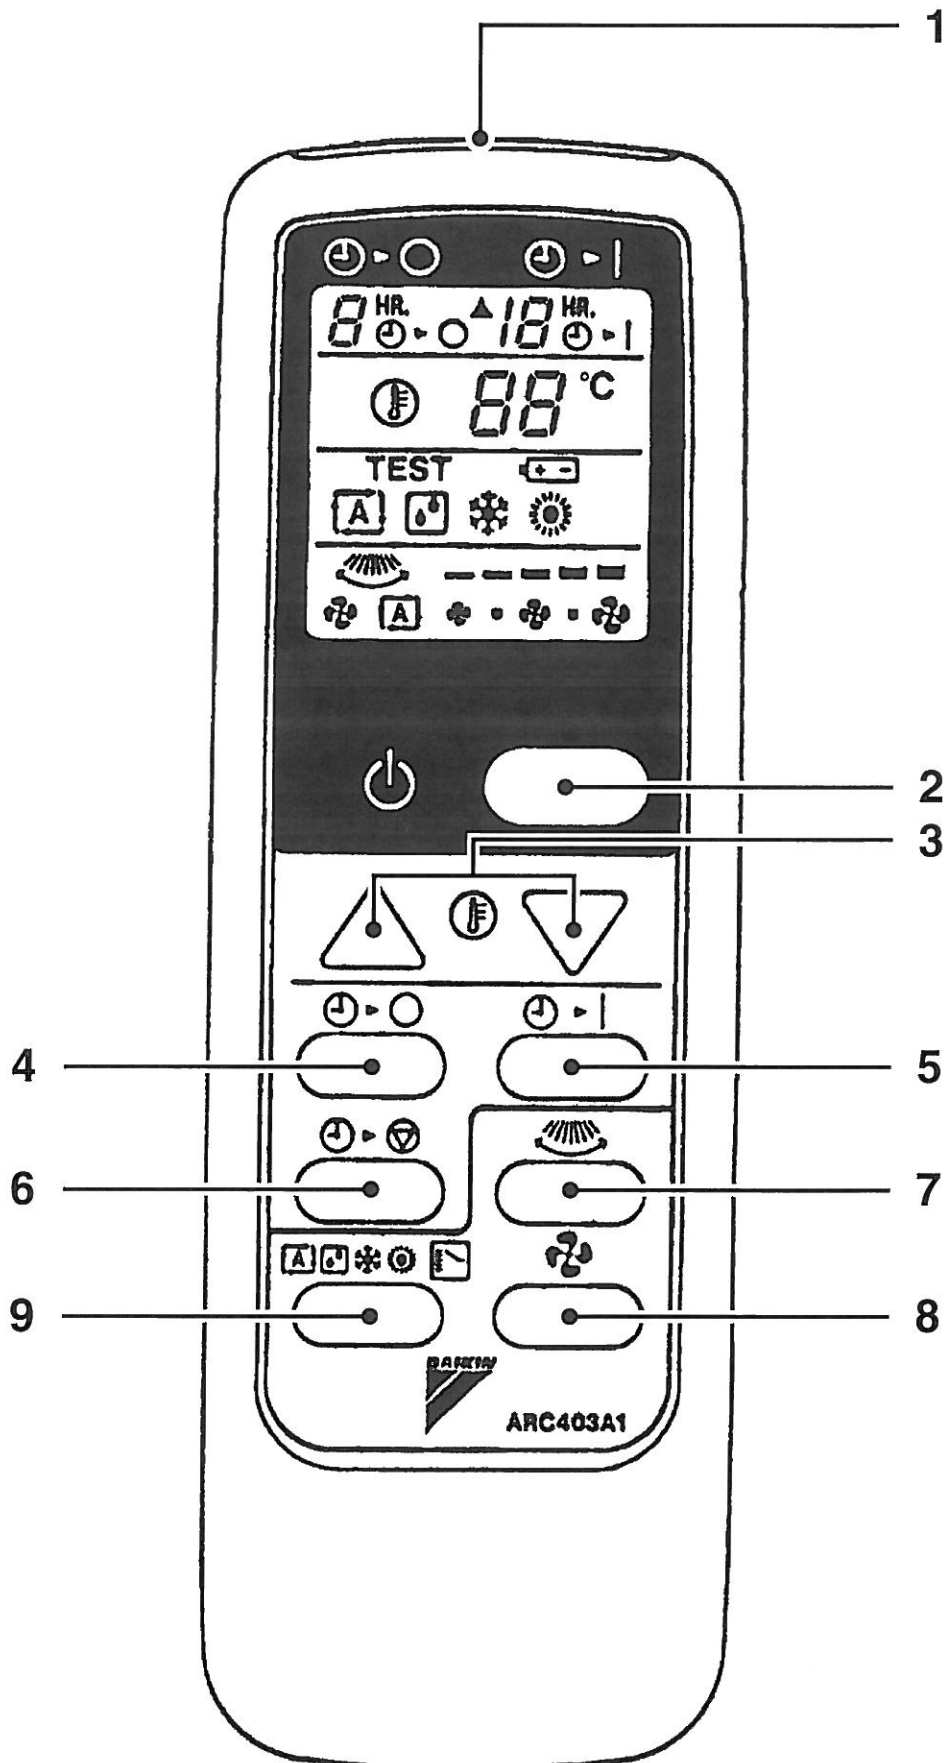

1. SIGNAL TRANSMITTER

- Send signals to the air conditioner.

2. ON/OFF button

- Press once to start operation.
Press once more to stop operation.

3. ROOM TEMPERATURE**ADJUSTING buttons**

- Use these buttons to set the room temperature as you like.

Temperature setting range

COOL ... 17°C - 31°C

HEAT ... 14°C - 28°C

AUTO ... 17°C - 28°C

4. TIMER OFF SETTING button**5. TIMER ON SETTING button****6. TIMER CANCEL button****7. SWING button****8. AIR FLOW ADJUSTING button**


- Five choices are available for airflow setting. In "AUTO", the computer changes the air flow automatically according to the room temperature.

9. OPERATION MODE SELECTOR button**Note:**


Display monitor function :

You can check or change settings when the air conditioner is stopped. To check, press once the button for the setting you are checking. To change the setting, press the same button again while the display is ON.

Unit operation panel and display panel

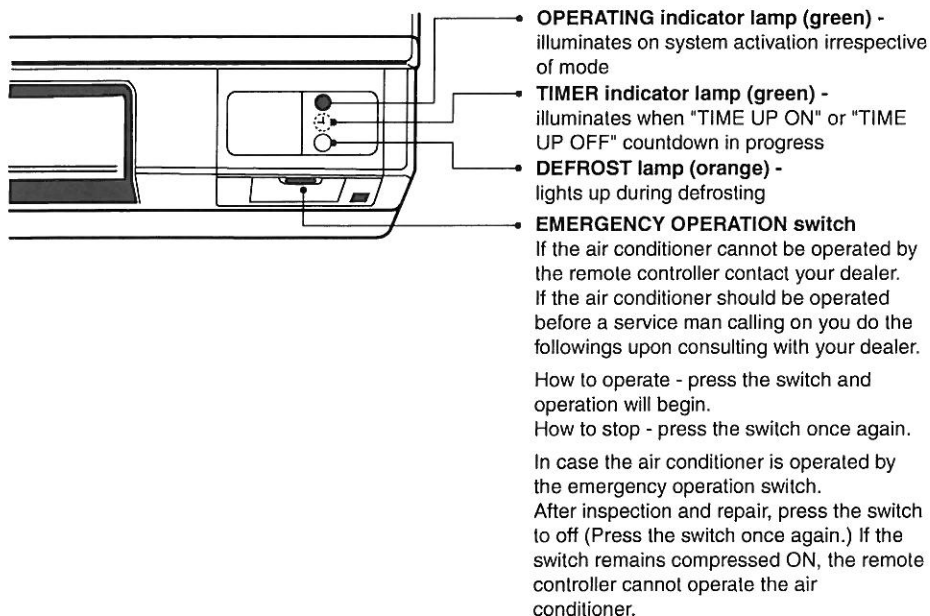

ARC403A2

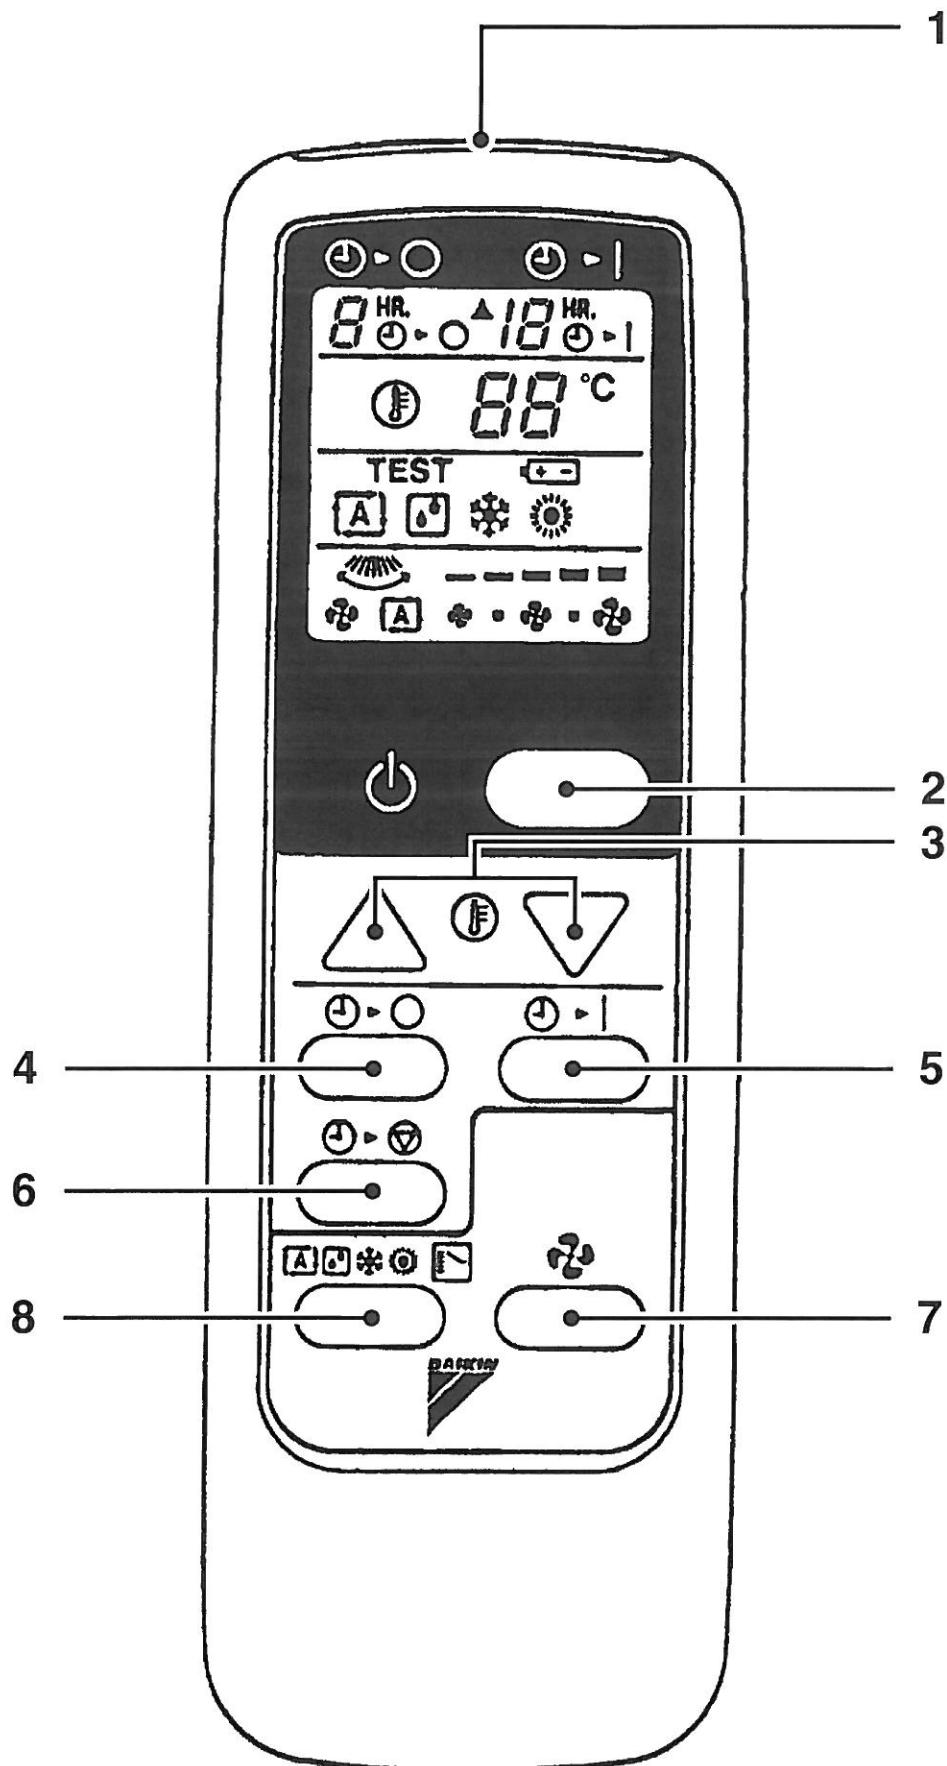

1. SIGNAL TRANSMITTER

- Send signals to the air conditioner.

2. ON/OFF button

- Press once to start operation.
Press once more to stop operation.

3. ROOM TEMPERATURE**ADJUSTING buttons**

- Use these buttons to set the room temperature as you like.

Temperature setting range

COOL ... 17°C - 31°C

HEAT ... 14°C - 28°C

AUTO ... 17°C - 28°C

4. TIMER OFF SETTING button**5. TIMER ON SETTING button****6. TIMER CANCEL button****7. AIR FLOW ADJUSTING button**


- Five choices are available for airflow setting. In "AUTO", the computer changes the air flow automatically according to the room temperature.

8. OPERATION MODE SELECTOR button**Note:**

Display monitor function :

You can check or change settings when the air conditioner is stopped. To check, press once the button for the setting you are checking. To change the setting, press the same button again while the display is ON.

ARC403A3

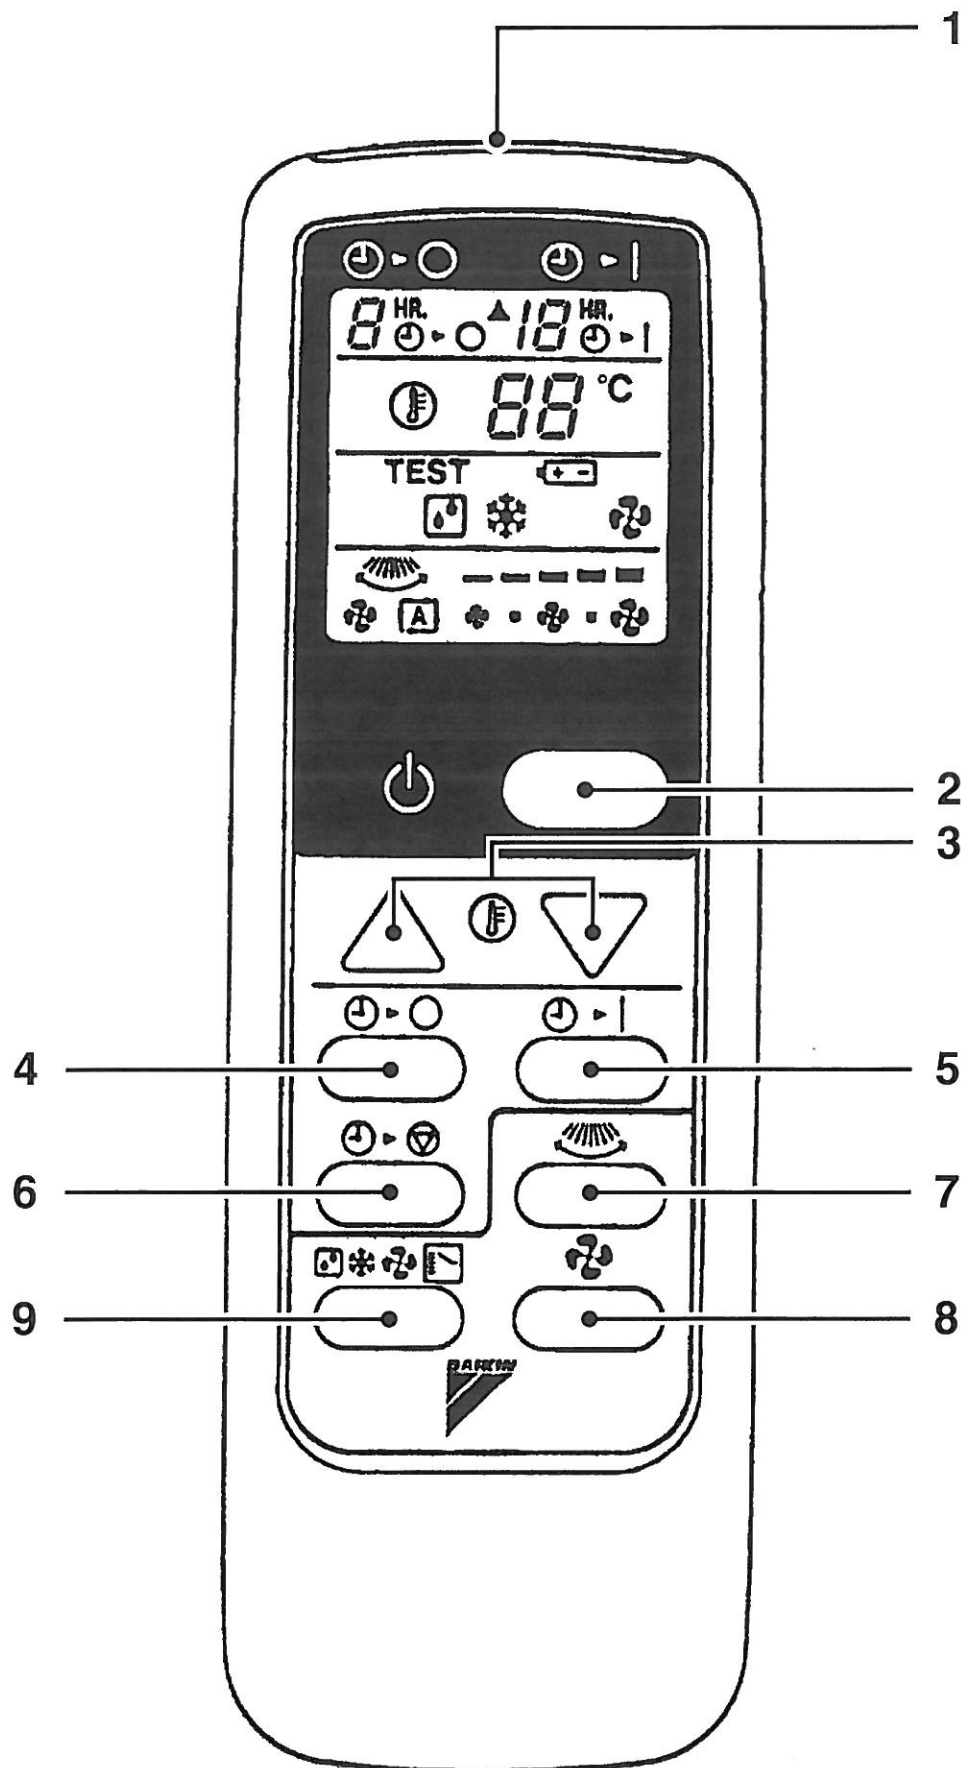

1. SIGNAL TRANSMITTER

- Send signals to the air conditioner.

2. ON/OFF button

- Press once to start operation.
Press once more to stop operation.

3. ROOM TEMPERATURE**ADJUSTING buttons**

- Use these buttons to set the room temperature as you like.

Temperature setting range

COOL ... 17°C - 31°C

4. TIMER OFF SETTING button**5. TIMER ON SETTING button****6. TIMER CANCEL button****7. SWING button****8. AIR FLOW ADJUSTING button**

- Five choices are available for airflow setting. In "AUTO", the computer changes the air flow automatically according to the room temperature.

9. OPERATION MODE SELECTOR button**Note:**

Display monitor function :

You can check or change settings when the air conditioner is stopped. To check, press once the button for the setting you are checking. To change the setting, press the same button again while the display is ON.

Unit operation panel and display panel

