
BRC1D71 Si20-501A

BRC1D71

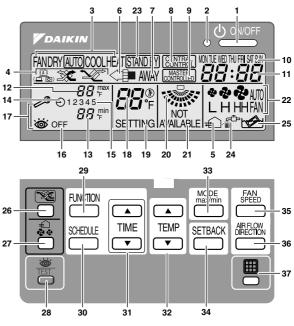



3P166742-1

1. ON/OFF BUTTON ON/OFF

Press the ON/OFF button to start or stop the system.

2. OPERATION LAMP ()

The operation lamp lights up during operation or blinks if a malfunction occurs.

3. OPERATION MODE ICON FANDRY (AUTO) COOLHEAT These icons indicate the current operation mode (FAN.

These icons indicate the current operation mode (FAN, DRY, AUTOMATIC, COOLING, HEATING).

4. VENTILATION MODE ICON

These icons indicate the current ventilation mode (HRV only) (AUTOMATIC, HEAT EXCHANGE, BYPASS).

5. VENTILATION ICON

The ventilation icon appears when the ventilation is adjusted with the ventilation amount button (HRV only). Simultaneously, the ventilation amount is indicated by the fan speed icon (see 22).

6. AIR CLEANING ICON

This icon indicates that the air cleaning unit (option) is operational.

7. AWAY ICON AWAY

The away icon shows the status of the away function.

ON	AWAY is ena bled
FLASHING	AWAY is activ e
OFF	AWAY is disab led

8. EXTERNAL CONTROL ICON CENTRAL CONTROL

This icon indicates that another controller with higher priority is controlling or disabling your installation.

9. CHANGE-OVER UNDER CENTRALISED CONTROL ICON WASTED

This icon indicates that the change-over of the installation is under centralised control assigned to another indoor unit or optional cool/heat selector connected to the outdoor unit (= master remote controller).

10. DAY OF THE WEEK INDICATOR MONTUE WED THUFRI SATSUN

The day of the week indicator shows the current week day (or the set day when reading or programming the schedule timer).

11.CLOCK DISPLAY 88:88

The clock display indicates the current time (or the action time when reading or programming the schedule timer).

12. MAXIMUM SET TEMPERATURE $\mathcal{B}\mathcal{B}^{\max}_{\mathfrak{F}}$

The maximum set temperature indicates the maximum set temperature when in limit operation.

13. MINIMUM SET TEMPERATURE &

The minimum set temperature indicates the minimum set temperature when in limit operation.

14. SCHEDULE TIMER ICON ①

This icon indicates that the schedule timer is enabled.

15. ACTION ICONS 1 2 3 4 5

These icons indicate the actions for each day of the schedule timer.

16.OFF ICON OFF

This icon indicates that the OFF action is selected when programming the schedule timer.

17. INSPECTION REQUIRED / and 6

These icons indicate that inspection is required. Consult your installer.

18. SET TEMPERATURE DISPLAY 28 min

This indicates the current set temperature of the installation (not shown in LIMIT operation or in FAN or DRY mode).

19. SETTING SETTING

Not used, for service purposes only.

20. AIR FLOW DIRECTION ICON

This icon indicates the air flow direction (only for installations with motorised air flow flaps).

21. NOT AVAILABLE NOT AVAILABLE AVAILABLE is displayed whenever a non-installed option is addressed or a function is not available.

22. FAN SPEED ICON L H HHFAN

This icon indicates the set fan speed.

23. DEFROST/HOTSTART MODE ICON STANDBY

This icon indicates that the defrost/hotstart mode is active.

24. AIR FILTER CLEANING TIME ICON 🖆

This icon indicates the air filter must be cleaned. Refer to the manual of the indoor unit.

25. ELEMENT CLEANING TIME ICON

This icon indicates the element must be cleaned (HRV only).

26. VENTILATION MODE BUTTON

The ventilation mode button operates the HRV; refer to the HRV manual for more details.

27. VENTILATION AMOUNT BUTTON 🔩

This button sets the ventilation amount; refer to the HRV manual for more details.

28. INSPECTION/TEST OPERATION BUTTON

Not used, for service purposes only.

29. PROGRAMMING BUTTON FUNCTION

This button is a multi-purpose button.

Depending on the previous manipulations of the user, the programming button can have various functions.

30. SCHEDULE TIMER BUTTON

This button enables or disables the schedule timer.

31. TIME ADJUST BUTTON

These buttons are used to adjust the clock or, when in programming mode, to adjust the programmed action time. Both buttons have an auto-repeat function.

32. TEMPERATURE ADJUST BUTTONS

These buttons are used to adjust the current setpoint or, when in programming mode, to adjust the programmed setpoint temperature (step = 1°F). Both buttons are also used to adjust the day of the week.

33. OPERATION CHANGE/MIN-MAX BUTTON

This button is a multi-purpose button. Depending on the previous manipulations of the user, it can have following functions:

- 1 select the operation mode of the installation (FAN, DRY, AUTOMATIC, COOLING, HEATING)
- 2 toggle between minimum temperature and maximum temperature when in limit operation

34. SETPOINT/LIMIT BUTTON

This button toggles between setpoint, limit operation or OFF (programming mode only).

35. FAN SPEED BUTTON

This button toggles between L (Low), H (High), HH (very High), AUTO (Automatic).

36. AIR FLOW DIRECTION ADJUST BUTTON

This button enables to adjust the air flow direction.

37. AIR FILTER CLEANING TIME ICON RESET BUTTON

This button is used to reset the air filter cleaning time icon.

3P166742-1

Controls for U.S.A. 177