


**DAIKIN**

DAIKIN ROOM AIR CONDITIONER  
DAIKIN 空调机

**INVERTER**

变频式空调

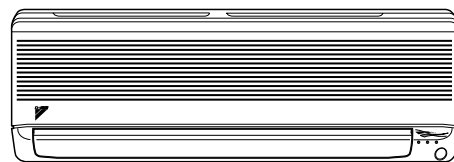

# *Operation Manual*

## 使用说明书

MODELS	FTX50HVEC8 (KFR-50G/BP)
型号	FTX60HVEC8 (KFR-60G/BP)
	FTK50HVEC8 (KF-50G/BP)
	FTK60HVEC8 (KF-60G/BP)

According to GB4706.32-1996  
符合 GB/T7725-1996

English

中文(简体)



# CONTENTS

## READ BEFORE OPERATION

---

■ Safety Precautions .....	2
■ Names of Parts	
● Indoor unit, Opening the front grille .....	4
● Outdoor unit, Remote controller .....	5
■ Preparation Before Operation	
● Remote controller .....	6
● Indoor unit .....	7

## OPERATION

---

■ Manual Operation .....	8
■ AUTO Mode Operation .....	9
■ POWERFUL Operation .....	9
■ Note for Multi System .....	9
■ Adjusting the Air Flow Direction	
● Adjusting the horizontal blade (flaf) .....	10
● Adjusting the louvre .....	10
■ Timer Operation	
● OFF TIMER operation .....	11
● ON TIMER operation .....	11

## CARE

---

■ Care and Cleaning	
● Cleaning the air filters .....	12
● Cleaning the indoor and outdoor units and the remote controller .....	12
● Replacing air purifying filters .....	12
● Cleaning the front grille .....	13
● Check .....	13
● Before a long idle period .....	13

## TROUBLE SHOOTING

---

■ Trouble Shooting	
● These cases are not troubles .....	14
● Check again .....	15
● Call the service shop immediately .....	16

# Safety Precautions

- Read the following warnings and cautions carefully before operating the system and use it correctly.
- This manual classifies the precautions to the user into two categories on the right. Be sure to follow all as they are all important to ensure safety.
- After reading this manual, keep it in a place easily accessible to the user for future reference.



## WARNING

Failure to follow a warning is very likely to result in such grave consequences as death or serious injury.



## CAUTION

Failure to follow a caution may result in serious injury or property damage, and in certain conditions, may result in a grave consequence.



## WARNING

**Do not attempt to extend the power cord by joining it to another cord, or by using an extension cord. Do not put any other loads on the power supply socket.**

Failure to follow this will cause electric shocks, abnormal heating or fire.

**Do not damage or attempt to modify the power cord. Do not use the cord in a damaged state or tied in a bundle.**

Applying a heavy weight, heat or tension on the power cord will damage it, causing electric shocks or fire.

**Do not expose your body to the cool air for a long time; do not cool the room too much.**

It will affect your physical conditions and cause health problems.

**Do not put a finger, a rod or other objects into the air outlet or inlet.**

As the fan is rotating at a high speed, it will cause injury.

**Do not attempt to repair, relocate, modify or reinstall the air conditioner by yourself.**

Incorrect work will cause electric shocks, fire etc. For repairs and reinstallation, consult the shop where you bought the air conditioner.

**If anything abnormal such as a burning smell occurs, stop the operation immediately and turn the breaker OFF.**

Continued abnormal operation will cause troubles, electric shocks, fire etc. If anything is abnormal, consult the shop where you bought the air conditioner.

**If the air conditioner is not cooling or heating properly, the refrigerant may be leaking, so see the dealer where the unit was purchased. Check with a qualified repairman before attempting any repairs, which might accompany addition of refrigerant.**

The refrigerant used in the air conditioner is safe. Although leaks should not occur, if for some reason any refrigerant happens to leak into the room, make sure it does not come in contact with any flame, such as fan heaters, kerosene heaters, or gas ranges, as this may result noxious substances being generated.



## CAUTION

**Do not use the air conditioner for preservation purposes.**

Do not use it for preserving precision instruments, foods, plants, animals, works of fine arts etc. Performance or quality may deteriorate and animal or plant life may be shorter.

**Do not operate the air conditioner with a wet hand.**

It may cause an electric shock.

**Ventilate the room from time to time.**

Be careful especially when using a burning appliance in the same room. Insufficient ventilation may cause shortage of oxygen.

**Before cleaning, be sure to stop the operation and turn the breaker OFF.**

As a fan is rotating at a high speed, cleaning during operation may cause injury.

**After a long use, check the unit stand and fittings for damage.**

The unit may drop and cause injury if damage is left unrepaired.

**Do not stand or sit on the outdoor unit. Do not place any object on the unit.**

The object or the person may fall down or drop, causing injury.

**Do not place under the indoor or outdoor unit anything which must be kept away from moisture.**

**Indoor unit:** moisture in the air may condense and drip in certain conditions.

**Outdoor unit:** during cooling operation, condensation may drip from the piping connections.

**Do not wash the unit with water.**

It may cause an electric shock.

**Do not place a burning appliance in places exposed to the air flow from the unit or under the indoor unit.**

It may cause incomplete combustion or deformation of the unit from heat.

**Do not expose plants or animals directly to the air flow.**

It may cause adverse effects on the plant or the animal.

**Do not place a vessel containing water on the unit.**

Water may penetrate into the unit and degrade electrical insulations, resulting in an electric shock.

**Do not connect the air conditioner to a power supply different from the specification.**

It may cause troubles or fire.

**Do not block air inlets nor outlets.**

Impaired air flow may result in insufficient performance or troubles.

# Installation

## WARNING

**Do not attempt to install the air conditioner by yourself.**

Consult the service shop or a qualified technician.

Incorrect work will result in water leakage, electric shocks or fire. For installation, consult the service shop where you bought the unit or a qualified technician.

## CAUTION

**The air conditioner must be earthed.**

Incomplete earthing may result in electric shocks.

Do not connect the earth line to a gas pipe, water pipe, lightning rod, or a telephone earth line.

**Depending on the environment, an earth leakage breaker must be installed.**

Lack of an earth leakage breaker may result in electric shocks.

**Do not install the air conditioner in places where flammable gas may leak.**

If leaked gas should accumulate near the unit, fire may occur.

**Arrange the drain hose to ensure smooth drainage.**


Incomplete drainage may cause wetting of the building, furniture etc.

### Installation site

■ To install the air conditioner in the following types of environments, consult the shop.

- Places with an oily ambient or where steam or soot occurs.
- Salty environment such as coastal areas.
- Places where sulfide gas occurs such as hot springs.
- Places where snow may block the outdoor unit.

The drain from the outdoor unit must be discharged to a place of good drainage.

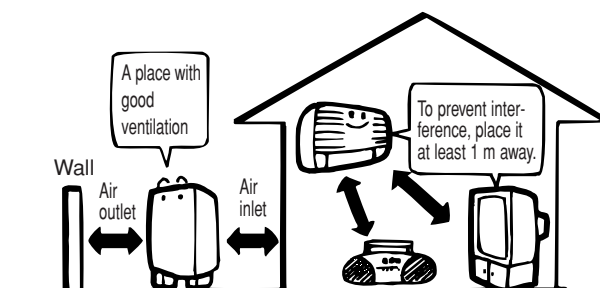

- For efficient operation, take as large spaces around the unit as site allows.

### Consider nuisance to your neighbours from noises.

■ For installation, choose a place as described below.

- A place solid enough to bear the weight of the unit which does not amplify the operation noise or vibration.
- A place from where the air discharged from the outdoor unit or the operation noise will not annoy your neighbours.

### Electrical work

- For power supply, be sure to use a separate power circuit dedicated to the air conditioner.


### System relocation

- Relocating the air conditioner requires specialized knowledge and skills. Please consult the shop where you bought the air conditioner if relocation is necessary for moving or remodeling.



# Names of Parts

## Indoor unit

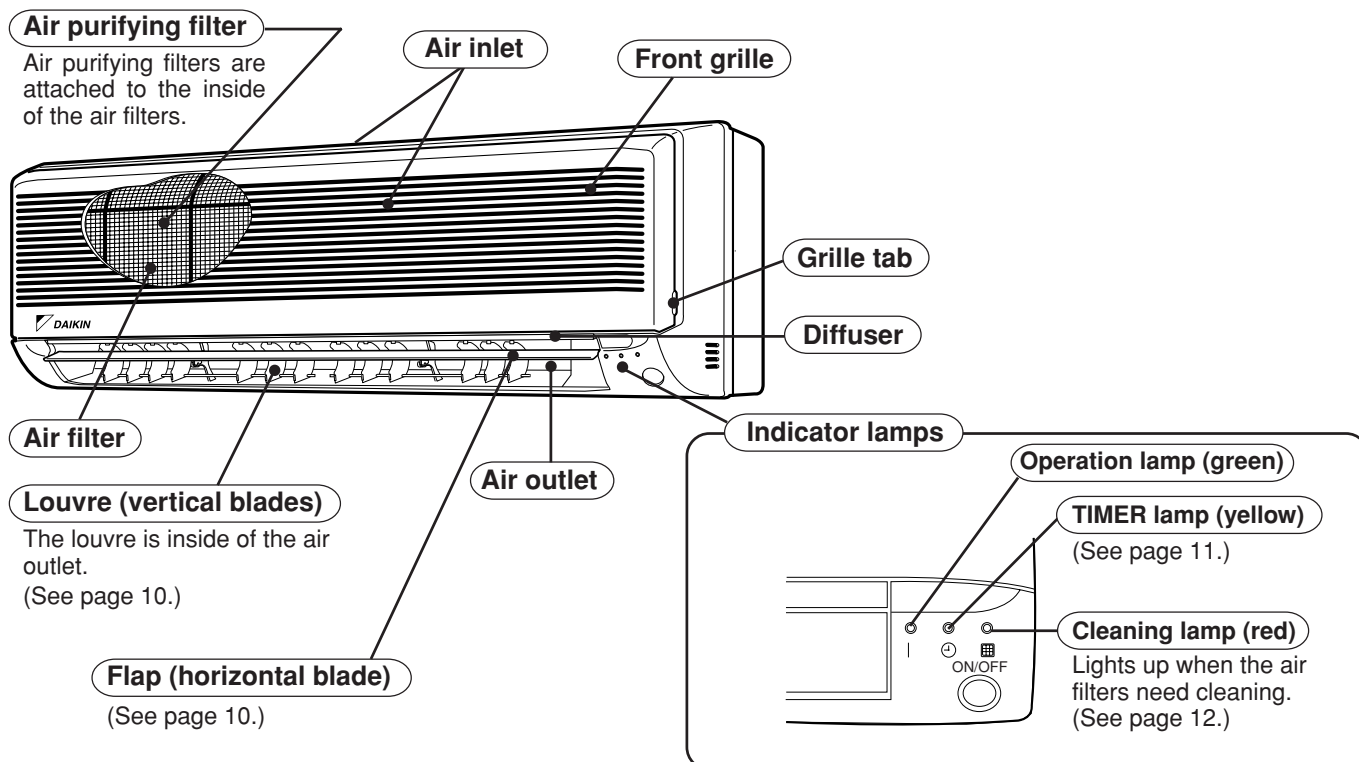


## Opening the front grille

How to open the front grille: (See page 12.)



### CAUTION

Before opening the front grille, be sure to stop the operation and turn the breaker OFF. If the power is on, the fan may rotate inside and may cause injury.

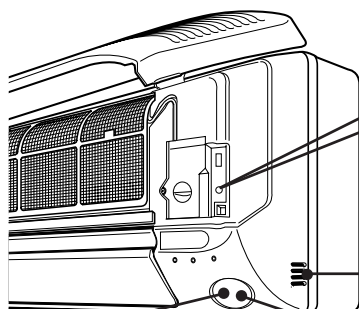

### Control panel

CLEANING  
LAMP  
RESET



### Cleaning lamp reset button

- Push this button to turn the CLEANING lamp off.

### ON/OFF button

- Push this button once to start operation. Push once again to stop it.
- This button is useful when the remote controller is missing.

• The operation mode refers to the following table.

	Mode	Temperature setting	Air flow rate
FTK	COOL	22°C	AUTO
FTX	AUTO	25°C	AUTO

- In the case of multi system operation, there are times when the unit does not activate with this button. (See page 8.)

### Room temperature sensor:


- senses the air temperature around the unit.

### Receiver:


- receives signals from the remote controller.
- When the unit receives a signal, you will hear a short beep.

# Names of Parts

## Outdoor unit

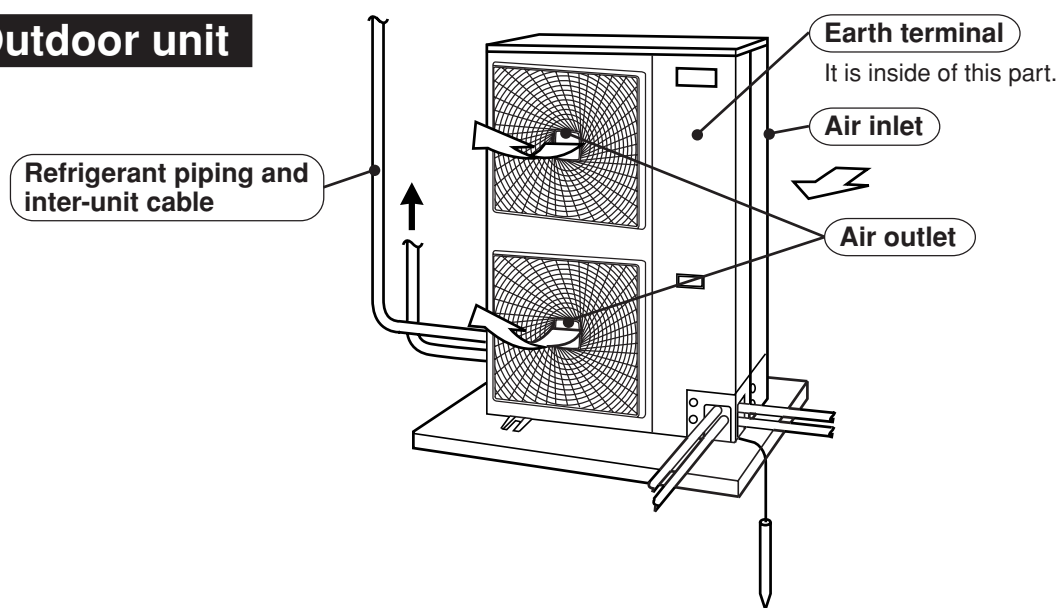


## Remote controller

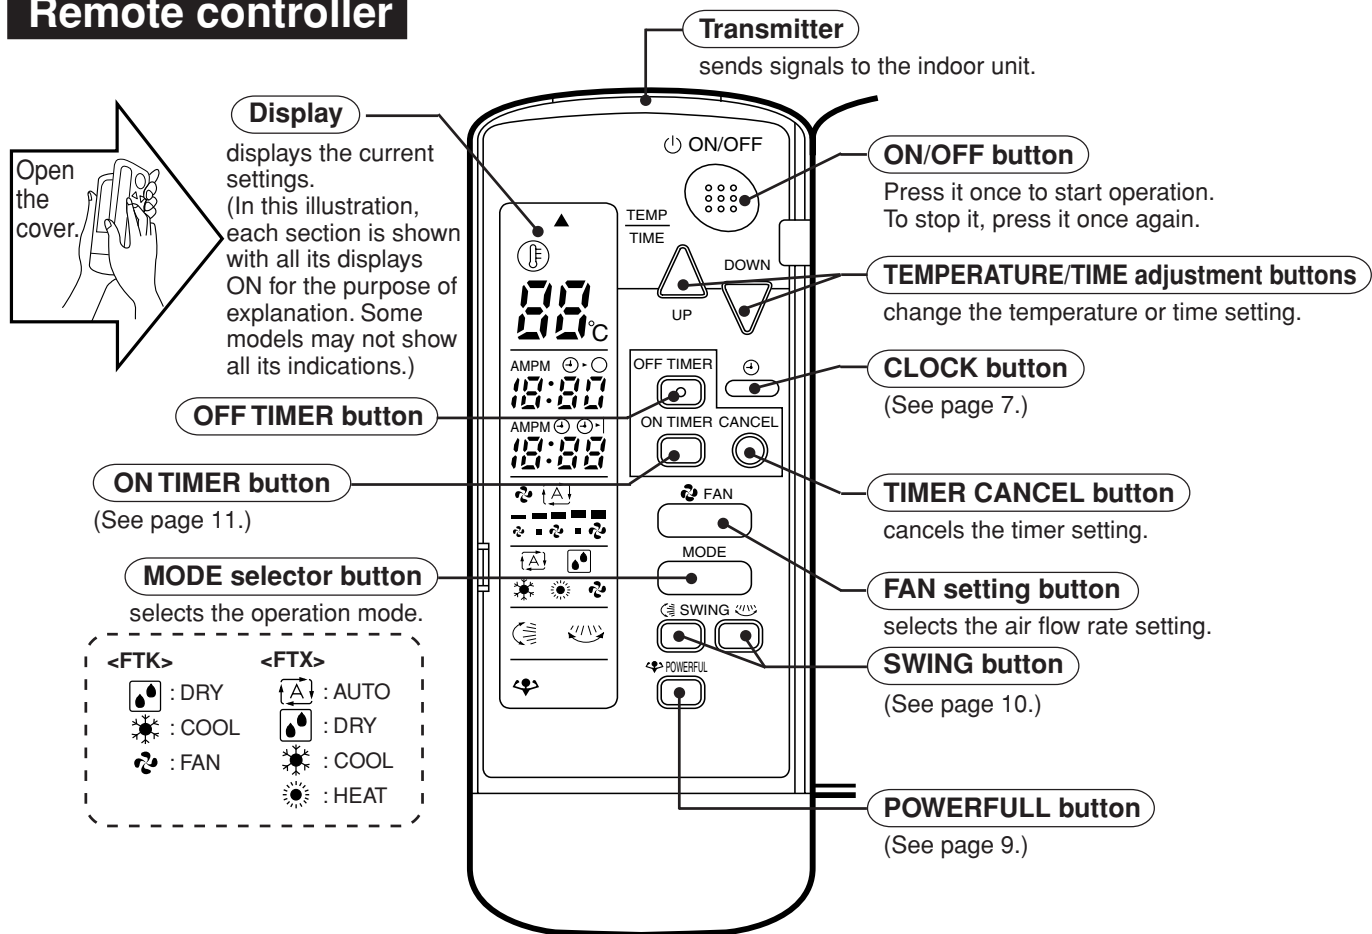


# Preparation Before Operation

## Remote controller

### ■ Setting the batteries

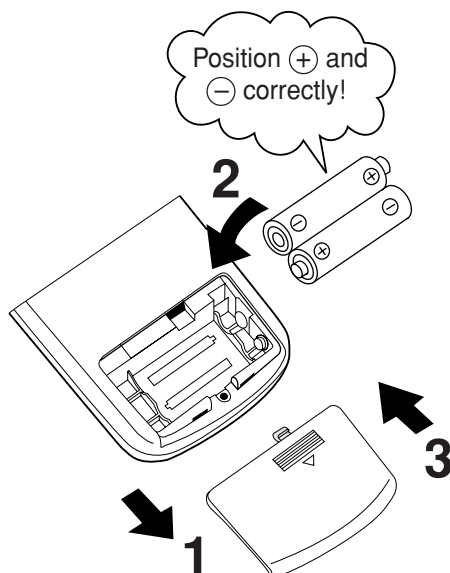

- 1** Press  with a finger and slide the back cover to take it off.
- 2** Set two alkaline dry batteries (AAA).
- 3** Set the back cover as before.
  - This will cause the figures on the display to flash. Set the clock at this point.


### ATTENTION

#### About batteries

- Always replace two batteries at the same time. Replace them with new ones of an identical type.
- Do not use manganese dry batteries since their use may cause a malfunction.
- If you are not going to use the air conditioner for a long period, take out all the batteries.
- Batteries should last for about a year under normal conditions. When you find the displays unclear and signal communication often failing, replace them with new ones.
- Batteries may be exhausted even before the recommended date of consumption printed on them, if the air conditioner was manufactured many months ago.
- Never try to recharge the batteries.


### ■ Operating the remote controller

- To use the remote controller, aim the transmitter at the indoor unit. If there is anything to block signals between the unit and the remote controller, such as a curtain, the unit will not operate.
- Do not drop the remote controller. Do not get it wet.
- The maximum distance for communication is about 7 m.

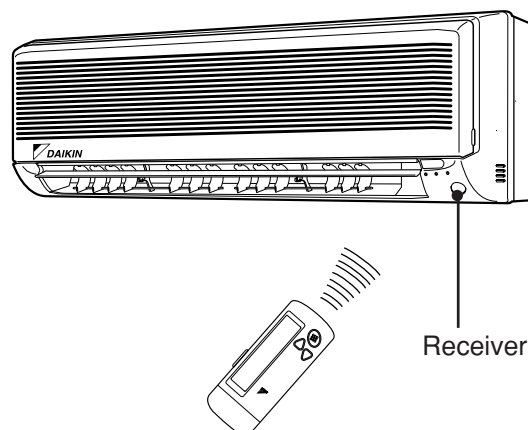

### ■ To fix the remote controller holder on the wall

- 1** Choose a place from where the signals reach the unit.
- 2** Fix the holder to a wall, a pillar, etc. with the screws supplied with the holder.
- 3** Fit the claw of the holder into the bottom of the remote controller, and push the remote controller onto the wall.

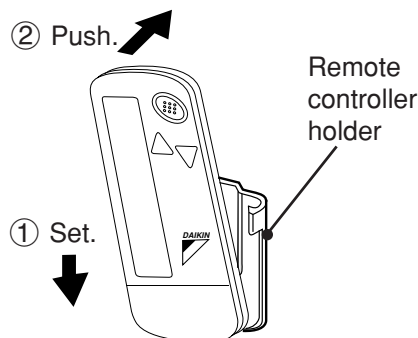

- To remove, pull it upwards.

### ATTENTION

#### About the remote controller

- Never expose the remote controller to direct sunlight.
- Dust on the signal transmitter or receiver will reduce the sensitivity. Wipe off dust with soft cloth.
- Signal communication may be disabled if an electronic-starter-type fluorescent lamp (such as inverter-type lamps) is in the room. Consult the shop if that is the case.
- If the remote control signals happen to operate another appliance, move that appliance to somewhere else, or consult the shop.


# Preparation Before Operation

## Indoor unit

### ■ Setting the air purifying filters


#### 1 Open the front grille.

- Hold the grille by the tabs on the two sides and lift it until it stops with a click. (about 60°)

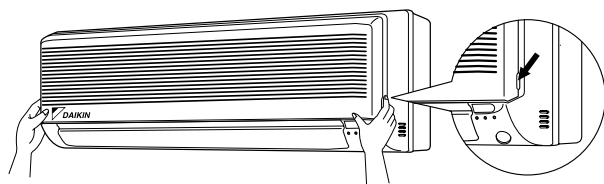

#### 2 Pull out the air filters.

- Push upwards the tab at the center of each air filter, then pull it down.

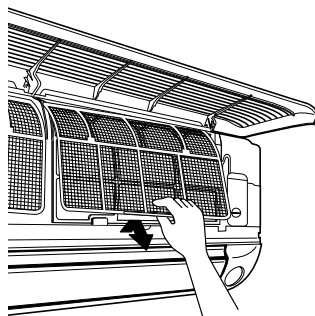

#### 3 Set the air purifying filters.


- Attach an air purifying filter to each air filter. (See page 12.)

#### 4 Set the air filters in their original positions and close the front grille.


- Operation without air filters may result in troubles as dust will accumulate inside the indoor unit.



### ■ Setting the clock
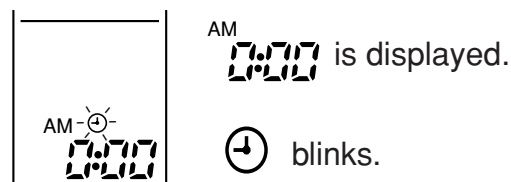
#### 1 Press .

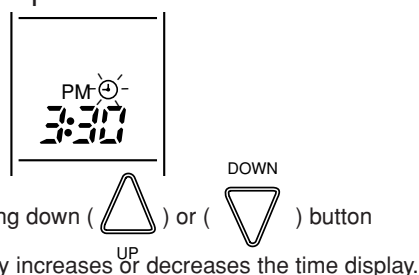


#### 2 Press to set the clock to the present time.



- Holding down (  ) or (  ) button rapidly increases or decreases the time display.

#### 3 Press .

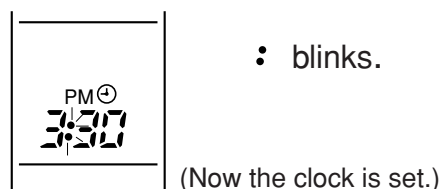

### ■ Turn the breaker ON

- Turning ON the breaker opens the flap, then closes it again. (This is a normal procedure.)

## NOTE

### Tips for saving energy

- Be careful not to cool the room too much. Keeping the temperature setting at a moderate level helps save energy.

#### Recommended temperature setting

For cooling: 26°C ~ 28°C

For heating: 20°C ~ 24°C

- Cover windows with a blind or a curtain. Blocking sunlight and air from outdoors increases the cooling effect.
- Clogged air filters cause inefficient operation and waste energy. Cleaning lamp tells you when the air filters need cleaning. Clean them once in about every two weeks.

### Please note

- The air conditioner always consumes 15 ~ 35 watts of electricity even while it is not operating.
- If you are not going to use the air conditioner for a long period, for example in spring or autumn, turn the breaker OFF.
- Use the air conditioner in the following conditions.

Mode	Operating conditions	If operation is continued out of this range:
COOL	Outdoor temperature : RMK: 5 to 46°C RMX: -5 to 46°C Indoor temperature : 18 to 32°C Indoor humidity : 80% max.	<ul style="list-style-type: none"> <li>• A safety device may work to stop the operation. (In multi system, it may work to stop the operation of the outdoor unit only.)</li> <li>• Condensation may occur on the indoor unit and drip.</li> </ul>
HEAT	Outdoor temperature : RMX: -15 to 21°C Indoor temperature : 14 to 28°C	<ul style="list-style-type: none"> <li>• A safety device may work to stop the operation.</li> </ul>
DRY	Outdoor temperature : RMK: 5 to 46°C RMX: -5 to 46°C Indoor temperature : 18 to 32°C Indoor humidity : 80% max.	<ul style="list-style-type: none"> <li>• A safety device may work to stop the operation.</li> <li>• Condensation may occur on the indoor unit and drip.</li> </ul>

 
- Operation outside this humidity or temperature range may cause a safety device to disable the system.



# Manual Operation


The air conditioner operates with the settings of your choice.

From the next time on, the air conditioner will operate with the same settings.


**1** Press  and select a mode.



 - Each pressing of the button advances the mode setting in sequence.



**2** Press .

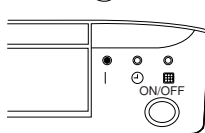




Then OPERATION lamp lights up.

## ■ To stop:

 Press  once again.


Then OPERATION lamp goes off.

## ■ To change the temperature setting:

DRY or FAN mode	HEAT or COOL mode
The temperature setting is not variable.	Press  to raise the temperature and press  to lower the temperature.
	Set to the temperature you like. 

## ■ To change the air flow rate setting:

 Press .

DRY mode	HEAT or COOL or FAN mode
The air flow rate setting is not variable.	Five levels of air flow rate setting from "1" to "5" plus "Auto" are available. 

- At smaller air flow rates, the cooling or heating effect is also smaller.

## ■ To change the air flow direction:

(See page 10.)

## NOTE

### <Note on HEAT mode operation>

Since this air conditioner heats the room by taking heat from outdoor air to indoors, the heating capacity becomes smaller in lower outdoor temperatures. If the heating effect is insufficient, it is recommended to use another heating appliance in combination with the air conditioner.

The heat pump system heats the room by circulating hot air around all parts of the room. After the start of heating operation, it takes some time before the room gets warmer.

In heating operation, frost may occur on the outdoor unit and lower the heating capacity. In that case, the system switches into defrosting operation to take away the frost. During defrosting operation, hot air does not flow out of indoor unit.

### <Note on DRY mode operation>

This operation dehumidifies the indoor air when it is humid.

## MORE FEATURE

 

### (Three step flow)


At the start heating, the human body feels uncomfortable if it is directly exposed to the air flow even if it is warm. To overcome this problem, the air conditioner is equipped with a three step flow system to provide a comfortable warm air around you.

- 1) At the start of operation, the flap is set toward the back.
- 2) When the air temperature has risen, the air starts blowing downward to warm up the floor.
- 3) When the floor and walls are warmed up, the warm air starts blowing toward the area around people.


# AUTO Mode Operation


In AUTO mode, the air conditioner automatically selects the most appropriate settings. (FTX only)

**1** Press  and select “”.

 

 - Each pressing of the button advances the mode setting in sequence.



**2** Press .



Then OPERATION lamp lights up.

## ■ To stop:


Press  once again.

Then OPERATION lamp goes off.




## ■ To change the temperature setting:


Press  to raise the temperature and press  to lower the temperature.

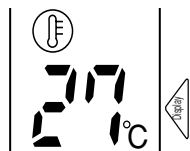Set to the temperature you like.

 

## ■ To change the air flow rate setting:

Five levels of air flow rate setting from “” to “” plus “” are available.

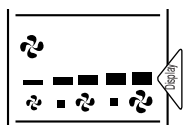

## ■ To change the air flow direction:

(See page 10.)

## NOTE

 
- In AUTO operation, the system selects a temperature setting and an appropriate mode (COOL or HEAT) based on the room temperature at the start of the operation.
- The system automatically reselects settings at a regular interval to bring the room temperature to user-setting level.
- If you do not like AUTO operation, you can select manually the mode and settings you like.

# POWERFUL Operation

POWERFUL operation quickly maximizes the cooling effect in any operation mode. You can get the maximum capacity with a touch of a button.

- Pressing the (POWERFUL) button during operation starts POWERFUL operation.
- POWERFUL operation ends in 20 minutes. Then the system automatically operates again with the settings which were used before POWERFUL operation.

**1** Press .



## ■ To cancel POWERFUL operation:

Press .

## Notes on POWERFUL operation

- In COOL and HEAT mode**  
To maximize the cooling and heating effect, the capacity of outdoor unit must be increased and the air flow rate be fixed to the maximum setting.  
The temperature and air flow settings are not variable.
- In DRY mode**  
The temperature setting is lowered by 3°C and the air flow rate is slightly increased.
- In FAN mode**  
The air flow rate is fixed to the maximum setting.

# Note for Multi System


## Precautions for outdoor unit connected to RMX 140


- In heating operation, when all indoor units are stopped, the outdoor unit stops its operation automatically after 5 minutes. This is a part of precaution process for the next operation, not a failure.
- In heating operation, no warm air may come out temporarily. This is for an oil recovery operation performed at certain time intervals, not a failure.
- In simultaneous operation at two or more rooms, when heating operation is performed at one room, cooling operation cannot be performed at other rooms, Whichever mode selected first is preferred.
- With the thermostat OFF (\*1), the fan may start/stop automatically. This is not a failure.  
(\*1) Thermostat OFF indicates the operation stand-by state of indoor units after the room temperature reached the set temperature.


# Adjusting the Air Flow Direction


 
You can adjust the air flow direction to increase your comfort.

## Adjusting the horizontal blade (flap)

Press  .


- Every time the button is pressed, “” appears or disappears.

 ..... The flap automatically swings up and down.

 ..... To stop the flap at an angle you like, press  .

### Notes on flap angles

- When [SWING] is selected, the flap swinging range depends on the operation mode. (See the figure.)
- When [SWING] is selected in heating operation, the flap and the diffuser swing up and down in combination.
- The diffuser is kept open in DRY or COOL mode.

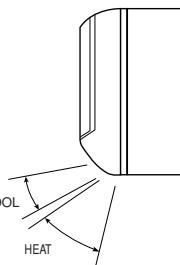


### NOTE


- Unless [SWING] is selected, you should set the flap at a downward position in HEAT mode and at a near-horizontal angle in COOL or DRY mode to obtain the best performance.
- In DRY mode, if the flap is fixed at a upward position, the flap automatically moves in about 60 minutes to prevent condensation on it.


### ATTENTION

 

- Always use a remote controller to adjust the flap angle. If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.

## Adjusting the louvre

Press  .

- Every time the button is pressed, “” appears or disappears.

 ..... The louvre automatically swings right and left.

 ..... To stop the louvre at an angle you like, press  .

### ATTENTION


- Always use a remote controller to adjust the louvre angle. If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.

 
# Timer Operation



Timer functions are useful for automatically switching the air conditioner on or off at night or in the morning. You can also use OFF TIMER and ON TIMER in combination.

## OFF TIMER operation



- Check that the clock is correct.  
If not, set the clock to the present time. (See page 7.)

**1** Press  while the air conditioner is operating.




**2** Press   until the time setting reaches the point you like.

- Every pressing of either button increases or decreases the time setting by ten minutes. Holding down either button changes the setting rapidly.

**3** Press  once again.  Then the TIMER lamp lights up.

## ■ To cancel the timer:


Press  . Then the TIMER lamp goes off.


### Notes on OFF TIMER

- When the OFF TIMER is set, the air conditioner automatically adjusts the temperature setting (0.5°C up in COOL, 2.0°C down in HEAT) to prevent excessive cooling for your pleasant sleep.

## ON TIMER operation

- Check that the clock is correct. If not, set the clock to the present time (See page 7).


**1** Press  while the air conditioner is not operating.

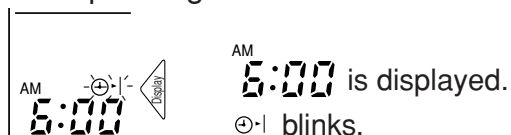

**2** Press   until the time setting reaches the point you like.


- Every pressing of either button increases or decreases the time setting by ten minutes. Holding down either button changes the setting rapidly.

**3** Press  once again.

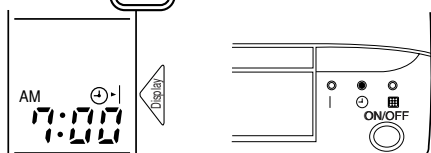

Then the TIMER lamp lights up.

## ■ To cancel the timer:

Press  .

Then the TIMER lamp goes off.


## Combining ON TIMER and OFF TIMER

- A sample setting for combining the two timers is shown below.

(Example)

Present time: 11:00 PM  
(The unit operating)  
OFF TIMER at 0:00 a.m.  
ON TIMER at 7:00 a.m.

Combined

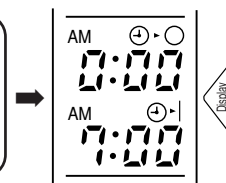

## Notes on ON,OFF TIMER

- When TIMER is set, the present time is not displayed.
- Once you set ON,OFF TIMER, the time setting is kept in the memory. (The memory is canceled when remote controller batteries are replaced.)
- When operating the unit via the ON/OFF Timer, the actual length of operation may vary from the time entered by the user. (Maximum approx. 10 minutes.)

## ATTENTION

■ In the following cases, set the timer again.

- After a breaker has turned OFF.
- After a power failure.
- After replacing batteries in the remote controller.

# Care and Cleaning




## CAUTION

Before cleaning, be sure to stop the operation and turn the breaker OFF.

## Cleaning the air filters


(It is recommended to clean them every two weeks.)

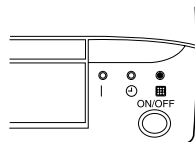

- Clean the air filters, when cleaning lamp lights up.


### 1 Open the front grille.

- Hold the grille by the tabs on the two sides and lift it until it stops with a click. (about 60°)

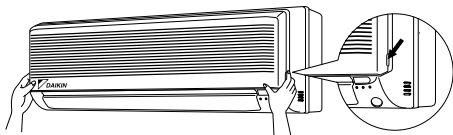


### 2 Push cleaning lamp reset button.

 (See page 4.)




### 3 Pull out the air filters.

- Push a little upwards the tab at the center of each air filter, then pull it down.

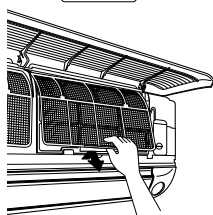


### 4 Take off the air purifying filters and clean them.

- Wash them with water, or clean them with a vacuum cleaner.
- If the dust does not come off easily, wash them with neutral detergent thinned with lukewarm water, then dry them up in the shade.

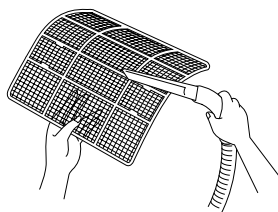

### 5 Set the air purifying filters and the air filters as they were and close the front grille.

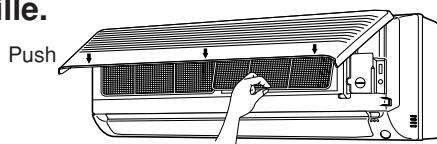

- Insert claws of the filters into slots of the front panel. The front grille should lock at both sides and at the point in the middle. Push the grille at the 3 points indicated by ↓.

## NOTE

- In a dusty environment, clean the air filters at least once in every two weeks even before the cleaning lamp lights up.
- Operation with dusty air filters lowers the cooling and heating capacity and wastes energy.

## Cleaning the indoor and outdoor units and the remote controller


- Wipe them with dry soft cloth.  
For cleaning, do not use water hotter than 40°C, benzene, gasoline, thinner, nor other volatile oils, polishing compound, scrubbing brushes nor other hard stuff.

## Replacing air purifying filters


(It is recommended to replace them every three months.)

- Air purifying filters need to be replaced regularly.

### 1 Open the front grille and pull out the air filters.

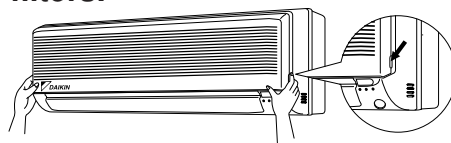


### 2 Take off the air purifying filters.

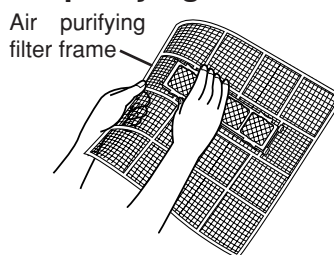


- Hold the recessed parts of the frame and unhook the four claws.

### 3 Detach the filter element and attach a new one.

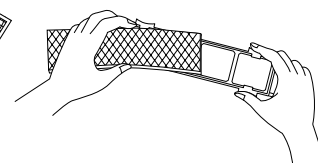

### 4 Attach the air purifying filter.

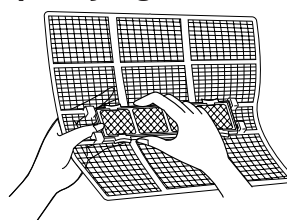

### 5 Set the air filters as they were and close the front grille.

(Push the grille at the 3 points, two at both sides and in the middle.)

## NOTE

- To order air purifying filters, contact the service shop where you bought the air conditioner.
- Once the air purifying filter element gets dirty, it is not reusable but must be thrown away.
- Operation with dirty air purifying filters:
  - cannot clean the air.
  - results in poor cooling.
  - may cause odour.

Item	Part No.
Air purifying filter (with frame)	KAF918A41
Air purifying filter (without frame)	KAF918A42



# Care and Cleaning

## Cleaning the front grille

You may remove the front grille for cleaning.




### CAUTION

- When removing or attaching the front grille, use a robust and stable stool and watch your steps carefully.
- When removing or attaching the front grille, support the grille securely with hand to prevent it from falling.
- For cleaning, do not use water hotter than 40°C, benzine, gasoline, thinner, nor other volatile oils, polishing compound, scrubbing brushes nor other hard stuff.
- After cleaning, make sure that the front grille is securely fixed.


## 1 Open the front grille.

- Hold the grille by the tabs on the two sides and lift it until it stops with a click.

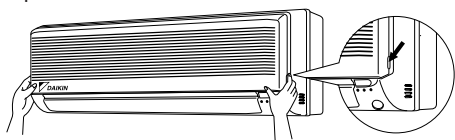

## 2 Remove the front grille.

- Supporting the front grille with one hand, release the lock by sliding down the knob with the other hand.
- To remove the grille, pull it toward yourself with both hands.

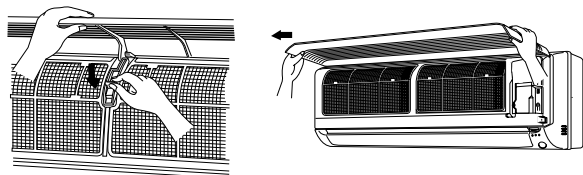


## 3 Clean the front grille.

- You may wipe it with a soft cloth soaked in water.
- Only neutral detergent may be used.
- You may wash the grille with water. After washing, dry it with cloth, then dry it up in the shade.

## 4 Attach the front grille.

- Set the 3 keys of the front grille into the slots and push them in all the way.
- Supporting the front grille with one hand, fit the lock by sliding up the knob with the other hand.
- Close the front grille slowly in this state. (Push the grille at the 3 points, two at both sides and in the middle.)

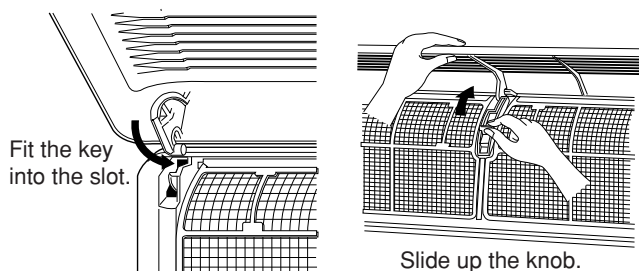

## Check

Check that the base, stand and other fittings of the outdoor unit are not decayed or corroded.

Check that nothing blocks the air inlets and the outlets of the indoor unit and the outdoor unit.

Check that the earth wire is not disconnected or broken.

Check that the drain comes smoothly out of the drain hose during COOL or DRY operation.

- If no drain water is seen, water may be leaking from the indoor unit. Stop operation and consult the service shop if this is the case.

## Before a long idle period

- 1 Operate the fan alone for several hours on a fine day to dry out the inside.

<FTK>

1 Press **MODE** and select "🌀".

2 Press **ON/OFF**.

<FTX>

1 Press **MODE** and select "❄️".

2 Press **UP** and set the temperature to 32°C.

3 Press **ON/OFF**.

- The air flow rate is fixed regardless of the setting.
- Perform this operation when the room temperature is under 28°C.

- 2 Clean the air filters and set them again.
- 3 Take out batteries from the remote controller.
- 4 Turn OFF the breaker for the room air conditioner.

# Trouble Shooting

## ● These cases are not troubles.

The following cases are not air conditioner troubles but have some reasons. You may just continue using it.

Case	Explanation
<b>Operation does not start soon.</b> <ul style="list-style-type: none"> <li>● When ON/OFF button was pressed soon after operation was stopped.</li> <li>● When the mode was re-selected.</li> </ul>	<ul style="list-style-type: none"> <li>● This is to protect the air conditioner. You should wait for about 3 minutes.</li> </ul>
<b>Hot air does not flow out soon after the start of heating operation.</b>	<ul style="list-style-type: none"> <li>● The air conditioner is warming up. You should wait for 1 to 4 minutes. (The system is designed to start discharging air only after it has reached a certain temperature.)</li> </ul>
<b>The heating operation stops suddenly and a flowing sound is heard.</b>	<ul style="list-style-type: none"> <li>● The system is taking away the frost on the outdoor unit. You should wait for about 3 to 8 minutes.</li> </ul>
<b>The outdoor unit emits water or steam.</b>	<ul style="list-style-type: none"> <li>■ In HEAT mode <ul style="list-style-type: none"> <li>• The frost on the outdoor unit melts into water or steam when the air conditioner is in defrost operation.</li> </ul> </li> <li>■ In COOL or DRY mode <ul style="list-style-type: none"> <li>• Moisture in the air condenses into water on the cool surface of outdoor unit piping and drips.</li> </ul> </li> </ul>
<b>Mists come out of the indoor unit.</b>	<ul style="list-style-type: none"> <li>■ This happens when the air in the room is cooled into mist by the cold air flow during cooling operation.</li> </ul>
<b>The indoor unit gives out odour.</b>	<ul style="list-style-type: none"> <li>■ This happens when smells of the room, furniture, or cigarettes are absorbed into the unit and discharged with the air flow. (If this happens, we recommend you to have the indoor unit washed by a technician. Consult the service shop where you bought the air conditioner.)</li> </ul>
<b>The outdoor fan rotates while the air conditioner is not in operation.</b>	<ul style="list-style-type: none"> <li>■ After operation is stopped: <ul style="list-style-type: none"> <li>• The outdoor fan continues rotating for another 30 seconds for system protection.</li> </ul> </li> <li>■ While the air conditioner is not in operation: <ul style="list-style-type: none"> <li>• When the outdoor temperature is very high, the outdoor fan starts rotating for system protection.</li> </ul> </li> </ul>
<b>The operation stopped suddenly. (OPERATION lamp is on)</b>	<ul style="list-style-type: none"> <li>■ For system protection, the air conditioner may stop operating on a sudden large voltage fluctuation. It automatically resumes operation in about 3 minutes.</li> </ul>

# Trouble Shooting

## ● Check again

Please check again before calling a repair person.

Case	Check
<b>The air conditioner does not operate. (OPERATION lamp is off)</b>	<ul style="list-style-type: none"> <li>● Hasn't a breaker turned OFF or a fuse blown?</li> <li>● Isn't it a power failure?</li> <li>● Are batteries set in the remote controller?</li> <li>● Is the timer setting correct?</li> </ul>
<b>Cooling or Heating effect is poor.</b>	<ul style="list-style-type: none"> <li>● Are the air filters clean?</li> <li>● Is there anything to block the air inlet or the outlet of the indoor and the outdoor units?</li> <li>● Is the temperature setting appropriate?</li> <li>● Are the windows and doors closed?</li> <li>● Are the air flow rate and the air direction set appropriately?</li> </ul>
<b>Operation stops suddenly. (OPERATION lamp blinks.)</b>	<ul style="list-style-type: none"> <li>● Are the air filters clean?</li> <li>● Is there anything to block the air inlet or the outlet of the indoor and the outdoor units? Clean the air filters or take all obstacles away and turn the breaker OFF. Then turn it ON again and try operating the air conditioner with the remote controller. If the lamp still blinks, call the service shop where you bought the air conditioner.</li> <li>● Are operation modes all the same for indoor units connected to outdoor units in the <b>multi system</b>? If not, set all indoor units to the same operation mode and confirm that the lamps blink. Moreover, when the operation mode is in "AUTO", set all indoor unit operation modes to "COOL" or "HEAT" for a moment and check again that the lamps are normal. If the lamps stop blinking after the above steps, there is no malfunction. (See page 8. )</li> </ul>
<b>An abnormal functioning happens during operation.</b>	<ul style="list-style-type: none"> <li>● The air conditioner may malfunction with lightening or radio waves. Turn the breaker OFF, turn it ON again and try operating the air conditioner with the remote controller.</li> </ul>

# Trouble Shooting

- Call the service shop immediately.



## WARNING

- When an abnormality (such as a burning smell) occurs, stop operation and turn the breaker OFF.  
Continued operation in an abnormal condition may result in troubles, electric shocks or fire.  
Consult the service shop where you bought the air conditioner.
- Do not attempt to repair or modify the air conditioner by yourself.  
Incorrect work may result in electric shocks or fire.  
Consult the service shop where you bought the air conditioner.

If one of the following symptoms takes place, call the service shop immediately.

- The power cord is abnormally hot or damaged.
- An abnormal sound is heard during operation.
- The safety breaker, a fuse, or the earth leakage breaker cuts off the operation frequently.
- A switch or a button often fails to work properly.
- There is a burning smell.
- Water leaks from the indoor unit.

Turn the breaker OFF and call the service shop.

### ■ After a power failure

The air conditioner automatically resumes operation in about three minutes.  
You should just wait for a while.

### ■ Lightning

If lightning may strike the neighbouring area, stop operation and turn the breaker OFF for system protection.

## We recommend periodical maintenance

In certain operating conditions, the inside of the air conditioner may get foul after several seasons of use, resulting in poor performance. It is recommended to have periodical maintenance by a specialist aside from regular cleaning by the user. For specialist maintenance, contact the service shop where you bought the air conditioner.

The maintenance cost must be born by the user.

**DAIKIN INDUSTRIES, LTD.**

Head office:

Umeda Center Bldg., 4-12, Nakazaki-Nishi 2-chome,  
Kita-ku, Osaka, 530-8323 Japan

Tokyo office:

JR Shinagawa East Bldg., 18-1, Konan  
2-chome, Minato-ku, Tokyo, 108-0075 Japan  
<http://www.daikin.com/global/>**大金工业株式会社**

总公司

日本大阪府大阪市北区中崎西二丁目4番12号  
梅田中心大厦 邮政编码 530-8323

东京分公司

日本东京都港区港南二丁目18番1号  
JR品川东大厦 邮政编码108-0075