

*Airwell*

# Service Manual

**YBZE218-324-430**

---

Indoor Units	Outdoor Units
AWSI-HZDE009-H11	AWAU-YBZE218-H11
AWSI-HZDE012-H11	AWAU-YBZE324-H11
AWSI-HZDE018-H11	AWAU-YBZE430-H11



---

REFRIGERANT

R410A

HEAT PUMP

SM YBZE H11 1-A.1 GB

May -2013

Version:1

---

**LIST OF EFFECTIVE PAGES**

**Note:** Changes in the pages are indicated by “Revision #” in the footer of each effected page (when none indicates any changes in the relevant page). All pages in the following list represent effected/ non effected pages divided by chapters.

Dates of issue for original and changed pages are:

Original ..... 01..... 31-May,2013

Total number of pages in this publication is **68** consisting of the following:

Page No.	Revision No. #	Page No.	Revision No. #	Page No.	Revision No. #
----------	----------------	----------	----------------	----------	----------------

\* Zero in this column indicates an original page.

---

## Table of Contents

1.	INTRODUCTION.....	1-1
2.	PRODUCT DATA SHEET.....	2-1
3.	RATING CONDITIONS.....	3-1
4.	OUTLINE DIMENSION.....	4-1
5.	PERFORMANCE DATA.....	5-1
6.	PRESSURE CURVES.....	6-1
7.	SOUND LEVEL CHARACTERISTICS.....	7-1
8.	ELECTRICAL DATA.....	8-1
9.	WIRING DIAGRAM.....	9-1
10.	REFRIGERATION DIAGRAMS.....	10-1
11.	TUBING CONNECTIONS.....	11-1
12.	CONTROL SYSTEM.....	12-1
13.	TROUBLESHOOTING.....	13-1
14.	CHARACTERISTICS OF SENSOR.....	14-1
15.	EXPLODED VIEW & SPARE PART LIST.....	15-1



## 1. INTRODUCTION

### 1.1 General

The YBZE DC inverter multisplits outdoor is a multi-tubing system with 2, 3 or 4 connected indoor units. The multi-split inverter is a high level technology product for residential and commercial application offering comfort, low noise operation and energy saves.

Indoor HZDE series is high-wall mounted type indoor which are mainly designed for residential buildings.

The indoor has 3 models 09/12/18 in cooling capacity.

### 1.2 Main Features

The unit benefits from the most advanced technological innovations, namely:

- DC inverter technology.
- R410A models
- Microprocessor control and indoor LED display
- High COP, Energy efficiency class A in cooling/heating mode
- Max allowing total tubing distance of 70m(for model 24,30)
- Up to 10 m vertical high between indoor and outdoor units
- Easy installation and service.
- Sleep mode from remote control to save energy
- ON/OFF timer and clock display
- Vertical auto swing with motorized flap (any position stop)
- Intelligent Deicing
- Memory from power failure
- Rapid cooling/heating
- I-Feel function
- Cold air prevention in heating
- Clean function (Blow dry)
- Self diagnostic (Error indications) for ease of maintenance

### 1.3 Indoor Unit

The indoor unit is wall mounted, and can be easily fitted to many types of residential locations. It includes:

- LED display
- Variable speed with PG motor
- Motorized flap
- High efficiency filtration to ensure a best Air Quality: Advanced filtering combine mechanical, Photo-catalytic + Bi-anti bacterial and observe bad gaseous and smokes.

### 1.4 Control

The microprocessor indoor controller, and an infrared remote control, supplied as standard, provides complete operating function and programming.

Remote control RC 8A:

Compact and economically design, it offers excellent user comfort. Combining modern design with high technology, the RC8 remote control offers powerful functions of real considering of user comfort and energy saving of air-conditioner.

For detail of functions, please refer to Appendix 1

## 1.5 Outdoor Unit

The outdoor units can be installed as floor or wall mounted units by using a wall supporting bracket. The metal sheets are protected by anti- corrosion paint work allowing long life resistance. All outdoor units are pre-charged. For further information please refer to the Product Data Sheet, Chapter 2.

It includes:

- Compressor mounted in a soundproofed compartment :
- Axial fan.
- Outdoor coil with hydrophilic louver fins for RC units.
- Outlet air fan grill.
- Interconnecting wiring terminal block.
- Electric expansion valves to control the refrigerant to each indoor.







## 1.6 Tubing Connections

Flare type interconnecting tubing to be produced on site.  
For further details please refer to the Installation Manual.

## 1.7 Inbox Documentation

Each unit is supplied with its own installation, operation and remote control manuals.

### 1.8 Matching Table

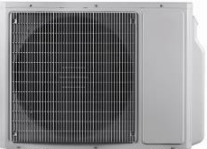OUTDOOR UNITS	INDOOR UNITS		
	AWSI-HZDE009-H11	AWSI-HZDE012-H11	AWSI-HZDE018-H11
			
 AWAU-YBZE218-H11	X	X	
 AWAU-YB324-H11	X	X	X
 AWAU-YBZ430-H11	X	X	X

### 1.9 Indoor unit combination

AWAU-YBZE218-H11		
1 unit	2 units	
9	9+9	9+12
12	12+12	

AWAU-YBZE324-H11				
2 units		3 units		
9+9	9+12	9+9+9	9+9+12	9+9+18
9+18	12+12	9+12+12	12+12+12	9+12+18
12+18		12+12+18		

AWAU-YBZE430-H11							
2 units		3 units			4 units		
9+9	9+12	9+9+9	9+9+12	9+9+18	9+9+9+9	9+9+9+12	9+9+9+18
9+18	12+12	9+12+12	12+12+12	9+12+18	9+9+12+12	9+12+12+12	9+9+12+18
12+18		12+12+18			12+12+12+12		



## 2. PRODUCT DATA SHEET

Model Outdoor Unit		AWAU-YBZE218-H11		
Installation Method of Pipe		Flared		
Characteristics		Units	Cooling	
			Heating Average	
Capacity <sup>(1)</sup>		kW	5,0(2,05-6,2)	
Pdesign		kW	5,0	
SEER / SCOP <sup>(2)</sup>		W/W	5,6	
Energy efficiency class			A+	
Annual energy consumption		kWh	313	
Tbiv		°C	N/A	
Tol		°C	N/A	
Power supply		V/Ph/Hz	220-240V/Single/50Hz	
Circuit breaker rating		A	25	
Rated power input (Maximum power input)		kW	2,70	
Rated current (Maximum current)		A	12,0	
OUTDOOR	Refrigerant control		EEV	
	Compressor type, model		Rotary DC Inverter	
	Fan type & quantity		Axial x 1	
	Fan speeds	H/L	RPM	710
	Air flow	H/L	m3/hr	3200
	Sound power level <sup>(4)</sup>	H/L	dB(A)	63
	Sound pressure level <sup>(5)</sup>	H/L	dB(A)	53
	Dimensions	WxHxD	mm	963X700X396
	Weight		kg	50
	Package dimensions	WxHxD	mm	1029X750 X458
	Packaged weight		kg	55
	Units per pallet		Units	6 units per pallet
	Stacking height		units	2 levels
	Refrigerant type			R410A
	Refrigerant charge (standard connecting tubing length)		kg(10m)	2.0
	Additional charge per 1 meter		gr / 1m	10m<L<20m 15g/m
	Connections between units	Liquid line	In.(mm)	1/4"(6.35)
Suction line		In.(mm)	3/8"(9.53)	
Max.tubing length		m.	Max.10m for one unit and 20m for total	
Max.height difference		m.	Max.10	
Operation control type			Remote control	
Heating elements		kW		
Others				

(1) Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units).

(2) SEER / SCOP calculation accordance with EN14825.

Model Outdoor Unit		AWAU-YBZE324-H11		
Installation Method of Pipe		Flared		
Characteristics		Units	Cooling	
			Heating Average	
Capacity <sup>(1)</sup>		kW	7,1(2,2-10)	
Pdesign		kW	7,1	
SEER / SCOP <sup>(2)</sup>		W/W	5,1	
Energy efficiency class			A	
Annual energy consumption		kWh	487	
Tbiv		°C	N/A	
Tol		°C	N/A	
Power supply		V/Ph/Hz	220-240V/Single/50Hz	
Circuit breaker rating		A	32	
Rated power input (Maximum power input)		kW	4,55	
Rated current (Maximum current)		A	20,2	
OUTDOOR	Refrigerant control		EEV	
	Compressor type, model		Rotary DC Inverter	
	Fan type & quantity		Axial x 1	
	Fan speeds	H/L RPM	710	
	Air flow	H/L m3/hr	4000	
	Sound power level <sup>(4)</sup>	H/L dB(A)	68	
	Sound pressure level <sup>(5)</sup>	H/L dB(A)	58	
	Dimensions	WxHxD mm	1001X790X427	
	Weight	kg	64	
	Package dimensions	WxHxD mm	1083X855X488	
	Packaged weight	kg	70	
	Units per pallet	Units	6 units per pallet	
	Stacking height	units	2 levels	
	Refrigerant type		R410A	
	Refrigerant charge (standard connecting tubing length)		kg(15m)	2.2
	Additional charge per 1 meter		gr / 1m	15m<L<60m 15g/m
Connections between units	Liquid line	In.(mm)	1/4"(6.35)	
	Suction line	In.(mm)	3/8"(9.53)	
	Max.tubing length	m.	Max.20m for one unit and 60m for total	
	Max.height difference	m.	Max.10	
Operation control type			Remote control	
Heating elements		kW		
Others				

(1) Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units).

(2) SEER / SCOP calculation accordance with EN14825.

Model Outdoor Unit		AWAU-YBZE430-H11		
Installation Method of Pipe		Flared		
<b>Characteristics</b>		<b>Units</b>	<b>Cooling</b>	
			<b>Heating Average</b>	
Capacity <sup>(1)</sup>	kW	8,0 (2,2-10,0)	9,3(2,8-11,0)	
Pdesign	kW	8,0	7,0	
SEER / SCOP <sup>(2)</sup>	W/W	5,1	3,8	
Energy efficiency class		A	A	
Annual energy consumption	kWh	549	2579	
Tbiv	°C	N/A	-7	
Tol	°C	N/A	-15	
Power supply	V/Ph/Hz	220-240V/Single/50Hz		
Circuit breaker rating	A	32		
Rated power input (Maximum power input)	kW	4,55		
Rated current (Maximum current)	A	20,2		
OUTDOOR	Refrigerant control		EEV	
	Compressor type, model		Rotary DC Inverter	
	Fan type & quantity		Axial x 1	
	Fan speeds	H/L RPM	710	
	Air flow	H/L m3/hr	4000	
	Sound power level <sup>(4)</sup>	H/L dB(A)	68	
	Sound pressure level <sup>(5)</sup>	H/L dB(A)	58	
	Dimensions	WxHxD mm	1001X790X427	
	Weight	kg	64	
	Package dimensions	WxHxD mm	1083X855X488	
	Packaged weight	kg	70	
	Units per pallet	Units	6 units per pallet	
	Stacking height	units	2 levels	
	Refrigerant type		R410A	
	Refrigerant charge (standard connecting tubing length)		kg(20m) 2.2	
	Additional charge per 1 meter		gr / 1m 20m<L<70m 15g/m	
	Connections between units	Liquid line	ln.(mm)	1/4"(6.35)
		Suction line	ln.(mm)	3/8"(9.53)
Max.tubing length		m.	Max.20m for one unit and 70m for total	
Max.height difference		m.	Max.10	
Operation control type		Remote control		
Heating elements		kW		
Others				

(1) Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units).

(2) SEER / SCOP calculation accordance with EN14825.

Model Indoor Unit				<b>AWSI-HZDE009-N11</b>		
Installation Method of Pipe				Flared		
<b>Characteristics</b>			<b>Units</b>	<b>Cooling</b>	<b>Heating</b>	
Capacity (4)			kW	2,6	2,8	
Power supply			V	220-240		
			Ph	1		
			Hz	50		
INDOOR	Fan type & quantity				Crossflow x 1	
	Fan speeds	Cooling	SH/H/M/L	RPM	1350/1100/900/700	
		Heating	SH/H/M/L	RPM	1350/1140/980/820	
	Air flow (1)		SH/H/M/L	m3/hr	600/520/370/280	
	External static pressure		Min	Pa	0	
	Sound power level (2)		SH/H/M/L	dB(A)	56/53/45/39	
	Sound pressure level(3)		SH/H/M/L	dB(A)	41/38/30/24	
	Moisture removal			l/hr	0,8	
	Condensate drain tube I.D			mm	16	
	Dimensions		WxHxD	mm	770x283x201	
	Net Weight			kg	8	
	Package dimensions		WxHxD	mm	855x360x280	
	Packaged weight			kg	10	
Operation control type					Remote control	

Model Indoor Unit				<b>AWSI-HZDE012-N11</b>		
Installation Method of Pipe				Flared		
<b>Characteristics</b>			<b>Units</b>	<b>Cooling</b>	<b>Heating</b>	
Capacity (4)			kW	3,5	3,8	
Power supply			V	220-240		
			Ph	1		
			Hz	50		
INDOOR	Fan type & quantity				Crossflow x 1	
	Fan speeds	Cooling	SH/H/M/L	RPM	1350/1100/950/800	
		Heating	SH/H/M/L	RPM	1350/1190/1020/850	
	Air flow (1)		SH/H/M/L	m3/hr	680/560/410/300	
	External static pressure		Min	Pa	0	
	Sound power level (2)		SH/H/M/L	dB(A)	57/54/46/40	
	Sound pressure level(3)		SH/H/M/L	dB(A)	42/39/31/25	
	Moisture removal			l/hr	1,4	
	Condensate drain tube I.D			mm	16	
	Dimensions		WxHxD	mm	770x283x201	
	Net Weight			kg	9	
	Package dimensions		WxHxD	mm	855x360x280	
	Packaged weight			kg	11	
Operation control type					Remote control	

Model Indoor Unit				<b>AWSI-HZDE018-N11</b>		
Installation Method of Pipe				Flared		
<b>Characteristics</b>			<b>Units</b>	<b>Cooling</b>	<b>Heating</b>	
Capacity (4)			kW	5,3	5,8	
Power supply			V	220-240		
			Ph	1		
			Hz	50		
<b>INDOOR</b>	Fan type & quantity			Crossflow x 1		
	Fan speeds	Cooling	SH/H/M/L	RPM	1350/1100/950/800	
		Heating	SH/H/M/L	RPM	1400/1200/1050/900	
	Air flow (1)		SH/H/M/L	m3/hr	800/680/560/460	
	External static pressure		Min	Pa	0	
	Sound power level (2)		SH/H/M/L	dB(A)	60/55/52/47	
	Sound pressure level(3)		SH/H/M/L	dB(A)	45/40/37/32	
	Moisture removal			l/hr	1,8	
	Condensate drain tube I.D			mm	16	
	Dimensions		WxHxD	mm	865x305x215	
	Net Weight			kg	12	
	Package dimensions		WxHxD	mm	948X383X310	
Packaged weight			kg	15		
Operation control type				Remote control		

- (1)Airflow in ducted units; at nominal external static pressure.
- (2)Sound power in ducted units is measured at air discharge.
- (3)Sound pressure level measured at 1-meter distance from unit.
- (4)Rating conditions in accordance to ISO 5151 and ISO 13253 (for ducted units).



### 3. RATING CONDITIONS

Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units).

**Cooling:**

Indoor: 27°C DB 19°C WB

Outdoor: 35°C DB

**Heating:**

Indoor: 20°C DB

Outdoor: 7°C DB 6°C WB

### Operating Limits

R410A




		Indoor	Outdoor
<b>Cooling</b>	Upper limit	32°C DB 23°C WB	48°C DB
	Lower limit	21°C DB 15°C WB	-15°C DB
<b>Heating</b>	Upper limit	27°C DB	24°C DB 18°C WB
	Lower limit	10°C DB	-15°C DB RH80%
<b>Voltage</b>		1-PH 50Hz 195 – 265 V	






## 4. OUTLINE DIMENSION

### 4.1 Indoor: AWSI-HZDE009-N11, AWSI-HZDE012-N11, AWSI-HZDE018-N11

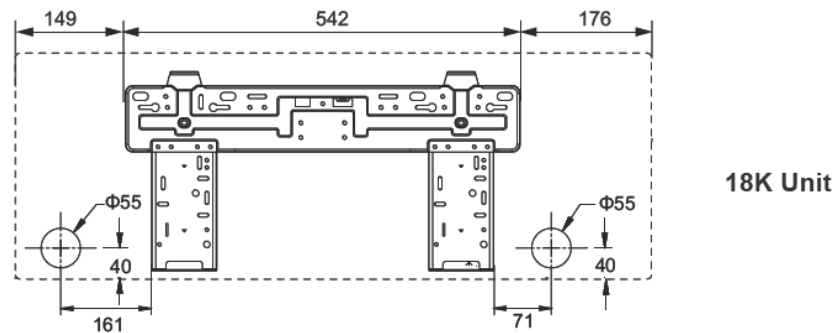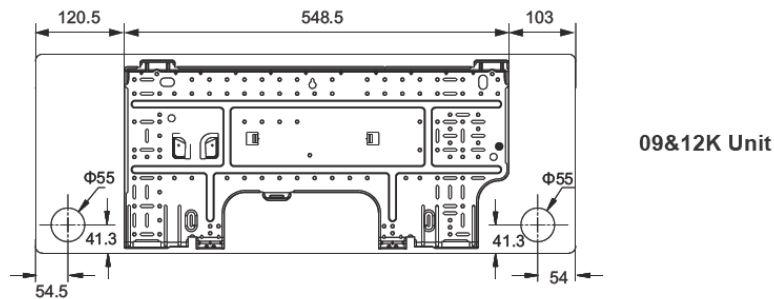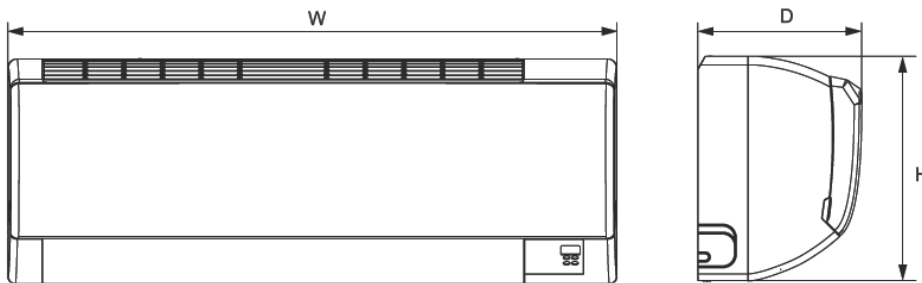


Models	W	H	D
HZDE009/012	770	283	201
HZDE018	867	305	215

**4.2 Outdoor: AWAU-YBZE018-H11**

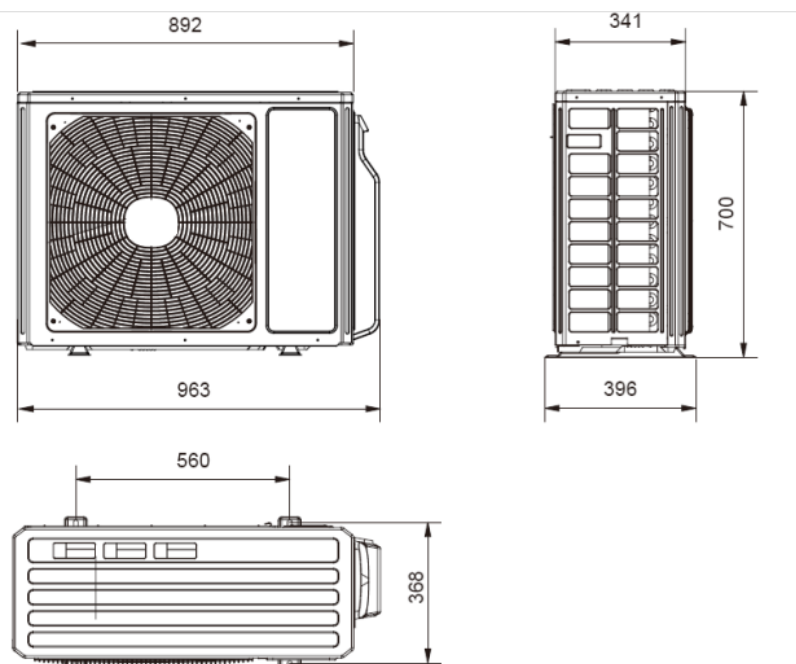

**4.3 Outdoor: AWAU-YBZE024-H11 , AWAU-YBZE030-H11**

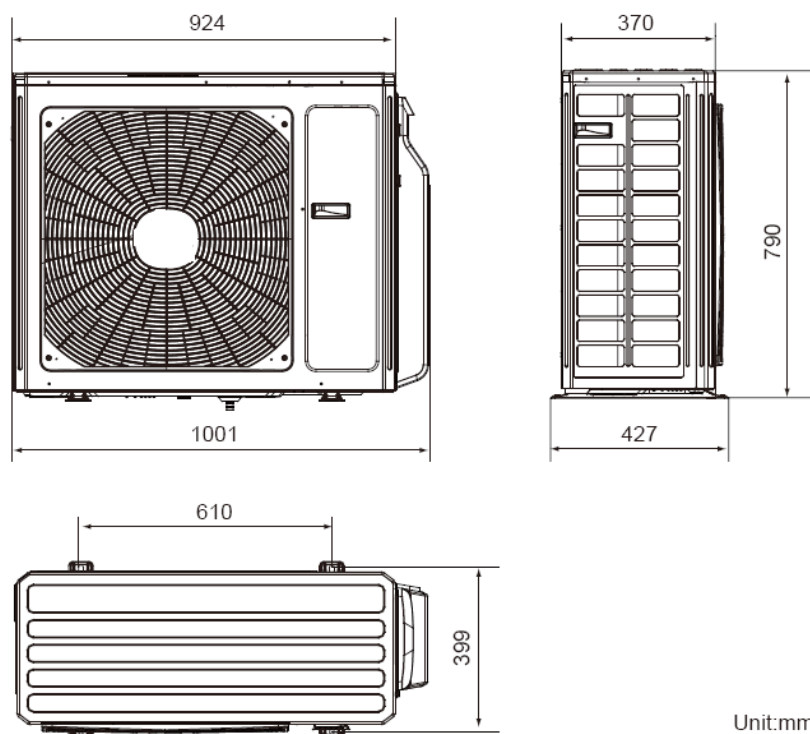

Unit:mm

**5. PERFORMANCE DATA**

Work in progress



**6. PRESSURE CURVES**

Work in progress



## 7. SOUND LEVEL CHARACTERISTICS

### 7.1 Sound Pressure Level

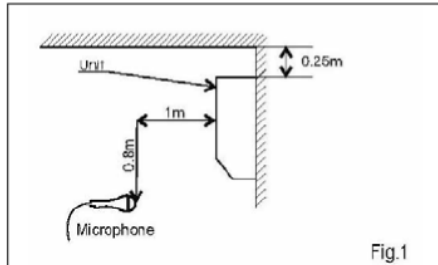


Figure 1. Wall Mounted

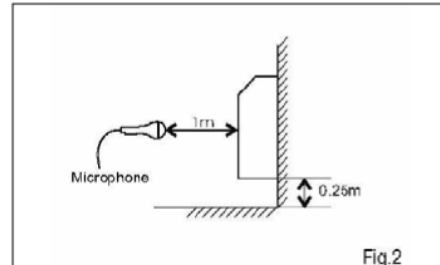


Figure 2. Floor Mounted

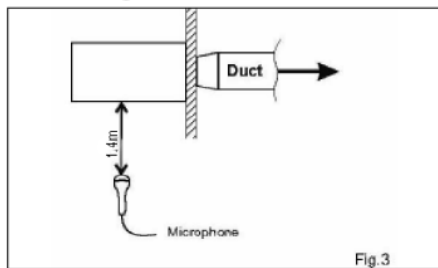


Figure 3. Ducted

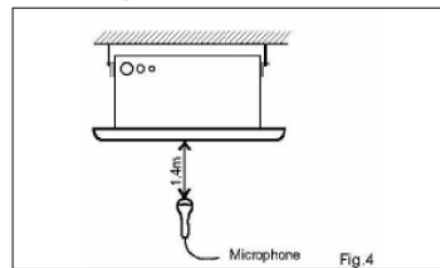


Figure 4. Cassette

### 7.2 Sound Pressure Level Spectrum (Measured as Figure 1)





## 8. ELECTRICAL DATA

MODEL	YBZE218	YBZE324	YBZE430
Power Supply	To outdoor 1PH-220-240V-50Hz		
Max Current, A	12A	21A	21A
Circuit Breaker, A	25A	32A	32A
Power Supply Wiring No. X Cross Section mm <sup>2</sup>	3x2.5 mm <sup>2</sup>	3x2.5mm <sup>2</sup>	3x2.5mm <sup>2</sup>
Interconnecting Cable Model No. X Cross Section mm <sup>2</sup>	4x1.0 mm <sup>2</sup>	4x1.0 mm <sup>2</sup>	4x1.0 mm <sup>2</sup>


### NOTE

Power wiring cord should comply with local laws and electrical regulations requirements.




## 9. WIRING DIAGRAM


### 9.1 HZDE009, HZDE012

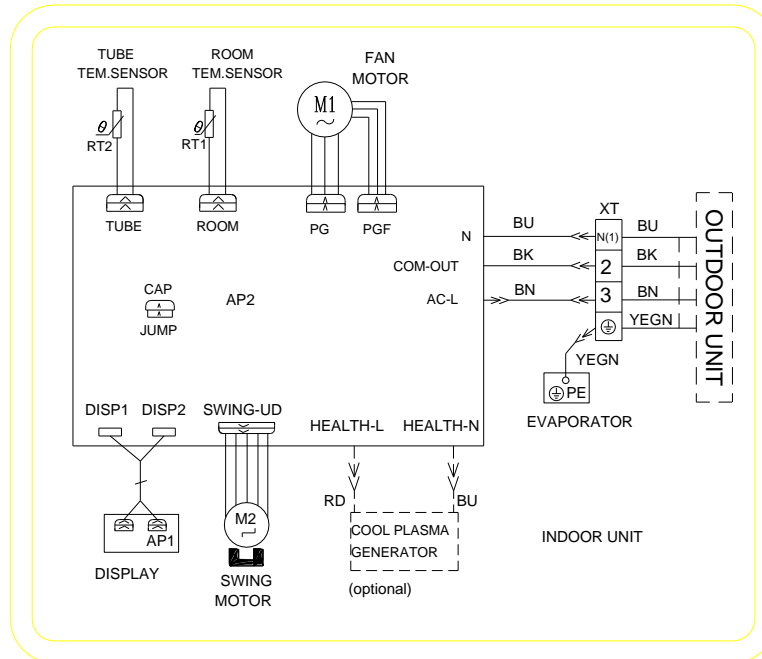


### 9.2 HZDE018

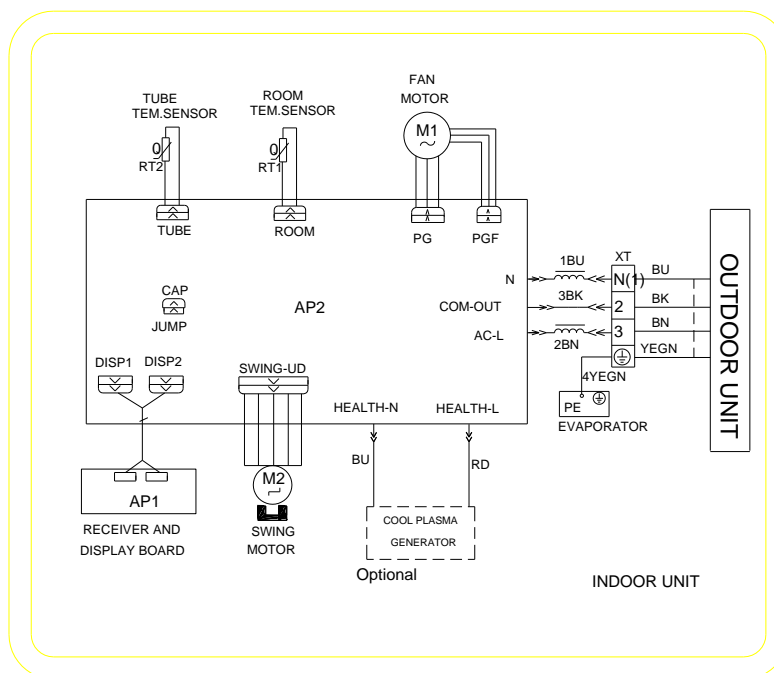


9.3 YAZE218

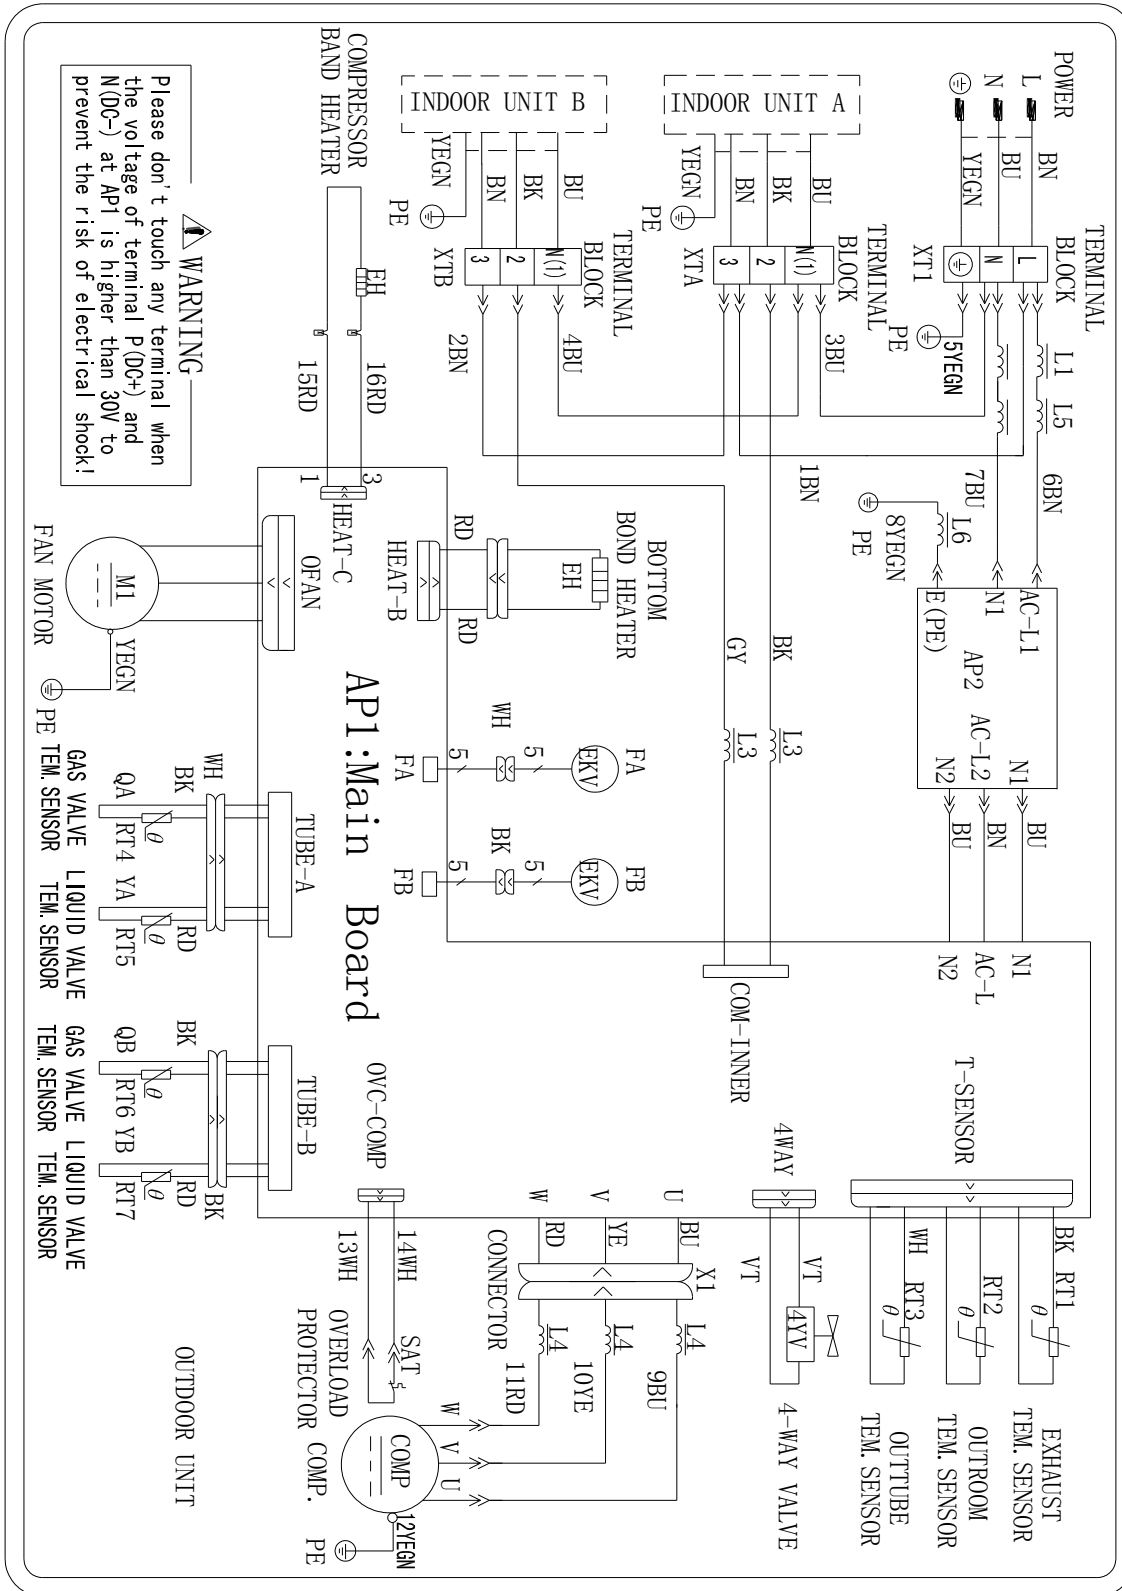


9.4 YAZE324

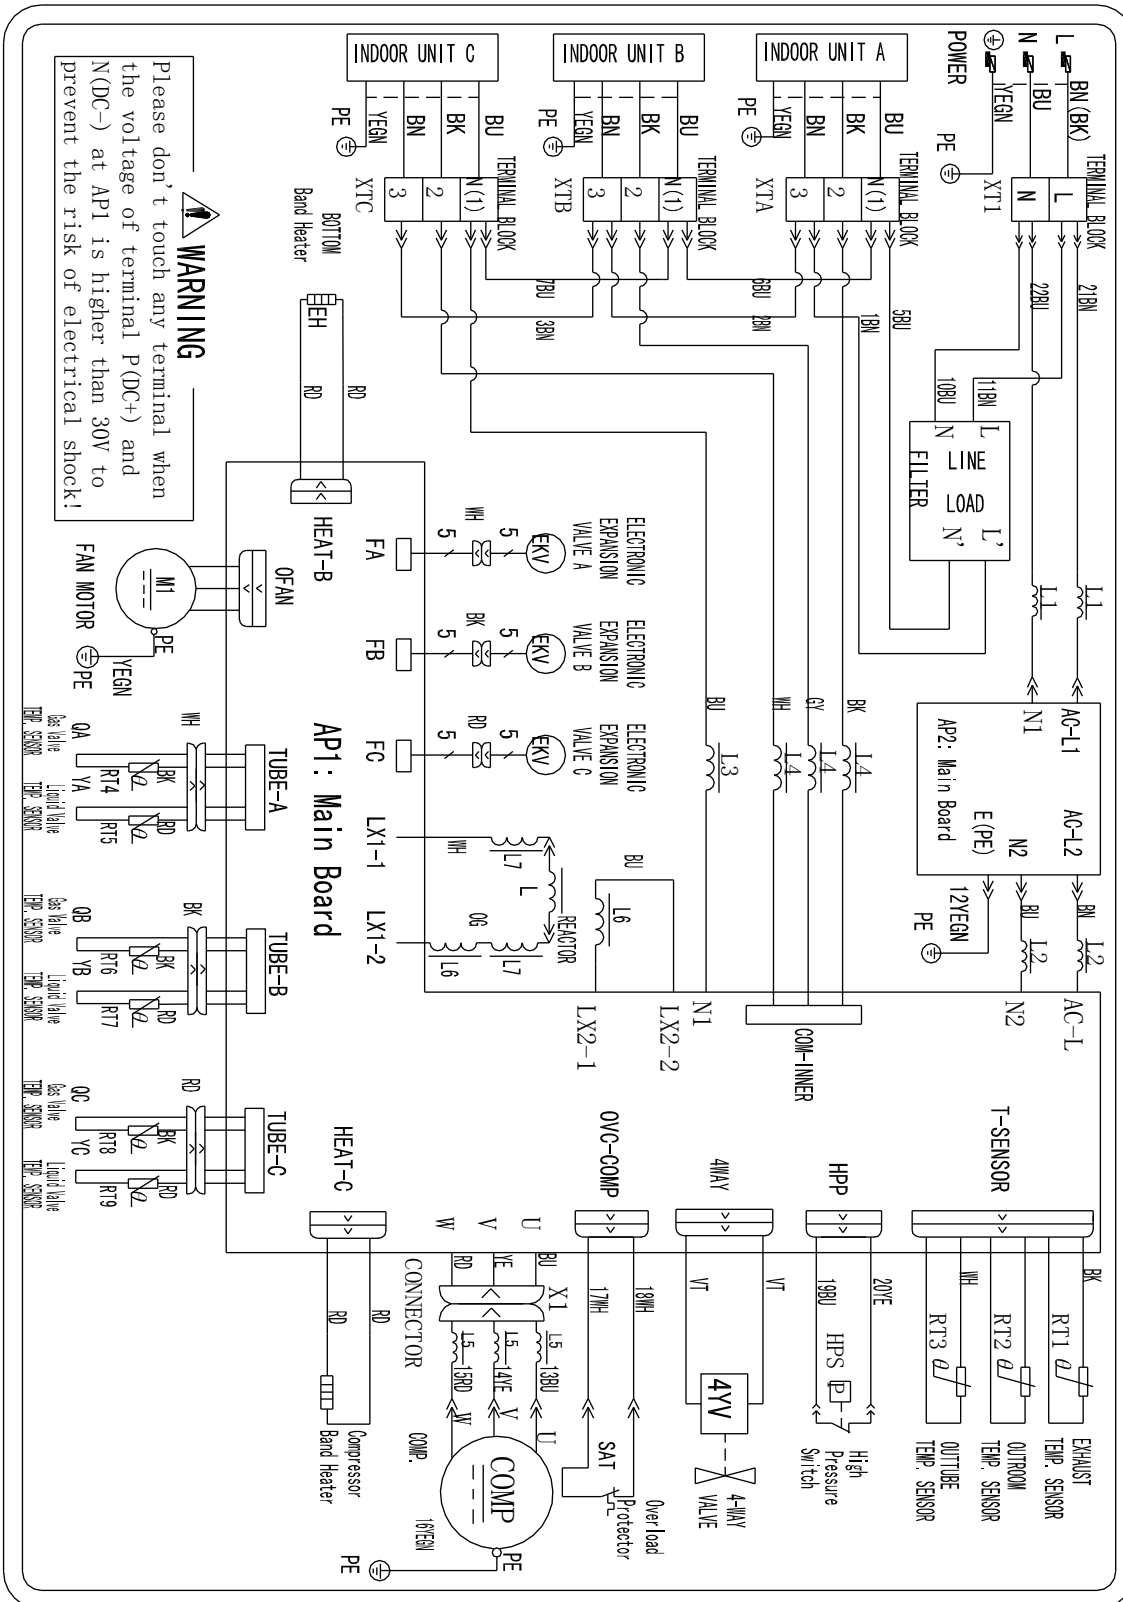

9.5 YAZE430

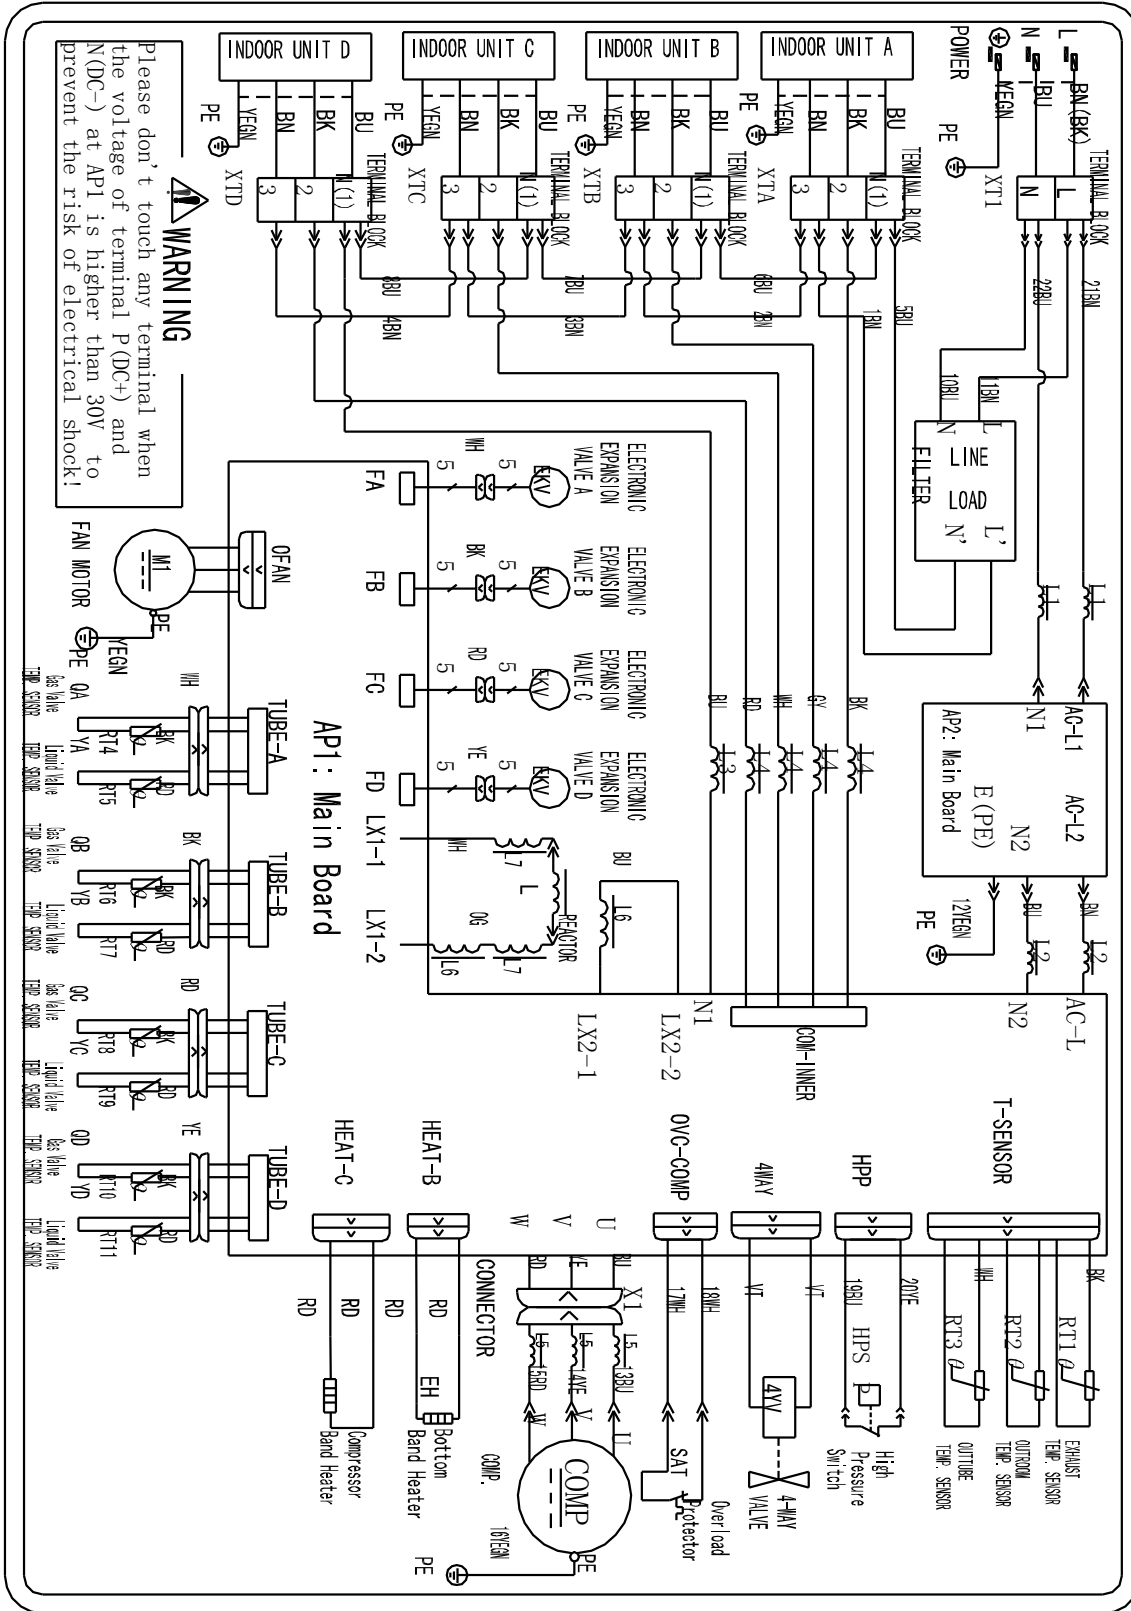


9.6 Wiring connection between IDU and ODU

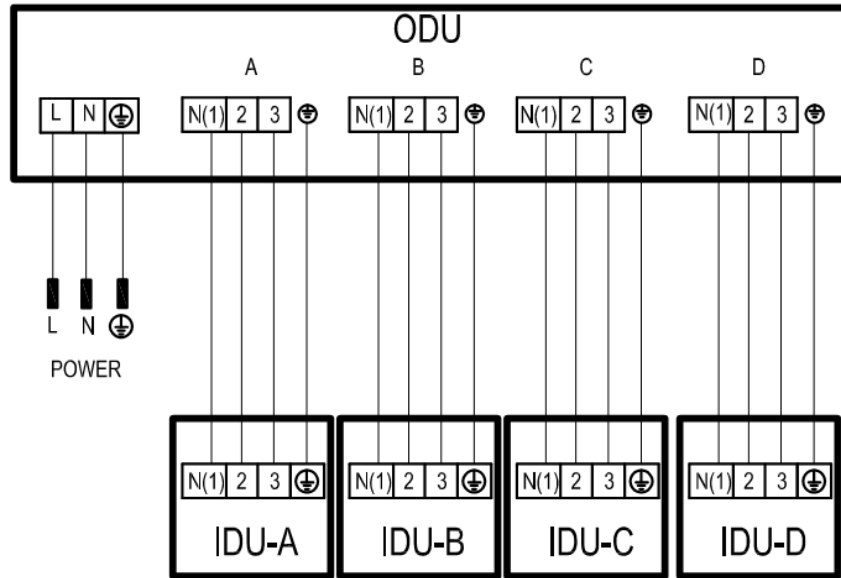







## 10. REFRIGERATION DIAGRAMS

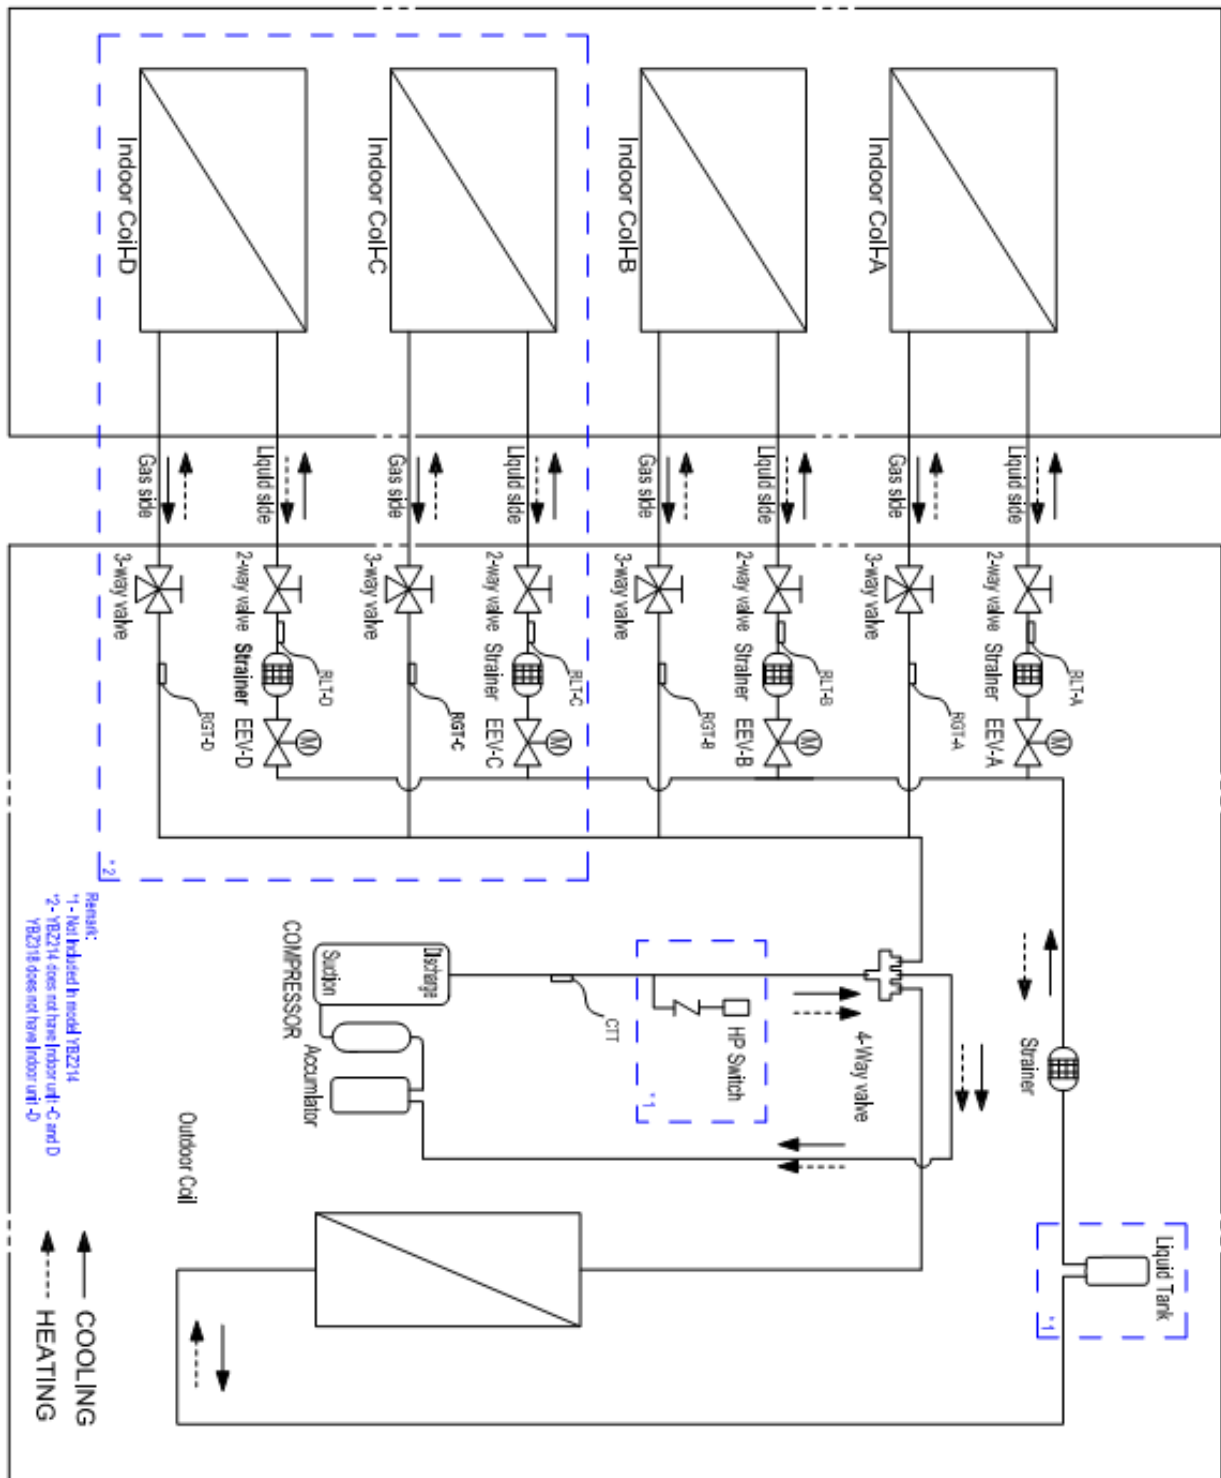



## 11. TUBING CONNECTIONS

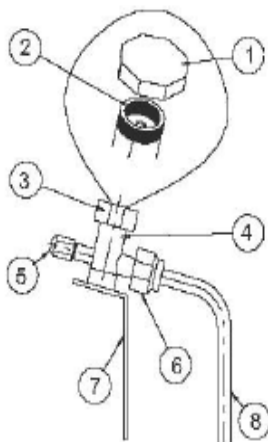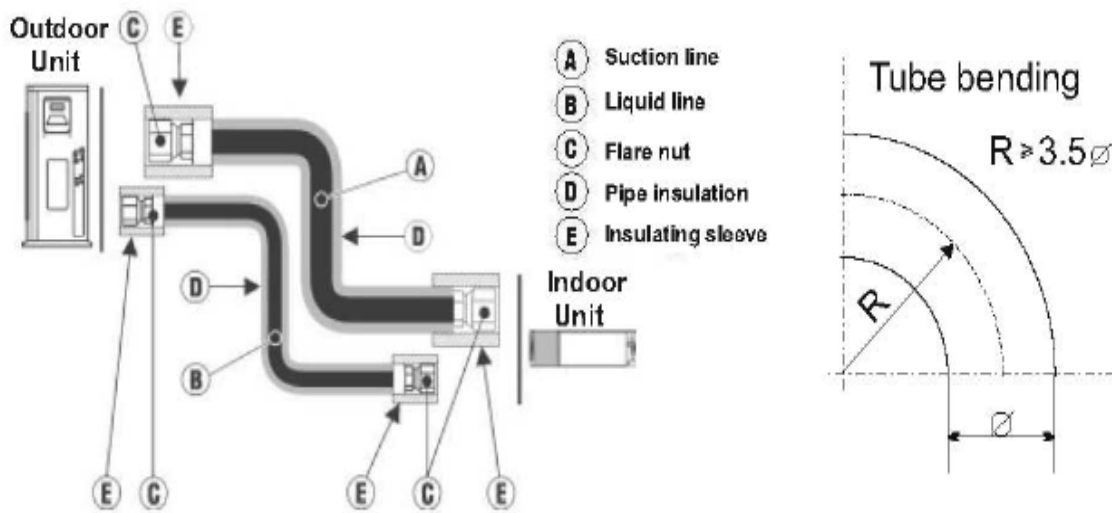

TUBE (Inch)	1/4"	3/8"	1/2"	5/8"	3/4"
<b>TORQUE (Nm)</b>					
<b>Flare Nuts</b>	15-18	40-45	60-65	70-75	80-85
<b>Valve Cap</b>	13-20	13-20	18-25	18-25	40-50
<b>Service Port Cap</b>	11-13	11-13	11-13	11-13	11-13

1. Valve Protection Cap-end
2. Refrigerant Valve Port (use Allen wrench to open/close)
3. Valve Protection Cap
4. Refrigerant Valve
5. Service Port Cap
6. Flare Nut
7. Unit Back Side
8. Copper Tube



## 12. CONTROL SYSTEM

### 12.1 Electronic Control

#### 12.1.1 Abbreviations

Abbreviation	Definition
A/C	Air Condition
BMS	Building Management System
PWR	System Power
CTT	Compressor Top Temperature sensor
DCI	DC Inverter
EEV	Electronic Expansion Valve
HE	Heating Element
HMI	Human Machine Interface
HST	Heat Sink Temperature sensor
Hz	Hertz (1/sec) – electrical frequency
ICT	Indoor Coil Temperature (RT2) sensor
IDU	Indoor Unit
MCU	Micro Controller Unit
OAT	Outdoor Air Temperature sensor
OCT	ODU Coil Temperature sensor
ODU	Outdoor Unit
OFAN	Outdoor Fan
PFC	Power Factor Corrector
RAC	Residential A/C
RC	Reverse Cycle (Heat Pump)
RGT	Return Gas Temperature sensor
RPS	Rounds per second (mechanical speed)
RV	Reverse Valve
SB,STBY	Stand By
SUCT	Compressor Suction Temperature sensor
S/W	Software
TBD	To Be Defined
TMR	Timer

## 12.1.2 Compressor Frequency Control

### 12.1.2.1 Compressor frequency setting

The Load calculation is done by each indoor unit controller, based on a PI control scheme which is based on the difference between SPT and RAT.

ODU controller will decide the compressor frequency based on the total load from all the indoors.

Compressor frequency will be limited within following ranges:


Mode	Minimum Frequency (MinFreq)			Maximum Frequency (MaxFreq) *		
	YBZE218	YBZE324	YBZE430	YBZE218	YBZE324	YBZE430
Cooling	15	15	15	110	110	110
Heating	15	15	15	110	110	110

\* Maximum frequency is also decided by different indoor combinations.

### 12.1.2.2 Frequency Changes Control

Frequency change rate is 1 Hz/sec.

### 12.1.2.3 Compressor Starting Control

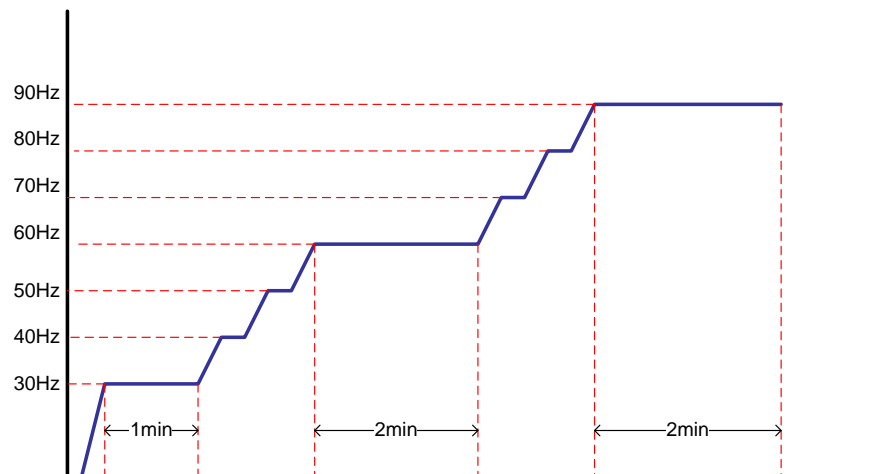

### 12.1.2.4 Minimum On and Off Time

Prohibit turning ON the compressor for 3 minutes after turning it off. (Except during deicing protection)

Prohibit turning OFF the compressor for 7 minutes after turning it on (except protections required immediate compressor stop)

**12.1.3 Indoor Fan Control**

8 Indoor fan speeds are determined for each model. 4 speeds for COOL modes and 4 speeds for HEAT mode.

Unit Model	Mode	Turbo(Super high)	High	Medium	Low
09	Cooling	1350	1100	900	700
	Heating	1350	1140	980	820
12	Cooling	1350	1100	950	800
	Heating	1350	1190	1020	850
18	Cooling	1350	1100	950	800
	Heating	1400	1200	1050	900

In high/ medium/ low indoor fan user setting, unit will operate fan in selected speed.

In Auto Fan user setting, fan speed will be adjusted automatically according to the difference between actual room temperature (RAT) and user set point temperature (SPT).

Indoor Fan speed		High	Medium	Low
RAT-SPT	Cooling	$\geq 2$	(0,2)	$\leq 0$
	Heating	$\leq 1$	(1,3)	$\geq 3$

During Auto Fan operating, one speed should keep at least 210sec operating before switching to other speeds.

In DRY mode, the automatic fan speed is forced to be low.

**12.1.3.1 Turbo Speed**

In COOL and HEAT mode (not available in AUTO, DRY, FAN mode), press the Turbo button, the super high fan speed is selected on Remote control and the indoor fan rotates at super high speed.

**12.1.4 Outdoor Fan Control**

The outdoor fan motor is a 3 speed AC motor and controlled by the relays on outdoor controller. OFAN speed will be changed according to OAT temperature.

**12.1.5 EEV Control**

**12.1.5.1 EEV homing**

When compressor stops or unit is power on, the following is performed immediately:

- All EEV's are closed 520 steps and then set this opening as 0 step.
- Then All EEVs are opened 480 steps and ready for system starting.

### 12.1.5.2 EEV initial value determination

The EEV initial value (open loop) is determined according to the number of the active indoor units, mode, and the capacity code of the unit.

### 12.1.5.3 Balance time

During the balance after SB the correction is not calculated. After that the correction value is updated every 5 seconds.

### 12.1.5.4 EEV corrections

The corrections will keep the compressor in the proper operation temperature (Target CTT control) and will balance between the indoor units by controlling their super heat.

### 12.1.5.5 EEV opening of inactive indoors

Under Cool Mode/Dry Mode, relative EEV of inactive indoor will be fully closed to 0.

Under Heat Mode, relative EEV of inactive indoor will maintain an opening in a range so that refrigerant and oil can come back to outdoor.

## 12.1.6 Reversing Valve (RV) Control

Reversing valve is on in heat mode.

Switching of RV state is done only after compressor is OFF for over 2 minutes.

## 12.2 Fan Mode

In this mode, the indoor fan may run at high, medium, low and automatic speed. The compressor, outdoor fan and 4-way valve will be OFF.

In this mode, the range of setting temperature is 16~30C

## 12.3 Cool Mode

### 12.3.1 Starting Cool Mode

If the system is in idle, when any one indoor requests the cooling mode operating, the system will run in Cool Mode. EEV, OFAN and compressor will start operating.

### 12.3.2 Compressor's action when Indoor changed to inactive (OFF or Thermo OFF)

#### 12.3.2.1 All indoors to inactive

Compressor stops immediately, OFAN stops after 1 min.



---

### **12.3.2.2 Partial indoors to inactive**

Recalculate the load immediately, for Inactive indoors, EEV opening is set to 0 step.

### **12.3.3 RV**

RV is OFF in Cool Mode.

### **12.3.4 OFAN control during Cool Mode**

OFAN will start 5sec before compressor start. After starting, it will run at High speed for 3 mins, and then switch to the requested speed.

OFAN will run at one speed for at least 80sec, except the condition of the active indoor amount changing.

After compressor stopping, the OFAN will keep the current speed for 1min and then stop.

### **12.3.5 Oil return operation during Cool Mode**

#### **12.3.5.1 Starting oil return**

Oil return operation is to avoid compressor operating with low frequency for long time.

#### **12.3.5.2 Oil return operation**

Heating LED blinks (OFF-0.5sec, ON-10sec)

Compressor is forced to run higher frequency.

#### **12.3.5.3 Exiting oil return**

The oil return operating time reaches 5min (Including frequency's changing time)

### **12.3.6 Indoor Fan operation under Cool Mode**

In manual fan speed (Turbo/Hi/Med/low) setting, IFAN will operate at the setting speed.

In Auto Fan user setting, fan speed will be adjusted automatically according to the SPT and RAT, refer to 12.1.3

## **12.4 Heat Mode**

### **12.4.1 Condition of starting Heat Mode**

If the system is in idle, when any one indoor request the heating mode operating, the system will run in Heat Mode. EEV, OFAN and compressor will start operating.

### **12.4.2 Compressor's action when Indoor changed to inactive (OFF or Thermo OFF)**

**12.4.2.1 All indoors to inactive**

Compressor stops immediately, OFAN stops after 1 min.

**12.4.2.2 Partial indoors to inactive**

Recalculate the load immediately, for Inactive indoors, EEV opening will follow 12.1.5.5.

**12.4.3 OFAN control during Heat Mode**

OFAN will start 5sec before compressor starts. After starting, it will run at High speed for 40 sec then switch to the requested speed.

OFAN will run at one speed for at least 80sec.

After compressor stopping, the OFAN will keep the current speed for 1min and then stop.

**12.4.4 Oil return operation during Heat Mode****12.4.4.1 Starting oil return**

Oil return operation is to avoid compressor operating with low frequency for long time.

**12.4.4.2 Oil return operation**

Indoor display - Heating LED blinks (OFF-0.5sec, ON-10sec)

System will run at Cool Mode. Compressor is forced to run higher frequency. And both IFAN and OFAN are stopped.

**12.4.4.3 Exiting oil return**

The oil return operating time reaches 5min (Including frequency's changing time)

**12.4.5 Indoor Fan Control in Heat Mode**

Indoor fan speed depends on the indoor coil temperature

**Anti-cold air function**

When starting the heating mode, anti-cold air function will be activated and indoor fan can run at low speed or stop running. This function will terminate after the unit runs for 3min or the ICT reaches 42 degree.

**Residual heat blowing function**

During heating, when the stopping condition for the compressor is reached, the compressor and the outdoor fan motor stop running while the louver moves to position L. The indoor fan will stop after running for 60s at setting speed.

## 12.5 Auto Cool/Heat Mode

In AUTO mode, the system selects the running mode (COOL/HEAT/FAN) automatically according to the room temperature. The display shows the actual running mode and setting temperature. There will be 30s delay for mode conversion.

1. When  $RAT \geq 26$  degree, the cooling mode is selected.
2. When  $RAT \leq 22$  degree, the unit runs in heating mode
3. When  $22 \text{ degree} < RAT < 26$  degree, upon initial startup, the unit will enter auto mode and run in automatic fan mode. If the other mode changes into auto mode, the previous running mode will remain. (Except from Dry Mode, system will run in automatic fan mode)

## 12.6 Dry Mode

Dry Mode is same as Cool Mode in EEV, OFAN and compressor control except following:

- 1) IFAN will be forced to Low speed.
- 2) For indoor working under Dry mode, Max capacity output is 90% of Cool Mode

In this mode, the Reverse Valve will be OFF and the temperature setting range is 16~30.

## 12.7 Protections

There are 4 protection codes.

Normal (Norm) – unit operate normally.

Stop Rise (SR) – compressor frequency can not be raised but does not have to be decreased.

HzDown – Compressor frequency is reduced by 1Hz/s (2Hz/s for current protection)

Stop Compressor (SC) – Compressor is stopped.

### 12.7.1 Mode confliction

When there are different mode settings among active indoors:

- a. First request priority:

The first IDU which requests different mode than STBY mode will set the new operation mode.

Mode confliction will be decided comparing with other IDUs' modes. Cool (Dry) mode is conflict to Heat mode.

The mode will change once all the units exit the current operation mode.

- b. Fan mode is conflict to Heat mode:

Heat Mode is the priority mode, Fan Mode is conflict to Heat Mode no matter the IDU is first IDU or not. The indoor will run in Heat Mode.

When the current IDU operating mode is conflict to other IDUs under operating, the current IDU:

1. IDU display will show “E7”.
2. The operating mode is still transferred to the outdoor unit.

### **12.7.2 Indoor Coil Defrost Protection**

During cooling operation, the signals being sent from the indoor unit allow the operating frequency limitation and then prevent freezing of the indoor heat exchanger.

Compressor will stop when ICT  $\leq$  -1C for continuous 10sec.

If the unit stops as such protection for 6 times ([the counter will be cleared after the compressor has run for 7min](#)), it can not resume running automatically and display malfunction, it can resume by remote control ON/OFF reset.

### **12.7.3 Indoor/Outdoor Coil over Heating Protection**

During heating operation, the signals being sent from the indoor unit/outdoor allow the operating frequency limitation and prevent abnormal high pressure.

Compressor frequency will be reduced when ICT/OCT reaches above 58C

Compressor will stop when ICT/OCT reaches 65C

If the unit stops as such protection for 6 times ([the counter will be cleared after the compressor has run for 7min](#)), it can not resume running automatically and display malfunction, it can resume by remote control ON/OFF reset.

---

### 12.7.4 Compressor over Heating Protection

The Discharging temperature is used as the compressor's internal temperature. If the discharge temperature rises above a certain level, the operating frequency upper limit is set to keep this temperature from going up further.

Compressor frequency will be reduced when CTT reaches above 97C  
Compressor will stop when CTT reaches 110C

If the unit stops as such protection for 6 times (the counter will be cleared after the compressor has run for 7min), it can not resume running automatically and display malfunction, it can resume by remote control ON/OFF reset.

### 12.7.5 Compressor over Current Protection

Detect an input current by the CT during the compressor is running, and set the frequency upper limit from such input current. In case of heat pump model, this control is the upper limit control function of the frequency which takes priority of the lower limit of four way valve activating compensation.

Detail

For model 14: Compressor will stop when AC current  $\geq 16.0A$  for continuously 2.5s  
For model 18/30: Compressor will stop when AC current  $\geq 20.0A$  for continuously 2.5s

If the unit stops as such protection for 6 times (the counter will be cleared after the compressor has run for 7min), it can not resume running automatically and display malfunction, it can resume by remote control ON/OFF reset.

### 12.7.6 Outdoor Coil Deicing Protection

This protection is for Heat Pump Only

This protection is carried out by the cooling cycle (reverse cycle). The defrosting time or outdoor heat exchanger temperature must be more than its setting values when finishing the deicing protection.

In the deicing protection, IFAN is forced OFF.

#### 12.7.6.1 Deicing Starting Conditions

The starting conditions must be made with the outdoor air temperature (OAT) and outdoor coil temperature (OCT). Under the conditions that the system is in heating operation, after the time for defrosting is judged to be satisfied, if the temperature for deicing is satisfied after detections for continuous 1 minute, the deicing operation will start.

Deicing interval time is changed as a function of deicing time. If deicing time is shorter than former deicing time, the deicing interval time will be increased. If deicing time is longer than former deicing time, the deicing interval time will be decreased.

#### **12.7.6.2 Deicing Protection Procedure**

When starting deicing from Heat Mode, system will work as following:

- 1). Compressor stops. OFAN and RV will be OFF after 40s
- 3). Compressor starts and deicing time is counted. Compressor frequency will go to Deicing Frequency.

#### **12.7.6.3 Exiting Deicing**

System will exit the deicing until OCT reaches to certain value (depends on OAT) or the deicing time reaches 12 min as maximum.

### **12.7.7 Communication malfunction**

Connected IDU number detection

If ODU does not receive correct signal from one IDU for 3min continuously, the ODU will take this IDU as not connected one. But ODU will still send the broadcast to this IDU. If response were received, then ODU will take it as connected.

### **12.7.8 IPM module protection**

When the compressor starts, if there is over current or control voltage low for IPM module as some abnormal results, IPM will detect module protection signal as the unit is on. Once the module protective signal is detected, stop the unit with module protection immediately. If the module protection is resumed and compressor has stopped for 3min, the unit will be allowed to operate.

If the module protection continuously occurs for 6 times ([the counter will be cleared after the compressor has run for 7min](#)), it can not resume running automatically and display malfunction, it can resume by power reset.

### **12.7.9 HP switch protection**

If the HP switch is opened for 3S continuously, the system will stop as protection

After the HP switch protection, if HP switch is resumed for continuous 6s, the system operating can be resumed by power reset.

### **12.7.10 Module overheating protection**

If the module temperature is higher than 95C, the unit will stop. If module temperature is lower than 95C, and compressor has stopped for 3min, the unit will resume operating.

If the unit stops as module overheating protection for 6 times ([the counter will be cleared after the](#)

compressor has run for 7min), it can not resume running automatically and display malfunction, it can resume by power reset.

**12.7.11 Compressor overload protection**

If the compressor OLP is opened, the system will stop as protection  
 If the OLP is resumed and compressor has stopped for 3min, the unit will be allowed to operate.

If the unit stops as compressor overload protection occurred for 6 times continuously (the counter will be cleared after the compressor has run for 30min), it can not resume running automatically and display malfunction, it can resume by power reset.

**12.7.12 Compressor Phase protection**


If any phase is detected open when compressor starting, the system will stop as protection.  
 The protection will be cleared after 1 min and system will try to restart.  
 If the unit stops as Phase protection for 6 times (the counter will be cleared after the compressor has run for 7min), it can not resume running automatically and display malfunction, it can resume by power reset.

**12.8 Operating the Unit from the ON/OFF Button**

The ON/OFF button allows to operate the unit in AUTO mode, the microcomputer will monitor the room temperature and select the (COOL, HEAT, FAN) mode automatically, and temperature/Fan speed settings can not be changed.

**12.9 Indoor Unit Controllers and Indicators**

The following is schematic drawing for the display:

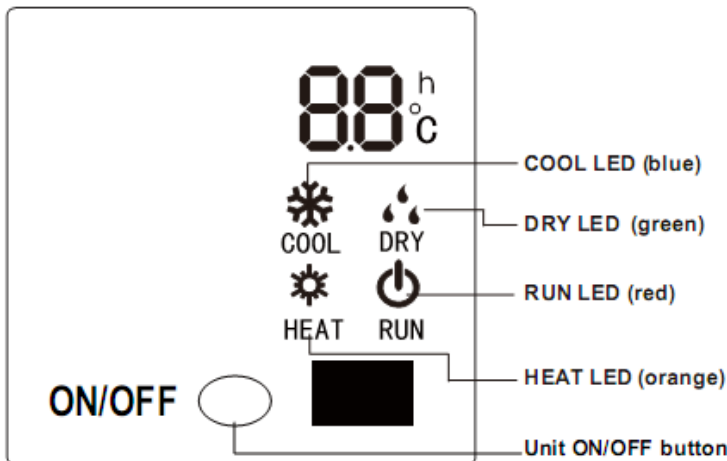

RUN INDICATOR	1. Lights up when the Air Conditioner is connected to power and
---------------	---

	<p>the mode is STBY.</p> <p>2. When the unit is turned on remotely, the RUN LED goes out while the current setting running mode is displayed</p>
<p>COOL INDICATOR DRY INDICATOR HEAT INDICATOR</p>	<p>1. Lights up during specified operation mode (COOL/DRY/HEAT).</p>
<p>2* 7 segments display</p>	<p>1. In normal situation, the setting temperature is displayed.</p> <p>2. Shows outdoor temperature or indoor temperature when receiving the corresponding demand from controller. It resumes displaying setting temperature 5s later</p> <p>3. Shows the alarm code whenever there is an alarm.(Refer to Diagnostic part)</p>
<p>Unit ON/OFF Button</p>	<p><b>Single pressing:</b> Unit will switch between Auto mode and STBY. System will select the COOL/HEAT/FAN mode automatically and temperature/Fan speed settings can not be changed.</p>



### 12.9.1 Installation Test

Installation test is to check any mistake in communication wiring or EEV wiring connections.

Start Installation Test:

RC setting: SPT=30, Cool Mode and press the button “-, +,-, +,-, +” continuously in 3 sec.

Unit operation during Installation test:

Unit will operate in cool mode (IFAN will stop), IDU will display “dd”. Total operating time depends on IDU numbers, for each IDU maximum operating time is 3min.

Finish the Installation test:

IDU will cancel displaying “dd”, and will display “dn” if any mistake of communication wiring or EEV wiring is detected from ODU.

### 12.10 Forced Deicing

#### Start Forced Deicing

Under Heat Mode, RC setting with SPT=16, and press the button “+,-,+,-,+,-” continuously in 5 sec. The Forced Deicing request will be sent to ODU.

After ODU received the Forced Deicing request, IDU will cancel the setting and request of Forced Deicing

System operation will follow 12.7.6.2 and 12.7.6.3 during Forced Deicing.

### 12.11 Forced Mode (Compulsory operating function).

#### Entering into forced mode :

After the unit is powered for 5mins, press the light button on remote controller for 3 times in 3s successively to enter into Freon recovery mode. “Fo” will be displayed. When Freon recovery mode operated for 25mins, all loads will operate in cooling mode. (The setting fan speed is high fan speed and the setting temperature is 16C )

#### Exiting forced mode:

Any signal from remote controller or button will exit the forced mode, and then the unit will operate at the current setting command.

Forced mode will also be exited after operating for 25mins and then the unit will operate [with the last operating mode](#).



## 13. TROUBLESHOOTING

### 13.1 ELECTRICAL & CONTROL TROUBLESHOOTING

#### 13.1.1 Precautions before Performing Inspection or Repair

Be cautious during installation and maintenance. Do operation following the regulations to avoid electric shock and casualty or even death due to drop from high altitude.

\* **Static maintenance** is the maintenance during de-energization of the air conditioner. For static maintenance, make sure that the unit is de-energized and the plug is disconnected.

\***Dynamic maintenance** is the maintenance during energization of the unit. Before dynamic maintenance, check the electricity and ensure that there is ground wire on the site. Check if there is electricity on the housing and connection copper pipe of the air conditioner with voltage tester. After ensure insulation place and the safety, the maintenance can be performed.

Take sufficient care to avoid directly touching any of the circuit parts without first turning off the power. At time such as when the circuit board is to be replaced, place the circuit board assembly in a vertical position. Normally, diagnose troubles according to the trouble diagnosis procedure as described below.(Refer to the check points in servicing written on the wiring diagrams attached to the indoor/outdoor units.)

#### **Precautions when inspecting the control section of the outdoor unit:**

A large-capacity electrolytic capacitor is used in the outdoor unit controller (inverter). Therefore, if the power supply is turned off, charge(charging voltage DC280V to 380V)remains and discharging takes a lot of time. After turning off the power source, if touching the charging section before discharging, an electrical shock may be caused.

The outdoor unit can not be started up until the unit is de-energized for 20min

#### 13.1.2 Confirmation

13.1.2.1 Confirmation of Power Supply Confirm that the power breaker operates(ON) normally;

13.1.2.2 Confirmation of Power Voltage Confirm that power voltage is AC220~240V +/- 10%. If power voltage is not in this range, the unit may not operate normally.

### 13.1.3 Fault Code display from ODU

The ODU can not show fault directly, can only know whether there is fault status by Communication LED.  
(Fault status – LED ON 1sec, OFF 1sec. )

### 13.1.4 Fault Code display from IDU

If the malfunction still exists 4min later after stop of unit due to compressor protection, error code will be directly displayed though indoor display. In other situations, fault code can be displayed by pressing LIGHT button 6 times within 4s.

Fault code can be displayed on 2\*7 segments or by the LEDs blinking (OFF for 3s and then with certain blinking as following)

Fault description	2*7 segments	LEDs blinking			Possible Reason
		RUN	COO L	HEAT	
HP switch protection	E1	1			1. Refrigerant was superabundant 2. Poor heat exchange (including blockage and bad radiating environment ) 3. Too high ambient temperature
Indoor coil defrost Protection	E2	2			1. Poor air-return in indoor unit 2. Fan speed is abnormal 3. Evaporator is dirty.
Compressor over Heating Protection	E4	4			1. EEV connection problem or damage 2. Refrigerant leakage 3. Poor heat exchange
AC Over current protection	E5	5			1. Supply voltage is unstable 2. Supply voltage is too low and load is too high
Communication malfunction	E6	6			1. Wiring mistakes 2. IDU or ODU PCB problem
Mode conflict	E7	7			Mode conflict to other IDU
Indoor coil/Outdoor coil over heating protection	E8	8			1. Too high ambient temperature 2. Poor heat exchange (including blockage and bad radiating environment )
No feedback of indoor motor	H6	11			1. IFAN motor damaged 2. IFAN motor blocked 3. IDU PCB problem
Malfunction protection of jumper cap	C5	15			Poor connection of the jumper on indoor PCB.
Zero-crossing protection (IDU)	U8	17			1. IFAN motor damaged 2. Zero-crossing circuit damaged on IDU PCB
Mismatch of IDU and ODU	LP	19			
RAT failure	F1		1		1. Senor was broken or damaged 2. PCB temperature detection circuit has problem
ICT failure	F2		2		
OAT failure	F3		3		
CTT failure	F5		5		
DC over voltage	PH		11		1. AC input voltage is too high. 2. Reactor has problem 3. ODU PCB has problem
OCT failure	F4		18		1. Senor was broken or damaged 2. PCB temperature detection circuit has problem
RLT failure	b5		19		
RGT failure	b7		22		
Compressor overload protection	H3			3	1. EEV connection problem or damaged 2. Refrigerant leakage 3. OLP damaged
IPM protection	H5			5	1. Abnormal power input voltage.

## TROUBLESHOOTING



					<ol style="list-style-type: none"> <li>2. Compressor wiring mistake.</li> <li>3. Liquid and gas valve are not open.</li> <li>4. EEV damaged or not proper working</li> <li>5. Poor heat exchange.</li> <li>6. Over charged system.</li> </ol>
PFC protection	HC			6	<ol style="list-style-type: none"> <li>1. PFC module assembly problem.</li> <li>2. Poor heat exchange of Heatsink</li> <li>3. PFC reactor problem.</li> <li>4. Abnormal power voltage</li> <li>5. PFC circuit problem on PCB</li> </ol>
Desynchronizing of compressor	H7			7	<ol style="list-style-type: none"> <li>1. Abnormal power input voltage.</li> <li>2. Compressor wiring mistake.</li> <li>3. Liquid and gas valve are not open.</li> <li>4. EEV damaged or not proper working</li> <li>5. Poor heat exchange.</li> <li>6. Over charged system.</li> </ol>
Compressor start-up failure	Lc			11	<ol style="list-style-type: none"> <li>1. Compressor wiring mistake</li> <li>2. Over charged system</li> <li>3. System not balanced before compressor starting</li> <li>4. Compressor problem</li> </ol>
Compressor phase current detection problem	U1			12	Phase current detection circuit for compressor has problem.
DC over current	P5			15	<ol style="list-style-type: none"> <li>1. Abnormal power input voltage.</li> <li>2. Compressor wiring mistake.</li> <li>3. Liquid and gas valve are not open.</li> <li>4. EEV damaged or not proper working</li> <li>5. Poor heat exchange.</li> <li>6. Over charged system.</li> </ol>
Charging malfunction of capacitor	PU			17	<ol style="list-style-type: none"> <li>1. Reactor open</li> <li>2. Charging relay or other components damaged on PCB.</li> </ol>
HST failure	P7			18	<ol style="list-style-type: none"> <li>1. Sensor was broken or damaged</li> <li>2. PCB temperature detection circuit has problem</li> </ol>
HST over heating protection	P8			19	<ol style="list-style-type: none"> <li>1. Insufficient attachment of IPM module to Heatsink</li> <li>2. Outdoor PCB problem.</li> </ol>
DC under voltage	PL			21	<ol style="list-style-type: none"> <li>1. AC input voltage is too low</li> <li>2. Reactor has problem</li> <li>3. ODU PCB has problem</li> </ol>
Lack Phase Protection of Compressor	Ld				<ol style="list-style-type: none"> <li>1. Compressor wiring problem</li> <li>2. Compressor problem</li> <li>3. IPM module problem or compressor current detection circuit has problem</li> <li>4. Compressor malfunction due to EEV problem</li> </ol>
Demagnetic protection of compressor	HE				DC compressor has problem
Malfunction of voltage dropping for DC BUS	U3			20	Supply voltage is unstable
Outdoor EEPROM Malfunction	EE				Outdoor PCB problem
Installation test failed	dn				<ol style="list-style-type: none"> <li>1. Check the communication wires</li> <li>2. Check the EEV</li> </ol>
AC Current detection problem	U5		13		Outdoor main board damaged
Outdoor DC fan motor malfunction	L3	23			<ol style="list-style-type: none"> <li>1. DC fan motor malfunction or blocked</li> <li>2. Bad connection</li> </ol>
Under installation test	dd				normal status
Refrigerant Recovery	Fo				normal status
Dry mode	AL				normal status
Outdoor Deicing or Oil Return	H1				normal status
The RV is abnormal	U7		20		<ol style="list-style-type: none"> <li>1. Supply voltage is lower than AC175V;</li> <li>2. Wiring terminal RV is loosened or broken;</li> <li>3. RV is damaged.</li> </ol>

### 13.1.5 Checking the refrigeration system

Checking system pressures and other thermodynamic measures should be done when system is in Test Mode (in Test mode, system operates in fixed settings). The performance curves given in this manual are given for unit performance in test mode when high indoor fan speed is selected.

Entering test mode please refer to section 12- Control system.

## 13.2 Simple procedures for checking the Main Parts

### 13.2.1 Checking Mains Voltage.

Confirm that the Mains voltage is between 198 and 264 VAC. If Mains voltage is out of this range, abnormal operation of the system is expected. If in range check the Power (Circuit) Breaker and look for broken or loosed cable lugs or wiring mistake(s).

### 13.2.2 Checking Power Input.

If Indoor unit power LED is unlighted, power down the system and check the fuse of the Indoor unit. If the fuse is OK replace the Indoor unit controller. If the fuse has blown, replace the fuse and power up again.

Checking Power Input procedure for the Outdoor unit is the same as with the Indoor unit.

### 13.2.3 Checking the Outdoor Fan Motor.

Check the voltage between any two pins of connector OFAN on controller, normal voltage is 280~380VDC

### 13.2.4 Checking the Compressor.

The compressor is brushless permanance magnetic DC motor. Three coil resistance is same. Check the resistance between three poles. The normal value should be with the almost same value. Pay attention U, V, W are respective to connect to RED, YELLOW, BLUE wires.


### 13.2.5 Checking the Reverse Valve (RV).

Running in heating mode, check the voltage between two pins of reverse valve connector, normal voltage is 220VAC.

# 14. CHARACTERISTICS OF SENSOR


## 14.1.1 RAT/OAT

RAT/OAT R-T chart

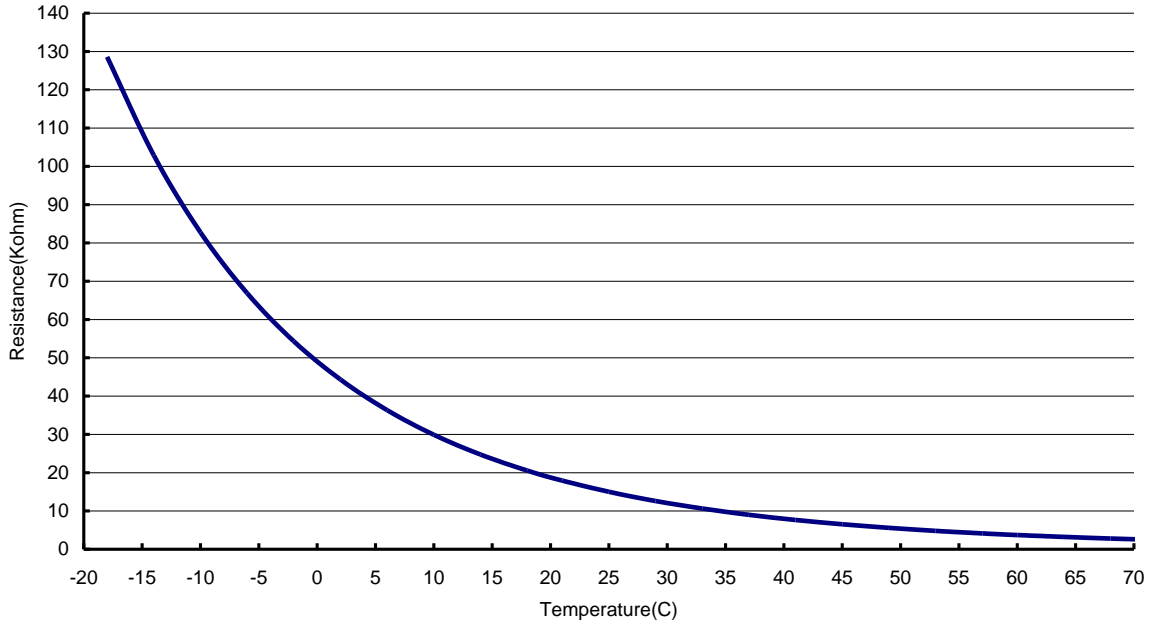


## 14.1.2 ICT/OCT/RGT/RLT

ICT/OCT R-T Chart

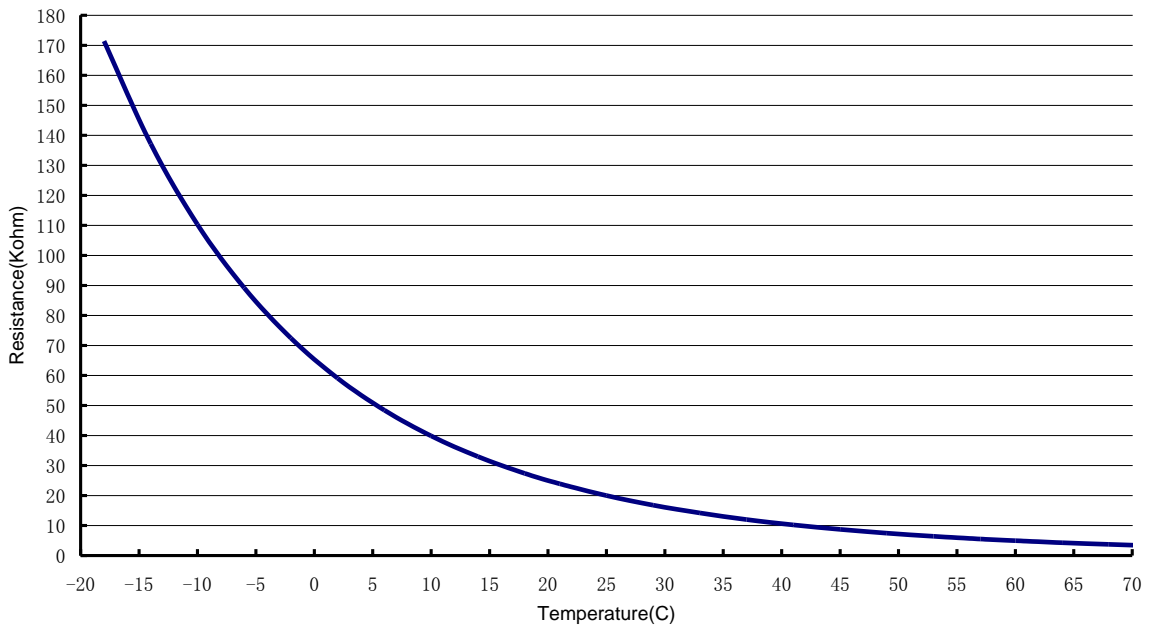

14.1.3 CTT


CTT R-T Chart

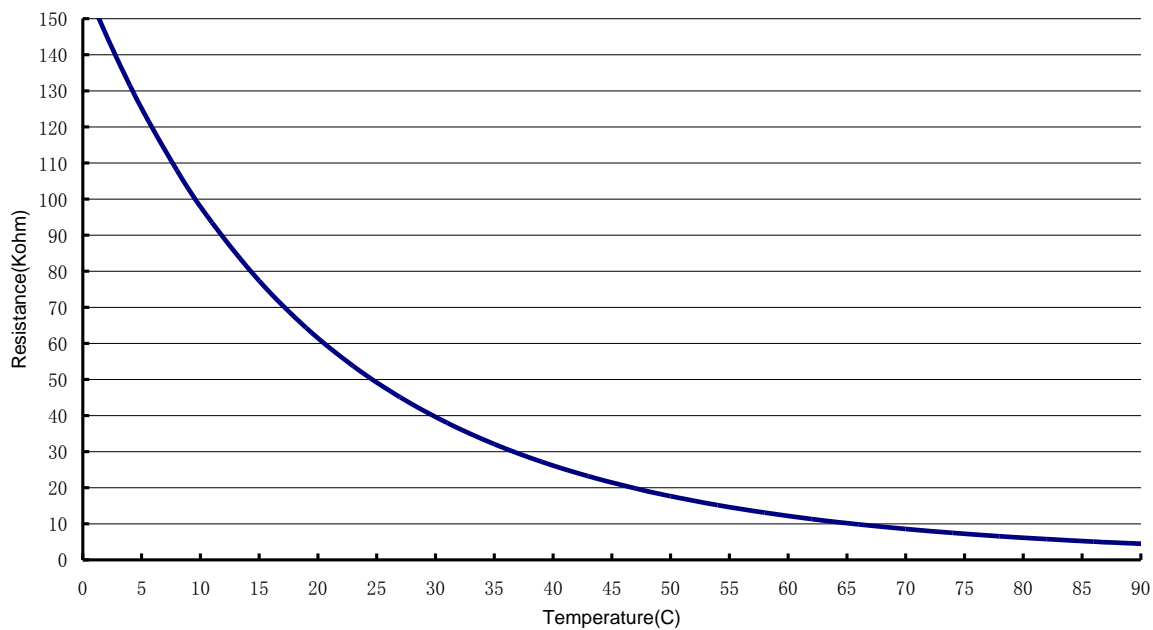



## 15. EXPLODED VIEW & SPARE PART LIST

### 15.1 Exploded view of indoor unit: HZDE009, HZDE012

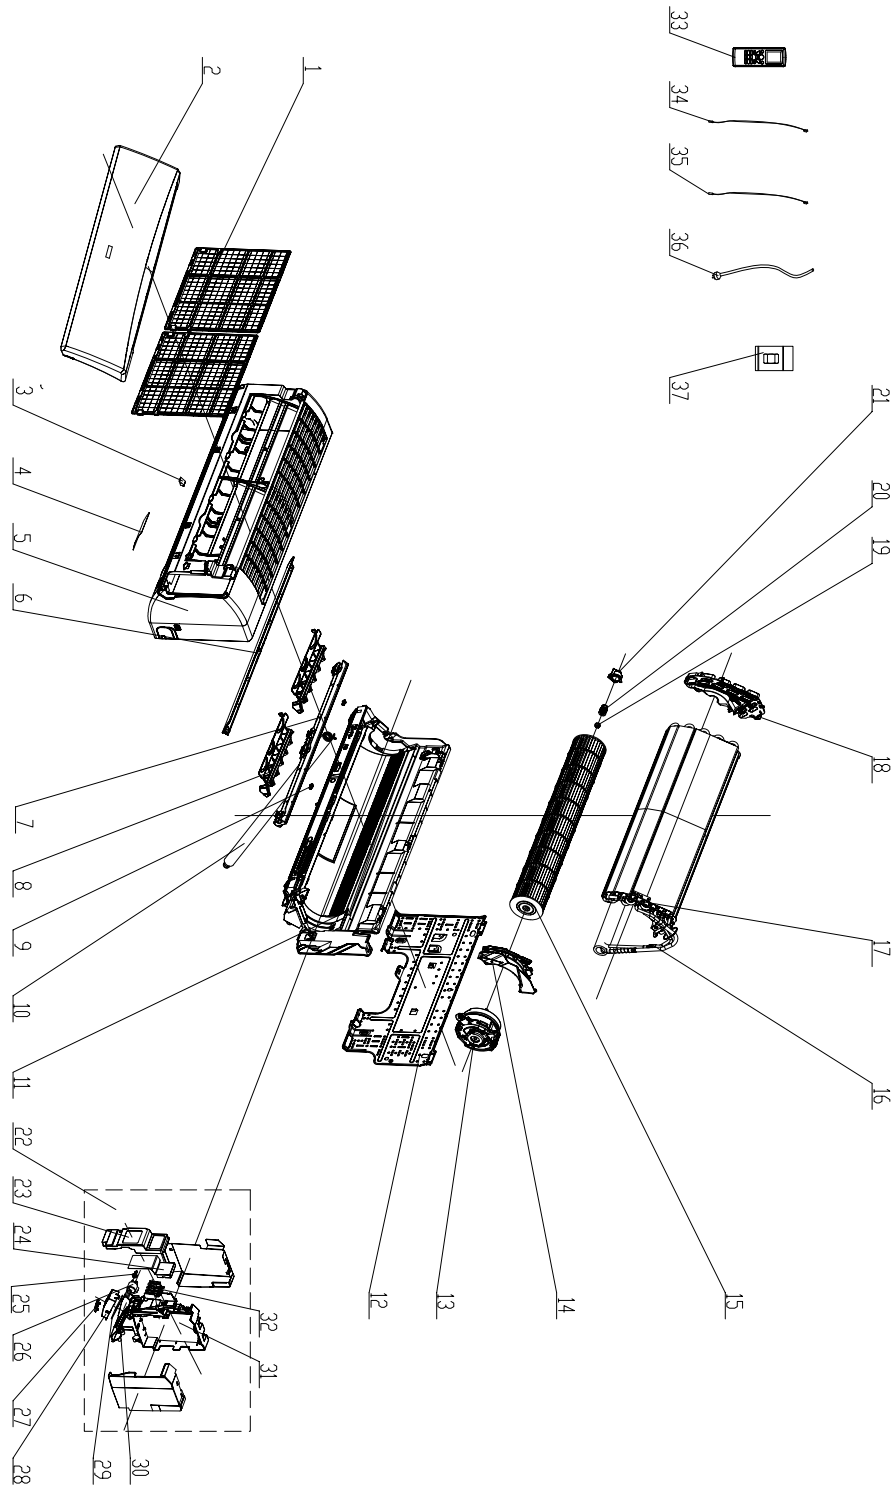


**15.2 Spare part list of indoor Unit: HZDE009**

NO.	Part Code	Part Description	qty
1	1112208201	Filter Sub-Assy	2
2	20012806B	Front Panel	1
3	24252019	Screw Cover	1
4	none	Membrane	1
5	20012824	Front Case Assy	1
6	10512119	Guide Louver	1
7	26112486	Helicoid tongue	1
8	10512160	Air Louver	2
9	1054202001	Shaft of Guide Louver	2
10	0523204101	Drainage Pipe Sub-assy	1
11	20022544_K88497	Rear Case assy	1
12	0125201801A	Wall Mounting Frame	1
13	15002020	Motor Sub-Assy	1
14	26112191	Motor Press Plate	1
15	10352423	Cross Flow Fan	1
16	01002957	Evaporator Assy	1
17	none	Tube Sensor Bushing	1
18	24212108	Evaporator Support	1
19	76512210	Fan Bearing	1
20	76712032	Bearing Holder	1
21	1054202101	Propeller Axile Bush	1
22	20402803	Electric Box Assy	1
23	20122106	Electric Box Cover	1
24	01592076	Shield Cover	1
25	73012005	Crank	1
26	1521210701	Step Motor	1
27	22242083	Indicator shield cover	1
28	22242084	Indicator Light Cover	1
29	30568112	Display Board	1
30	20112086	Electric Box	1
31	30148873	Main Board	1
32	42011233	Terminal Board	1
33	30510460_K88497	Remote Controller	1
34	390000453	Ambient Temperature Sensor	1
35	39000305	Temperature Sensor	1
36	none	Power Cord	1
37	none	Pipe Connection Nut accessories	1

**15.3 Spare part list of indoor Unit: HZDE012**

NO.	Part Code	Part Description	qty
1	1112208201	Filter Sub-Assy	2
2	20012806B	Front Panel	1
3	24252019	Screw Cover	1
4	63022016	Membrane	
5	20012824	Front Case Assy	1
6	10512119	Guide Louver	1
7	26112486	Helicoid tongue	1
8	10512160	Air Louver	2
9	1054202001	Shaft of Guide Louver	2
10	0523204101	Drainage Pipe Sub-assy	1
11	20022544_K88497	Rear Case assy	1
12	0125201801A	Wall Mounting Frame	1
13	15002020	Motor Sub-Assy	1
14	26112191	Motor Press Plate	1
15	10352423	Cross Flow Fan	1
16	01002958	Evaporator Assy	1
17	none	Temp Sensor Sleeving	0
18	24212108	Evaporator Support	1
19	76512210	Fan Bearing	1
20	76712032	Bearing Holder	1
21	1054202101	Propeller Axile Bush	1
22	20402927	Electric Box Sub-Assy	1
23	20122106	Electric Box Cover	1
24	01592074	Shield Cover	1
25	73012005	Crank	1
26	1521210701	Step Motor	1
27	22242083	Indicator shield cover	1
28	22242084	Indicator Light Cover	1
29	30568112	Display Board	1
30	20112086	Electric Box	1
31	30148873	Main Board	1
32	42011233	Terminal Board	1
33	30510460_K88497	Remote Controller	1
34	39000305	Temperature Sensor	1
35	390000453	Ambient Temperature Sensor	1
36	none	Power Cord	0
37	06320020	Pipe Connection Nut accessories	1


15.4 Exploded view of indoor unit: HZDE018

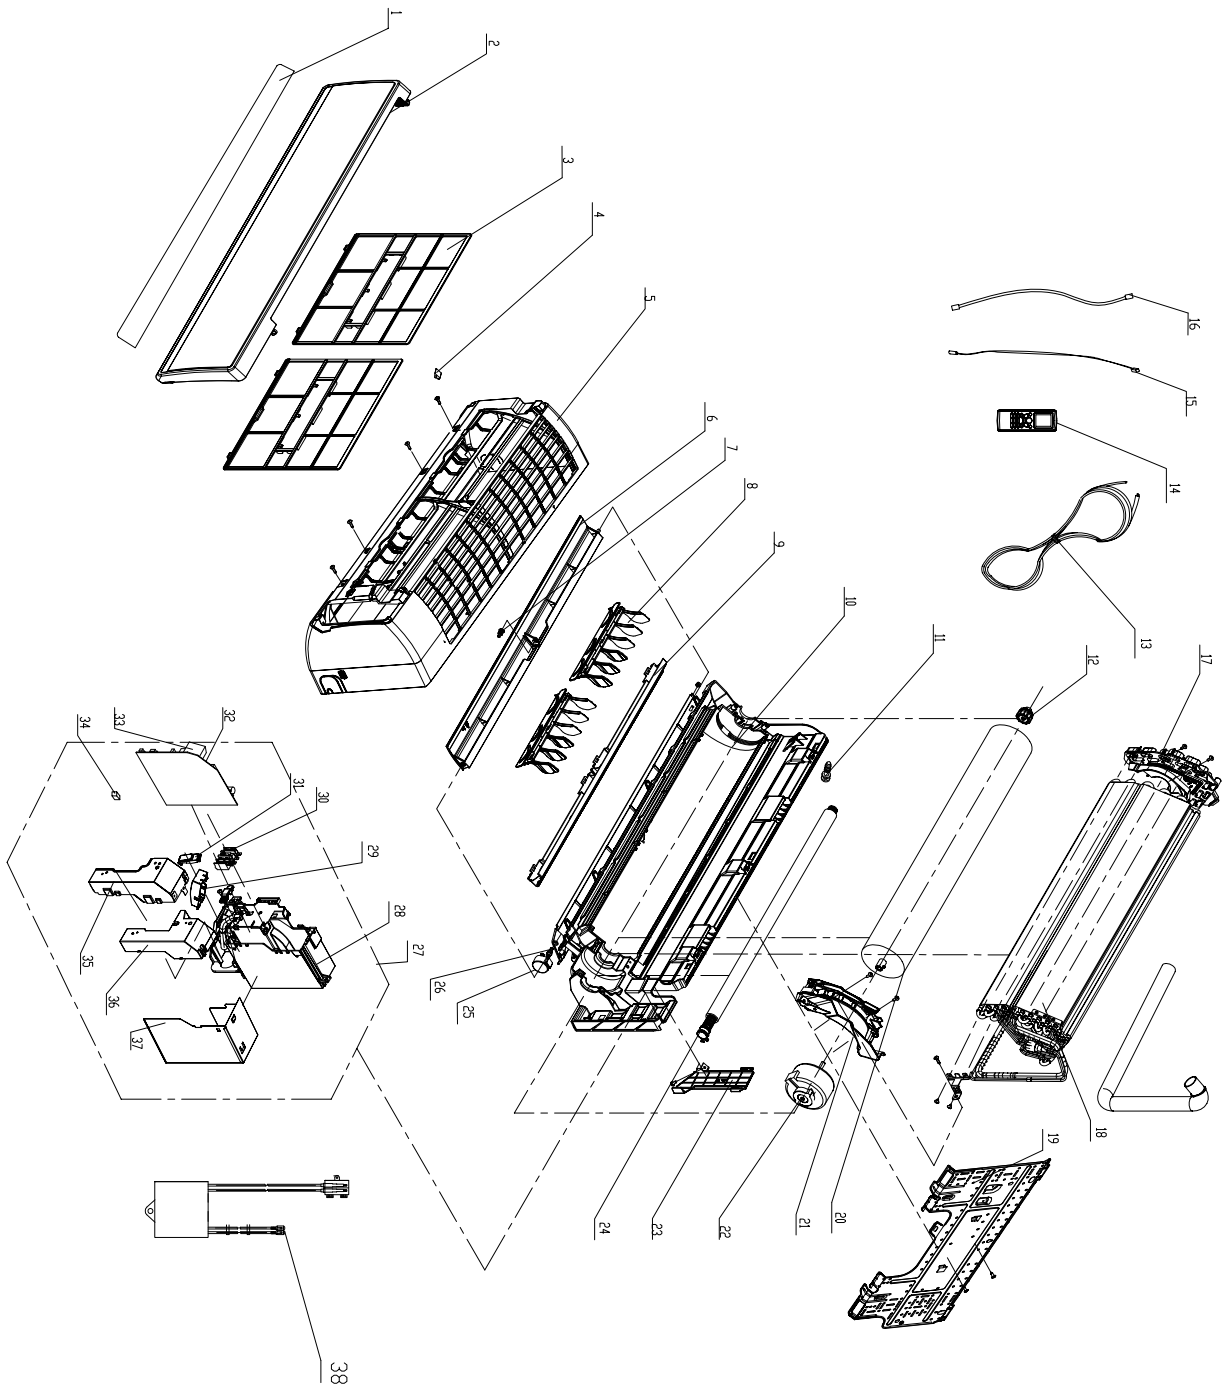

**15.5 Spare part list of indoor Unit: HZDE018**

NO.	Part Code	Part Description	qty
1	none	Decorative Strip	0
2	20012872_K88497	Front Panel Assy	1
3	11122104	Filter Sub-Assy	2
4	242520041	Screw Cover	1
5	20012873	Front Case Assy	1
6	10512140	Guide Louver	1
7	10542036	Axile Bush	1
8	10512160	Air Louver	2
9	26112232	Helicoid tongue	1
10	22202154	Rear Case assy	1
11	76712012	Water Tray Glue Plug	1
12	7651205102	O-Gasket sub-assy of Bearing	1
13	4002052317	Connecting Cable	0
14	30510460_K88497	Remote Controller	1
15	390000599	Temperature Sensor	1
16	390000453	Ambient Temperature Sensor	1
17	24212119	Evaporator Support	1
18	01002775	Evaporator Assy	1
19	01252484	Wall Mounting Frame	1
20	10352036	Cross Flow Fan	1
21	26112231	Motor Press Plate	1
22	15012146	Fan Motor	1
23	26112164	Pipe Clamp	1
24	0523001407	Drainage hose	1
25	15012086	Step Motor	1
26	10582070	Crank	1
27	20403028	Electric Box Assy	1
28	20112103	Electric Box	1
29	22242084	Indicator Light Cover	1
30	42011233	Terminal Board	1
31	22242083	Indicator shield cover	1
32	30138000072	Main Board	1
33	33010043	Capacitor CBB61	1
34	4202300115	Jumper	1
35	01592088	Shield Cover of Electric box Cover	1
36	20122123	Electric Box Cover	1
37	01592087	Shield cover of Electric Box	1
38	none	Cold Plasma Generator	0


15.6 Exploded view of outdoor unit: YBZE218

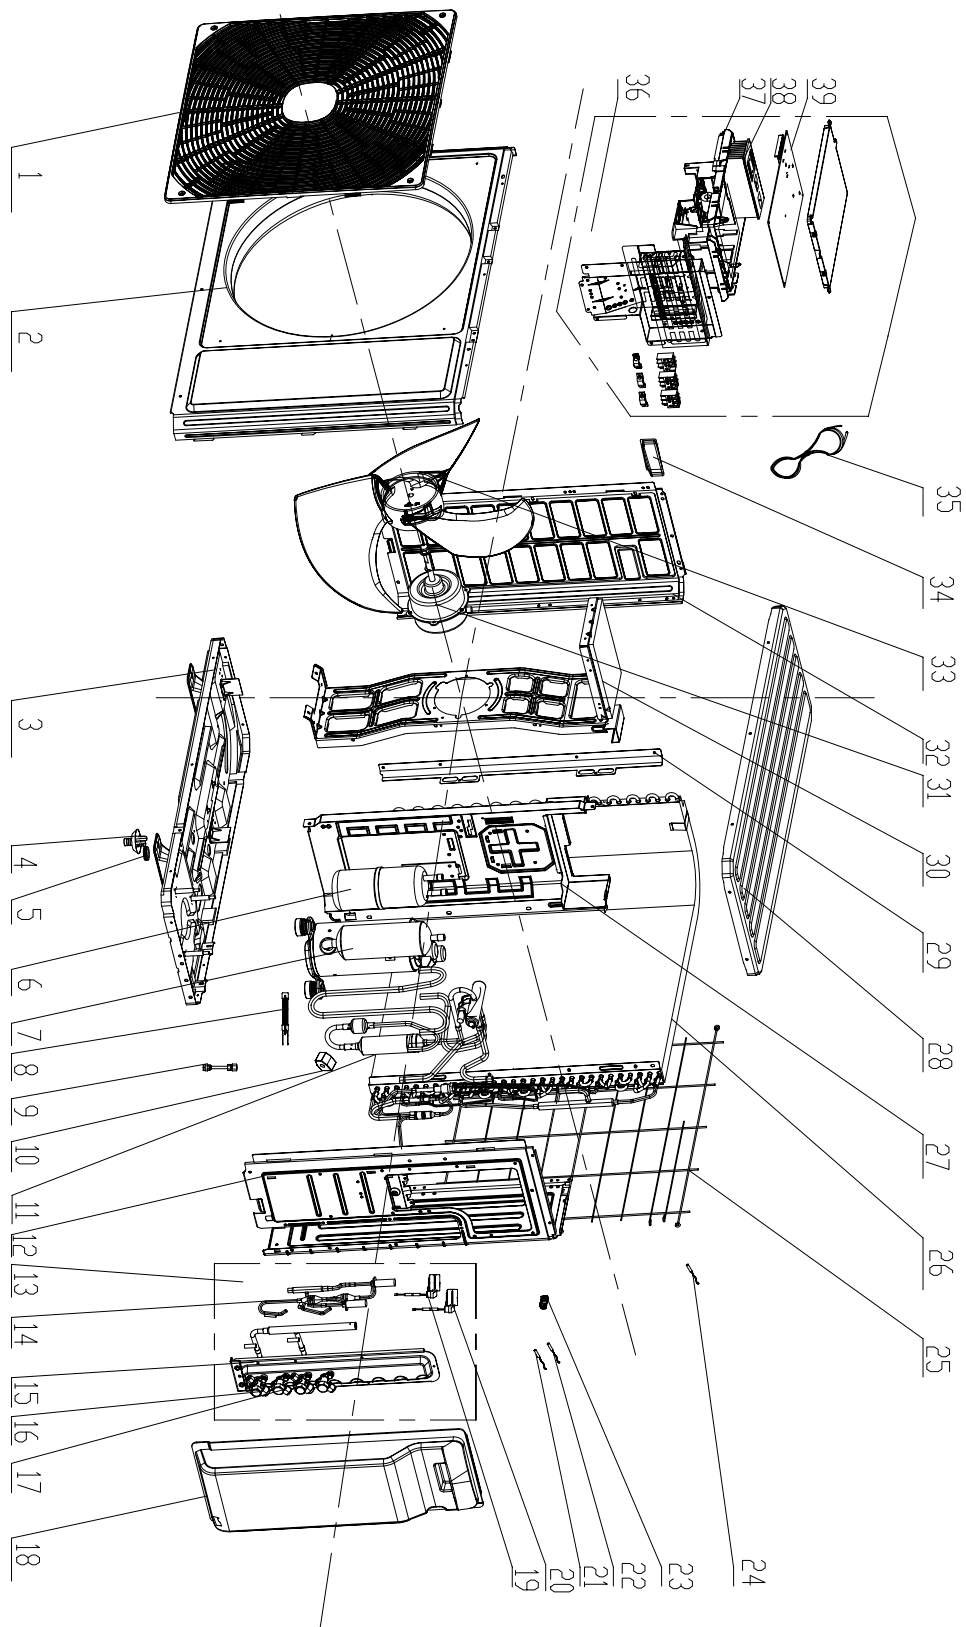

**15.7 Spare part list of outdoor Unit: YBZE218**

NO.	Part Code	Part Description	qty
1	22415002	Front Grill	1
2	01535013P	Front Panel	1
3	02803263P	Chassis Sub-assy	1
4	06123401	Drainage Connector	1
5	06813401	Drainage Hole Cap	3
6	07225017	Gas-liquid Separator Assy	1
7	00105249G	Compressor and Fittings	1
8	32003001	OH Thermistor(compressor)	1
9	none	Tube Connector Assy	0
10	4300040033	Magnet Coil	1
11	03073156	4-Way Valve Assy	1
12	01303268P	Right Side Plate	1
13	07133845	Valve Support Assy	1
14	07133846	Electronic Expansion Valve assy	1
15	0171312802P	Valve Support Sub-Assy	1
16	071302391	Cut off Valve	1
17	07130239	Cut-off Valve	1
18	20123029	Valve cover	1
19	4300008401	Electric Expand Valve Fitting	1
20	43000084	Electric expand valve fitting	1
21	3900007301	Temperature Sensor	1
22	39000073	Temperature Sensor	1
23	26115004	Wiring clamp	1
24	3900030901	Temperature Sensor	1
25	01473043	Rear Grill	1
26	01163938	Condenser Assy	1
27	0123315301	Clapboard Assy	1
28	01255005P	Top Cover	1
29	01795010	Supporting board(condenser)	1
30	01705036	Motor Support Sub-Assy	1
31	1501506402	Fan Motor	1
32	01305093P	Left Side Plate	1
33	10335008	Axial Flow Fan	1
34	26235401	Left Handle	1
35	4002054026	Connecting Cable	0
36	02613683	Electric Box Assy	1
37	20113027	Electric Box (Fireproofing)	1
38	49010252	Radiator	1
39	30148897	Main Board	1

15.8 Exploded view of outdoor unit: YBZE324

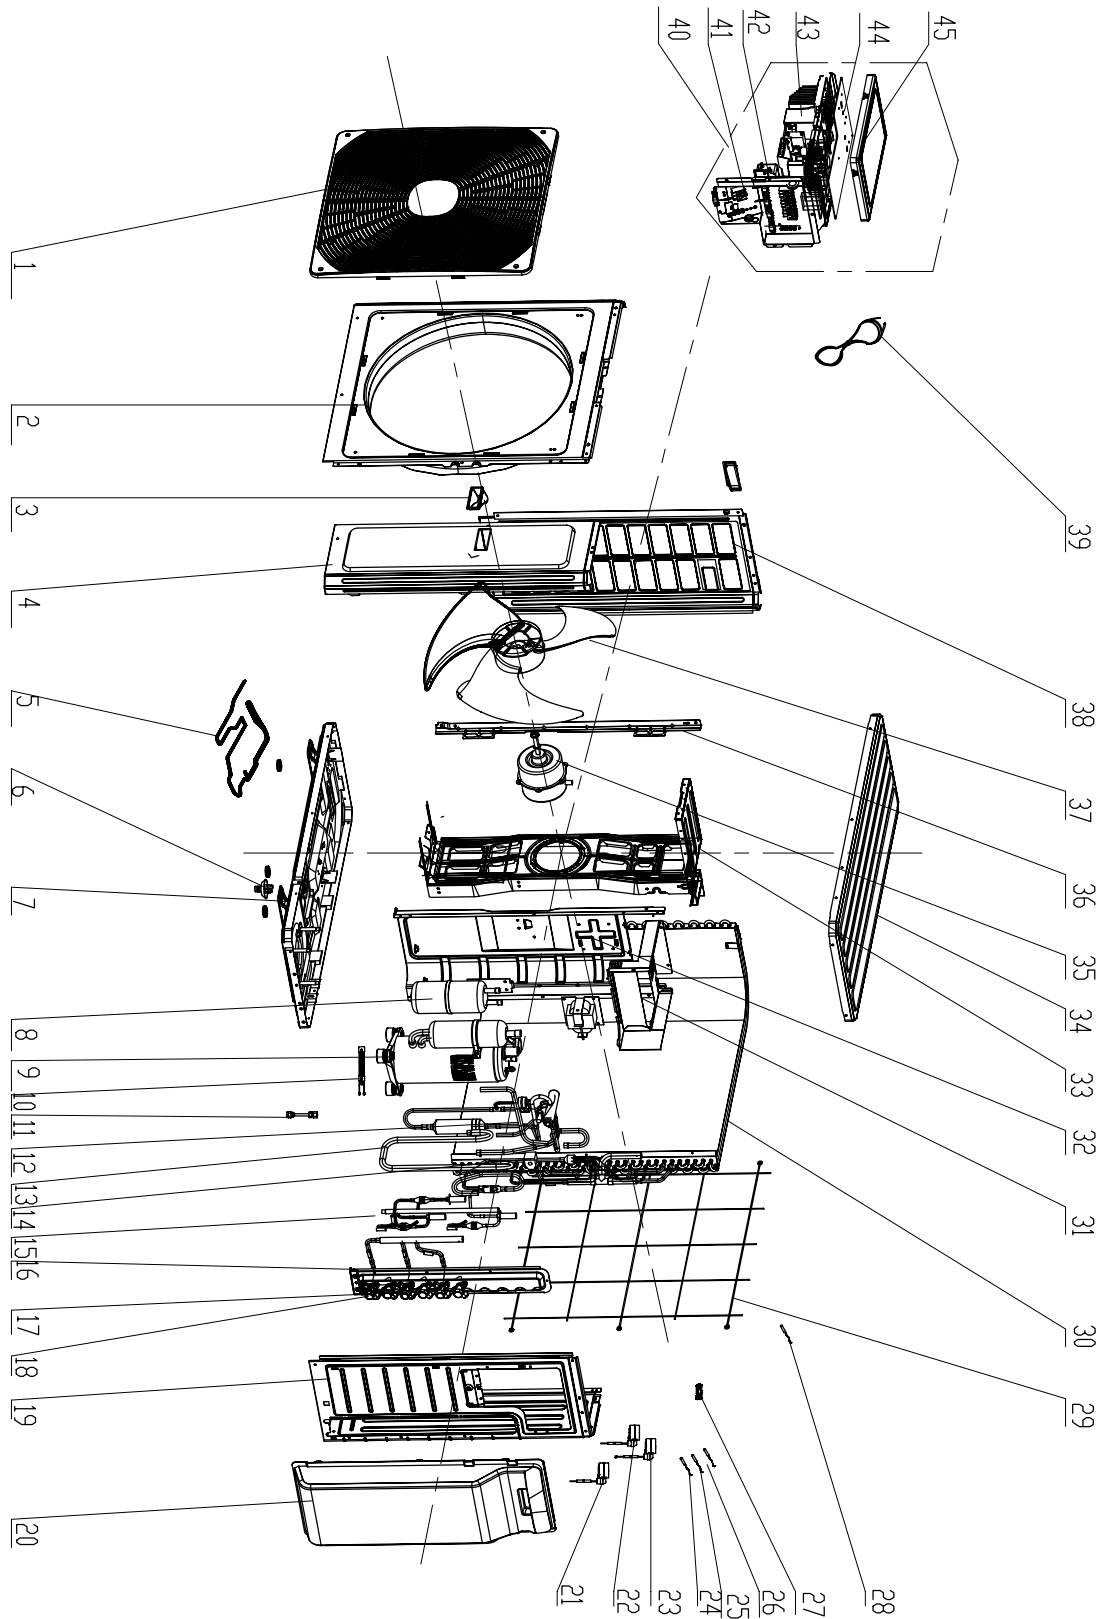




**15.9 Spare part list of outdoor Unit: YBZE324**

NO.	Part Code	Part Description	qty
1	22415003	Front Grill	1
2	01435004P	Cabinet	1
3	26235401	Left Handle	2
4	01305086P	Front Side Plate	1
5	7651000411	Electrical Heater (Chassis)	1
6	06123401	Drainage Connector	1
7	02803280P	Chassis Sub-assy	1
8	07225017	Gas-liquid Separator Assy	1
9	0010524501G	Compressor and Fittings	1
10	7651873215	Electric Heater(Compressor)	1
11	06643008	Tube Connector Assy	2
12	03073181	4-Way Valve Assy	1
13	05113723	Connection Pipe	1
14	4300040045	Magnet Coil(4-way Valve)	1
15	0713385801	Electronic Expansion Valve assy	1
16	0713385701	Valve Support Assy	1
17	07130239	Cut-off Valve	1
18	071302391	Cut off Valve	1
19	01314100009P	Right Side Plate	1
20	26904100012	Valve Cover	1
21	4300008402	Electric Expand Valve Fitting	1
22	4300008401	Electric Expand Valve Fitting	1
23	43000084	Electric expand valve fitting	1
24	3900007306	Temperature Sensor	1
25	3900007305	Temperature Sensor	1
26	3900007304	Temperature Sensor	1
27	26115004	Wiring clamp	1
28	3900030901	Temperature Sensor	1
29	01574100003	Rear Grill	1
30	01163980	Condenser Assy	1
31	01413426	Electric box (fireproofing)	1
32	01233190	Clapboard Sub-Assy	1
33	01705025	Motor Support Sub-Assy	1
34	01255006P	Top Cover	1
35	1501403402	Fan Motor	1
36	01175092	Condenser support plate	1
37	10335014	Axial Flow Fan	1
38	01305043P	Left Side Plate	1
39	4002054026	Connecting Cable	1
40	02613685	Electric Box Assy	1
41	420111041	Terminal Board	3
42	01703211	Connection Support	1
43	20113015	Electric Box	1
44	30148905	Main Board	1
45	02603217	Electric Box Cover Sub-Assy	1

15.10 Exploded view of outdoor unit: YBZE430

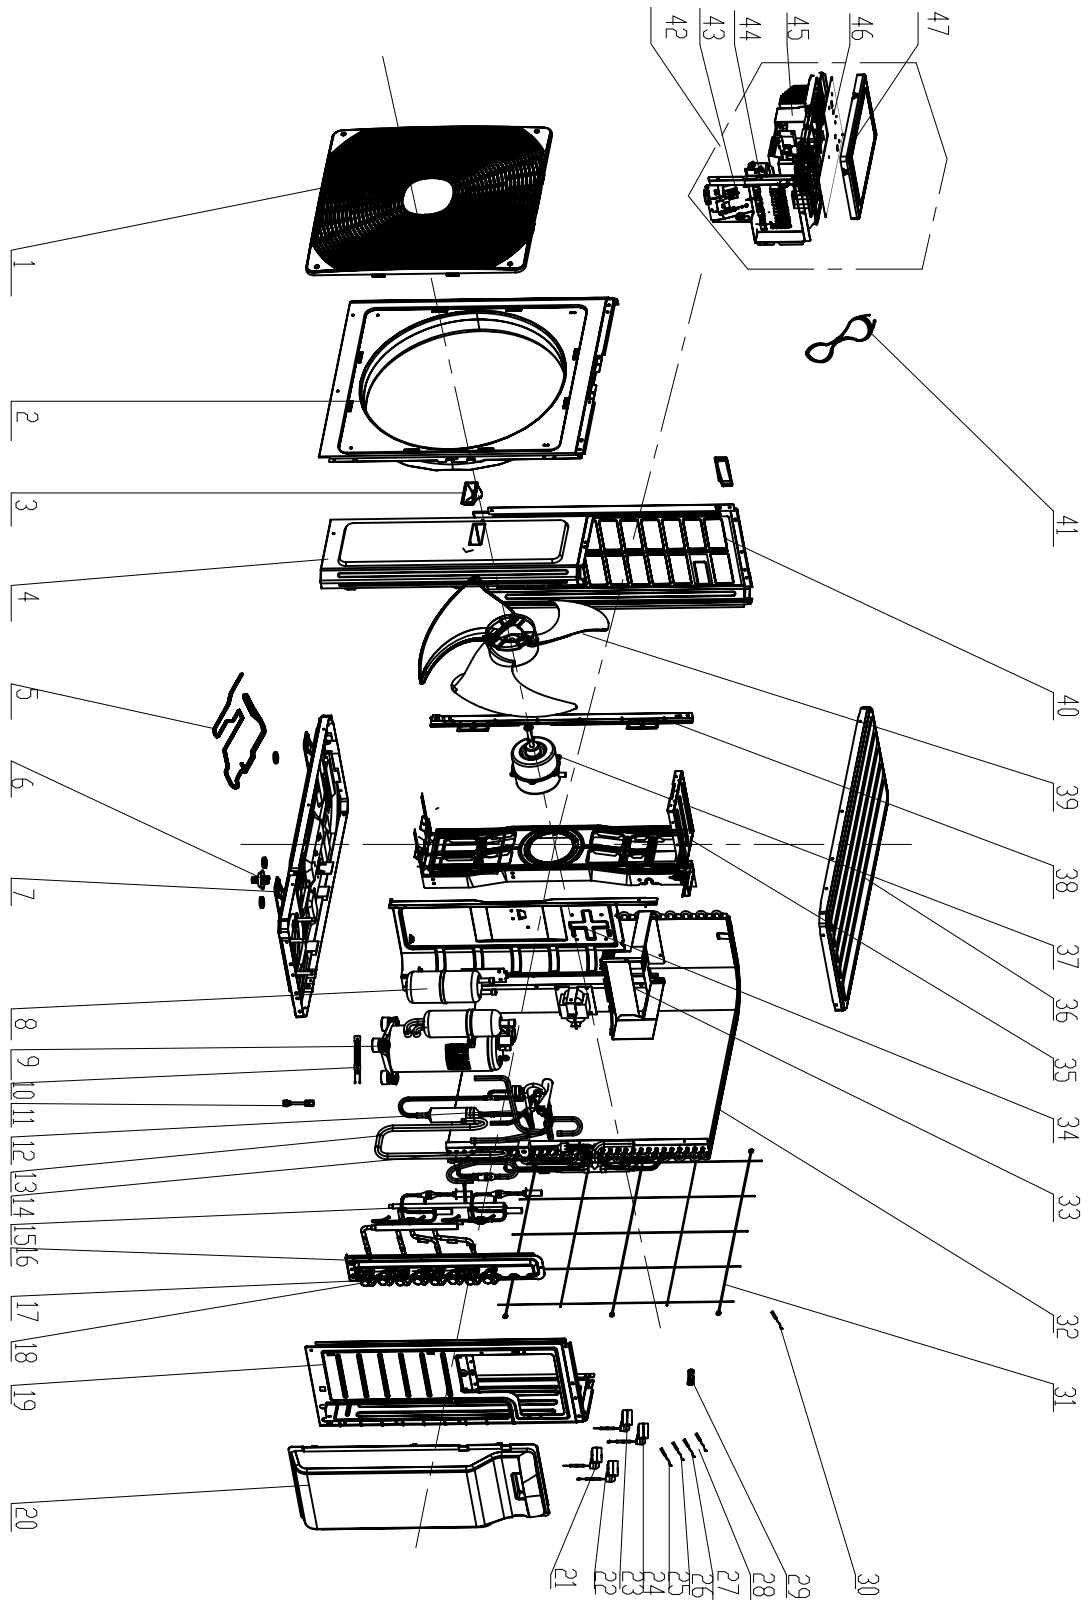

**15.11 Spare part list of outdoor Unit: YBZE430**

NO.	Part Code	Part Description	qty
1	22415003	Front Grill	1
2	01435004P	Cabinet	1
3	26235401	Left Handle	2
4	01305086P	Front Side Plate	1
5	7651000411	Electrical Heater (Chassis)	1
6	06123401	Drainage Connector	1
7	02803280P	Chassis Sub-assy	1
8	07225017	Gas-liquid Separator Assy	1
9	0010524501G	Compressor and Fittings	1
10	7651873215	Electric Heater(Compressor)	1
11	06643008	Tube Connector Assy	2
12	03073181	4-Way Valve Assy	1
13	05113723	Connection Pipe	1
14	4300040045	Magnet Coil(4-way Valve)	1
15	07133858	Electronic Expansion Valve assy	1
16	07133857	Valve Support Assy	1
17	07130239	Cut-off Valve	1
18	071302391	Cut off Valve	1
19	01314100009P	Right Side Plate	1
20	26904100012	Valve Cover	1
21	4300008403	Electric expand valve fitting	1
22	4300008402	Electric Expand Valve Fitting	1
23	4300008401	Electric Expand Valve Fitting	1
24	43000084	Electric expand valve fitting	1
25	3900007307	Temperature Sensor	1
26	3900007306	Temperature Sensor	1
27	3900007305	Temperature Sensor	1
28	3900007304	Temperature Sensor	1
29	26115004	Wiring clamp	1
30	3900030901	Temperature Sensor	1
31	01574100003	Rear Grill	1
32	01163980	Condenser Assy	1
33	01413426	Electric box (fireproofing)	1
34	01233190	Clapboard Sub-Assy	1
35	01705025	Motor Support Sub-Assy	1
36	01255006P	Top Cover	1
37	1501403402	Fan Motor	1
38	01175092	Condenser support plate	1
39	10335014	Axial Flow Fan	1
40	01305043P	Left Side Plate	1
41	4002054026	Connecting Cable	0
42	02613686	Electric Box Assy	1
43	420111041	Terminal Board	4
44	01703211	Connection Support	1
45	20113015	Electric Box	1
46	30148906	Main Board	1
47	02603217	Electric Box Cover Sub-Assy	1

# APPENDIX