

Airwell



YAZE218

Indoor Units	Outdoor Units
AWSI-HJD009/012-N11	
AWSI-CNE009/012-N11	
AWSI-SXE009/012-N11	AVVAU-TAZEZIO-HII
AWSI-DLF009/012-N11	



Table of Contents

1.		1-1
2.	PRODUCT DATA SHEET	2-1
3.	RATING CONDITIONS	3-1
4.	OUTLINE DIMENSIONS	4-1
5.	PERFORMANCE DATA	5-1
6.	OPERATING CURVES	6-1
7.	ELECTRICAL DATA	7-1
8.	WIRING DIAGRAM	8-1
9.	REFRIGERATION DIAGRAM	9-1
10.	TUBING CONNECTIONS 1	0-1
11.	CONTROL SYSTEM 1	11-1
12.	TROUBLESHOOTING 1	12-1
13.	EXPLODED VIEW AND SPARE PART LIST 1	3-1
14.	APPENDIX A 1	4-1

Airmell

1. INTRODUCTION

1.1 General

The YAZE218 is a multi-tubing system with two connected indoor units. The multi-split inverter is a high-level technology product for residential and commercial application offering comfort, low noise operation and energy saving.

1.2 Main Features

1.2.1 High Technology

- Sine wave form for compressor driving.
- DC-BL-SL (Sensor less) Inverter Compressor drive.
- High-speed MCU calculation for accurate Sine wave control.
- Smart PFC control.
- Fuzzy Logic Control

1.2.2 System Features

- R410A
- High COP ("A" class energy rating)
- Low noise levels
- IAQ (Indoor Air Quality) features (LEX/HJD series)
- Lego concept Products line of wall mounted, oor/ceiling, cassette, with capacity models of 2.5 and 3.5 kW.
- Networking connectivity.
- Pre-charged system.
- Ready for Base heater connection and logic.
- Cooling operation at outdoor temperature down to -100C.
- Heating operation at outdoor temperature down to -150C.
- HMI Display Board (Human-Machine Interface) 3x7-segment display shows both indoor and outdoor diagnostics and setting up features.
- Monitoring software(PC port).
- EEV (Electronic Expansion Valve) for each indoor unit.

1.3 Tubing Connections

Flare type interconnecting tubing to be produced on site. For further details, please refer to APPENDIX A on this manual, and to the relevant indoor service Manual.

1.4 Inbox Documentation

Each indoor unit is supplied with its own installation and operation manuals.

1—1 | SM YAZE218 1-A.2 GB

1.5 Matching Table

INDOOR UNITS				
	AWSI-HJD009-N11 AWSI-HJD012-N11			
	AWSI-CNE009-N11 AWSI-CNE012-N11			
	AWSI-SXE009-N11 AWSI-SXE012-N11			
- BASA	AWSI-DLF009-N11 AWSI-DLF012-N11			

1.6 Indoor Unit combinations

YAZE218							
Unit A	Unit B	Code Sum					
25	25	2					
25	35	2.5					
35	35	3					

Nominal Indoor Units Combination

Airwell

2. PRODUCT DATA SHEET

2.1 Outdoor YAZE218 Speci cations

Model Indoor Unit						
Model Outdoor Unit				YAZI	E218	
Installation Method of Pipe				Fla	red	
Characteristics			Units	Cooling	Heating	
Car	$a_{a}(A)$			Btu/hr	17050(4090~21840)	20480(3410~23200)
Cap				kW	5.0(1.2-6.4)	6.0(1.0-6.8)
Pde	sign			kW	5.0	5.0
Pov	ver input (4)			kW	1.47	1.7
EEF	R (Cooling) or COP(H	eating) (4)		W/W	3.40	3.53
Ene	rgy ef ciency class				A	В
SEE	ER(SCOP)/Energy La	bel			5.61/A+	4.0/A+
				V	23	30
Pov	er supply			Ph	1	
				Hz	5	0
Rat	ed current			А	6.5	7.4
Pov	ver factor				0.97	0.97
Pra	ted (IDU)			W	See DC	I Single
Pra	ted (IDU+ODU)			W	28	00
Sta	rting current			A	10	5
Circ	uit breaker rating			A	2	0
Ω.				7.		5
l õ						
lĕ∣				See DC	ISingle	
Ξ						
	Refrigerant control				EEV	
	Compressor type, i	model			Single Rotary, DCI, Panasonic 5RS132ZAD21	
	Fan type & quantity	/			Propeller	direct) x 1
	Fan speeds		Н	RPM	90	00
	Air ow		Н	m3/hr	21	60
	Sound power level		Н	dB(A)	63	
8	Sound pressure level(3)		Н	dB(A)	53	
ğ	Dimensions		WxDxH	mm	795x610x290	
ΙĔΙ	Net Weight			kg	3	9
ا ک	Package dimensior	าร	WxDxH	mm	970x65	55x395
	Packaged weight			kg	4	2
	Units per pallet			Units	e e e e e e e e e e e e e e e e e e e)
	Stacking height		units	3 le [,]	vels	
	Refrigerant type				R41	10A
	Standard charge			Kg	1.4	40
	Additional charge			-	No N	leed
		Liquid lin	e	In.(mm)	1/4"(6	6.35)
		Suction li	ne	In.(mm)	3/8"(9.53)
		Max tubir	na lenath for			
9 2	Connection	single IO	D to ODU	m	Max.	25m
	the indeer and	Height di	fference between		Max	
2	outdoor units	indoor un	iits	m	Max	.5m
		Height di	fference between	m	Max	10m
		indoor &	outdoor		iviax.	
		Max total	tubing length		Max.	30m
Ope	eration control type				Remote	control
Hea	ting elements (Option	n)		kW		
Others						

2-1 | SM YAZE218 1-A.2 GB

2.2 Indoor Units Data

2.2.1 AWSI-HJD009-N11

Model Indoor Unit				AWSI-HJD009-N11
Installation Method of Pipe				Flared
Pow	er supply		V/Ph/Hz	230V/1 Ph/50 Hz
	Fan type & quantity			Cross ow x 1
	Fan speeds	H/M/L	RPM	1050/900/800
	Air ow (1)	H/M/L	m3/hr	530/430/330
	External static pressure	Min	Pa	0
	Sound power level (2) H/M/L		dB(A)	51/ 47 /39
~	Sound pressure level(3) H/M/L		dB(A)	39/ 34 /26
NOF	Moisture removal		l/hr	1
DQ	Condenstate drain tube I.D		mm	16
=	Dimensions	WxHxD	mm	810x285x210
	Net Weight		kg	11.5
	Package dimensions WxHxD		mm	870x356x282
	Packaged weight		kg	14
	Units per pallet		units	28
	Stacking height		units	7 levels

2.2.2 AWSI-HJD012-N11

Model Indoor Unit				AWSI-HJD012-N11
Insta	Illation Method of Pipe	Flared		
Pow	er supply		V/Ph/Hz	230V/1 Ph/50 Hz
	Fan type & quantity			Cross ow x 1
	Fan speeds	H/M/L	RPM	1100/950/800
	Air ow (1)	H/M/L	m3/hr	550/450/350
	External static pressure	Min	Pa	0
	Sound power level (2) H/M/L		dB(A)	52/ 47 /39
	Sound pressure level(3)	H/M/L	dB(A)	40/ 34 /26
NOR	Moisture removal		l/hr	1.5
NDC	Condenstate drain tube I.D		mm	16
-	Dimensions	WxHxD	mm	810x285x210
	Net Weight		kg	11.5
	Package dimensions WxHxD		mm	870x356x282
	Packaged weight		kg	14
	Units per pallet		units	28
	Stacking height		units	7 levels

2.2.3 AWSI-CNE009-N11

Model Indoor Unit			AWSI-CNE009-N11	
Installation Method of Pipe			Flared	
Po	wer supply		V/Ph/Hz	230V/1 Ph/50 Hz
	Fan type & quantity			Centrifugal x 1
	Fan speeds	H/M/L	RPM	550/500/450
	Air ow (1)	H/M/L	m3/hr	420/370/320
	External static pressure	Min	Ра	0
	Sound power level (2)	H/M/L	dB(A)	49
	Sound pressure level(3)	H/M/L	dB(A)	32/30/28
NOR	Moisture removal		l/hr	0.7
DON	Condenstate drain tube I.D		mm	20
=	Dimensions	WxHxD	mm	575X575X219(625X625X40/725X725X40)
	Net Weight		kg	12.9(2.2/2.7)
	Package dimensions	WxHxD	mm	681X681X297(700X700X103/800X800X103)
	Packaged weight		kg	16.2(3.4/4.2)
	Units per pallet		units	12
	Stacking height		units	6 levels

2.2.4 AWSI-CNE012-N11

Model Indoor Unit			AWSI-CNE012-N11	
Installation Method of Pipe				Flared
Pov	ver supply		V/Ph/Hz	230V/1 Ph/50 Hz
	Fan type & quantity			Centrifugal x 1
	Fan speeds	H/M/L	RPM	600/520/450
	Air ow (1)	H/M/L	m3/hr	470/390/320
	External static pressure	Min	Pa	0
	Sound power level (2)	H/M/L	dB(A)	51
	Sound pressure level(3)	H/M/L	dB(A)	34/31/28
l o l	Moisture removal		l/hr	1.5
ğ	Condenstate drain tube I.D		mm	20
=	Dimensions	WxHxD	mm	575X575X219(625X625X40/725X725X40)
	Net Weight		kg	12.9(2.2/2.7)
	Package dimensions	WxHxD	mm	681X681X297(700X700X103/800X800X103)
	Packaged weight		kg	16.2(3.4/4.2)
	Units per pallet		units	12
	Stacking height		units	6 levels

2-3 | SM YAZE218 1-A.2 GB

Airwell

2.2.5 AWSI-SXE009-N11

Model Indoor Unit				AWSI-SXE009-N11
Installation Method of Pipe				Flared
Pow	ver supply		V/Ph/Hz	230/1/50
	Fan type & quantity			Centifugal x 2
	Fan speeds	H/M/L	RPM	760/670/500
	Air ow (1)	H/M/L	m3/hr	400/350/300
	External static pressure	Min	Pa	0
	Sound power level (2) H/M/L		dB(A)	54/49/41
~	Sound pressure level(3) H/M/L		dB(A)	42/37/29
Ь	Moisture removal		l/hr	1
	Condenstate drain tube I.D		mm	16
=	Dimensions	WxHxD	mm	820x630x190
	Net Weight		kg	21
	Package dimensions	WxHxD	mm	920x726x273
	Package weight		kg	25
	Units per pallet		units	14units per pallet
	Units stacking		units	7 levels

2.2.6 AWSI-SXE012-N11

Мос	del Indoor Unit	AWSI-SXE012-N11		
Installation Method of Pipe			Flared	
Pov	ver supply		V/Ph/Hz	230/1/50
	Fan type & quantity			Centifugal x 2
	Fan speeds	H/M/L	RPM	830/760/500
	Air ow (1)	H/M/L	m3/hr	450/400/300
	External static pressure	Min	Pa	0
	Sound power level (2) H/M/L		dB(A)	56/53/41
~	Sound pressure level(3)	H/M/L	dB(A)	45/41/30
N	Moisture removal		l/hr	1.5
	Condenstate drain tube I.D		mm	16
≤	Dimensions	WxHxD	mm	820x630x190
	Net Weight		kg	22
	Package dimensions	WxHxD	mm	920x726x273
	Package weight		kg	26
	Units per pallet		units	14units per pallet
	Units stacking		units	7 levels

2.2.7 AWSI-DLF09 DCI

Mo	odel Indoor Unit	AWSI-DLF09-DCI		
Ins	stallation Method of Pipe	Flared		
Po	wer supply		V/Ph/Hz	220-240/1/50
	Fan type & quantity			Centifugal x 2
	Fan speeds	H/M/L	RPM	920/810/740
	Air ow (1)	H/M/L	m3/hr	620/560/490
	External static pressure	Min-Max	Pa	0-30
	Sound power level (2)	H/M/L	dB(A)	50/47/44
	Sound pressure level(3)	H/M/L	dB(A)	29/26/23
l Ö	Moisture removal		l/hr	0.5
ğ	Condenstate drain tube I.D		mm	19
=	Dimensions	WxHxD	mm	750x630x200
	Net Weight		kg	20
	Package dimensions	WxHxD	mm	885x695x226
	Package weight		kg	23
	Units per pallet		units	14units per pallet
	Units stacking		units	7 levels

2.2.8 AWSI-DLF12 DCI

Mode	Model Indoor Unit			AWSI-DLF12-DCI		
Insta	llation Method of Pipe			Flared		
Powe	er supply		V/Ph/Hz	220-240/1/50		
	Fan type & quantity			Centifugal x 2		
	Fan speeds	H/M/L	RPM	980/860/730		
	Air ow (1)	H/M/L	m3/hr	650/580/490		
	External static pressure	Min-Max	Pa	0-30		
	Sound power level (2)	H/M/L	dB(A)	53/49/45		
~	Sound pressure level(3) H/M/L		dB(A)	31/27/24		
Ö	Moisture removal		l/hr	1.0		
ğ	Condenstate drain tube I.D		mm	19		
=	Dimensions	WxHxD	mm	750x630x200		
	Net Weight		kg	20		
	Package dimensions	WxHxD	mm	885x695x226		
	Package weight		kg	23		
	Units per pallet		units	14units per pallet		
	Units stacking		units	7 levels		

2-5 | SM YAZE218 1-A.2 GB

3. RATING CONDITIONS

Rating conditions in accordance with ISO 5151 and ISO 13253 (for ducted units).

Cooling:

Indoor: 27°C DB 19°C WB Outdoor: 35°C DB

Heating:

Indoor: 20°C DB Outdoor: 7°C DB 6°C WB

3.1 Operating Limits

		Indoor	Outdoor	
Cooling	Upper limit	32°C DB 23°C WB	46°C DB	
Cooling	Lower limit	21°C DB 15°C WB	-10°C DB	
Heating	Upper limit	27°C DB	24°C DB 18°C WB	
пеашу	Lower limit	10°C DB	-15°C DB -16°C WB	
Voltago	1PH	198 – 264 VAC		
vonage	3PH	N	/A	

Airwell

4. OUTLINE DIMENSIONS

4.1 Indoor Unit: HJD009/012





4.2 Indoor Unit: CNE009/012



Unit Model	Main unit A	Aain unit Insulation Front Step A B C		Front width D	Front height E	Effective Height H
25/35	219	2	9	625/725	40	230

Airwell

4.3 Indoor Unit: SXE009/012



4.4 OUTDOOR UNIT : YAZE218



4-3 | SM YAZE218 1-A.2 GB

5. PERFORMANCE DATA

5.1 Outdoor Unit YAZE218 DCI Combinations

5.1.1 Cooling

operating		Capacity					Consumpt	COP	Energy	
Indoor model	А	В	Nom.	Min.	Max.	Nom.	Min.	Max.	Nominal	Ef ciency Class
9	2500		2500	1200	3600	700	420	1000	3.57	А
12	3500		3500	1200	4300	1000	420	1200	3.50	А
9+9	2500	2500	5000	1800	6000	1470	550	2100	3.40	А
9+12	2140	2860	5000	1800	6300	1470	550	2130	3.40	А
12+12	2500	2500	5000	1800	6400	1470	550	2130	3.40	A

Nominal Indoor Units Combination

5.1.2 Heating

operating		Capacity					Consumpt	COP	Energy	
Indoor model	А	В	Nom.	Min.	Max.	Nom.	Min.	Max.	Nominal	Ef ciency Class
9	3000		3000	1000	4000	830	375	1500	3.61	А
12	4000		4000	1000	4500	1100	375	1700	3.64	А
9+9	3000	3000	6000	2000	6500	1660	580	1800	3.61	А
9+12	2570	3430	6000	2000	6650	1660	580	1890	3.61	A
12+12	3000	3000	6000	2000	6800	1660	580	1890	3.61	A

Nominal Indoor Units Combination

Airwell

5.2 HJD009

5.2.1 Cooling Capacity Factors - Unit A,B

230[V] : Indoor Fan at High Speed.

		ID COIL ENTERING AIR DB/WB TEMPERATURE [°C]				
OD COIL ENTERING AIR DB TEMPERATURE [°C]	DATA	22/15	24/17	27/19	29/21	32/23
	TC		80 -	- 110 % of nom	ninal	
-10 - 20 (protection range)	SC		80 -	105 % of nom	ninal	
(protection range)	PI		25	- 50 % of nom	inal	
	TC	0.97	1.03	1.09	1.16	1.22
25	SC	1.01	1.03	1.05	1.07	1.09
	PI	0.79	0.80	0.82	0.83	0.85
	TC	0.92	0.98	1.05	1.11	1.17
30	SC	0.98	1.00	1.03	1.05	1.07
	PI	0.88	0.89	0.91	0.92	0.94
	TC	0.87	0.94	1.00	1.06	1.13
35	SC	0.96	0.98	1.00	1.02	1.04
	PI	0.97	0.99	1.00	1.02	1.03
	TC	0.83	0.89	0.95	1.02	1.08
40	SC	0.93	0.95	0.97	1.00	1.02
	PI	1.06	1.08	1.09	1.11	1.12
	TC	0.77	0.83	0.90	0.96	1.02
46	SC	0.90	0.92	0.94	0.96	0.99
	PI	1.17	1.19	1.20	1.22	1.23

LEGEND

- TC Total Cooling Capacity
- SC Sensible Capacity
- PI Power Input
- WB Wet Bulb Temperature (°C)
- DB Dry Bulb Temperature (°C)
- ID Indoor
- OD Outdoor

5.2.2 Capacity Correction Factors



5—2 | SM YAZE218 1-A.2 GB

5.2.3 Heating Capacity Factors - Unit A,B

230[V] : Indoor Fan at High Speed.

		ID COIL ENTERING AIR DB TEMPERATURE [°C]					
OD COIL ENTERING AIR DB/WB TEMPERATURE [°C]	DATA	15	20	25			
15/ 16	TC	0.64	0.59	0.55			
-15/-10	PI	0.60	0.66	0.72			
10/ 12	TC	0.71	0.66	0.62			
-10/-12	PI	0.72	0.78	0.85			
-7/-8	TC	0.76	0.72	0.67			
	PI	0.82	0.88	0.94			
11.0	TC	0.79	0.75	0.70			
-1/-2	PI	0.86	0.92	0.98			
0/4	TC	0.81	0.76	0.72			
2/1	PI	0.89	0.95	1.01			
7/0	TC	1.04	1.00	0.96			
//6	PI	0.94	1.00	1.06			
40/0	TC	1.10	1.06	1.01			
10/9	PI	1.00	1.06	1.12			
45/40	TC	1.16	1.12	1.07			
15/12	PI	1.05	1.11	1.17			
15-24	TC		85 - 105 % of nominal				
(Protection Range)	PI		80 - 120 % of nominal				

LEGEND

- TC Total Cooling Capacity
- SC Sensible Capacity
- PI Power Input
- WB Wet Bulb Temperature (°C)
- DB Dry Bulb Temperature (°C)
- ID Indoor
- OD Outdoor

5.2.4 Capacity Correction Factors



SM YAZE218 1-A.2 GB | 5-3

Airwell

5.3 HJD012

5.3.1 Cooling Capacity Factors - Unit A,B

230[V] : Indoor Fan at High Speed.

		ID COIL ENTERING AIR DB/WB TEMPERATURE [°C]					
OD COIL ENTERING AIR DB TEMPERATURE [°C]	DATA	22/15	24/17	27/19	29/21	32/23	
10 20	TC	80 - 110 % of nominal					
-10 - 20 (protection range)	SC	80 - 105 % of nominal					
(protection range)	PI		25	- 50 % of nom	inal		
	TC	0.97	1.03	1.09	1.16	1.22	
25	SC	1.01	1.03	1.05	1.07	1.09	
	PI	0.79	0.80	0.82	0.83	0.85	
	TC	0.92	0.98	1.05	1.11	1.17	
30	SC	0.98	1.00	1.03	1.05	1.07	
	PI	0.88	0.89	0.91	0.92	0.94	
	TC	0.87	0.94	1.00	1.06	1.13	
35	SC	0.96	0.98	1.00	1.02	1.04	
	PI	0.97	0.99	1.00	1.02	1.03	
	TC	0.83	0.89	0.95	1.02	1.08	
40	SC	0.93	0.95	0.97	1.00	1.02	
	PI	1.06	1.08	1.09	1.11	1.12	
	TC	0.77	0.83	0.90	0.96	1.02	
46	SC	0.90	0.92	0.94	0.96	0.99	
	PI	1.17	1.19	1.20	1.22	1.23	

LEGEND

- TC Total Cooling Capacity
- SC Sensible Capacity
- PI Power Input
- WB Wet Bulb Temperature (°C)
- DB Dry Bulb Temperature (°C)
- ID Indoor
- OD Outdoor



5.3.2 Capacity Correction Factors

^{5—4 |} SM YAZE218 1-A.2 GB

Airwell

5.3.3 Heating Capacity Factors - Unit A,B

230[V] : Indoor Fan at High Speed.

		ID COIL ENTER	RING AIR DB TEMF	PERATURE [°C]
OD COILENTERING AIR DB/WB TEMPERATURE [°C]	DATA	15	20	25
15/ 16	TC	0.64	0.59	0.55
-13/-18	PI	0.60	0.66	0.72
10/ 12	TC	0.71	0.66	0.62
-10/-12	PI	0.72	0.78	0.85
7/ 8	TC	0.76	0.72	0.67
-77-0	PI	0.82	0.88	0.94
1/ 2	TC	0.79	0.75	0.70
- 1/-2	PI	0.86	0.92	0.98
2/4	TC	0.81	0.76	0.72
2/1	PI	0.89	0.95	1.01
7/6	TC	1.04	1.00	0.96
//6	PI	0.94	1.00	1.06
10/0	TC	1.10	1.06	1.01
10/9	PI	1.00	1.06	1.12
45/40	TC	1.16	1.12	1.07
15/12	PI	1.05	1.11	1.17
15-24	TC	8	5 - 105 % of nomina	al
(Protection Range)	PI	8	0 - 120 % of nomina	al

LEGEND

- TC Total Cooling Capacity
- SC Sensible Capacity
- PI Power Input
- WB Wet Bulb Temperature (°C)
- DB Dry Bulb Temperature (°C)
- ID Indoor
- OD Outdoor

5.3.4 Capacity Correction Factors



SM YAZE218 1-A.2 GB | 5-5

Airwell

5.4 CNE009

5.4.1 Cooling Capacity Factors - Unit A,B

230[V] : Indoor Fan at High Speed.

		ID COIL ENTERING AIR DB/WB TEMPERATURE [°C]				
OD COIL ENTERING AIR DB TEMPERATURE [°C]	DATA	22/15	24/17	27/19	29/21	32/23
	TC		80 -	- 110 % of norr	ninal	
-10 - 20 (protection range)	SC		80 -	- 105 % of nom	ninal	
	PI		25	- 50 % of nom	inal	
25	TC	0.97	1.03	1.09	1.16	1.22
	SC	1.01	1.03	1.05	1.07	1.09
	PI	0.79	0.80	0.82	0.83	0.85
	TC	0.92	0.98	1.05	1.11	1.17
30	SC	0.98	1.00	1.03	1.05	1.07
	PI	0.88	0.89	0.91	0.92	0.94
	TC	0.87	0.94	1.00	1.06	1.13
35	SC	0.96	0.98	1.00	1.02	1.04
	PI	0.97	0.99	1.00	1.02	1.03
	TC	0.83	0.89	0.95	1.02	1.08
40	SC	0.93	0.95	0.97	1.00	1.02
	PI	1.06	1.08	1.09	1.11	1.12
	TC	0.77	0.83	0.90	0.96	1.02
46	SC	0.90	0.92	0.94	0.96	0.99
	PI	1.17	1.19	1.20	1.22	1.23

LEGEND

- TC Total Cooling Capacity
- SC Sensible Capacity
- PI Power Input
- WB Wet Bulb Temperature (°C)
- DB Dry Bulb Temperature (°C)
- ID Indoor
- OD Outdoor

5.4.2 Capacity Correction Factors



Airwell

5.4.3 Heating Capacity Factors - Unit A,B

230[V] : Indoor Fan at High Speed.

		ID COIL ENTER	ING AIR DB TEMP	PERATURE [°C]	
OD COIL ENTERING AIR DB/WB TEMPERATURE [°C]	DATA	15	20	25	
15/ 16	TC	0.64	0.59	0.55	
-15/-16	PI	0.60	0.66	0.72	
40/ 42	TC	0.71	0.66	0.62	
-10/-12	PI	0.72	0.78	0.85	
7/ 0	TC	0.76	0.72	0.67	
-//-ð	PI	0.82	0.88	0.94	
4/ 0	TC	0.79	0.75	0.70	
-1/-2	PI	0.86	0.92	0.98	
2/4	TC	0.81	0.76	0.72	
2/1	PI	0.89	0.95	1.01	
7/6	TC	1.04	1.00	0.96	
//0	PI	0.94	1.00	1.06	
40/0	TC	1.10	1.06	1.01	
10/9	PI	1.00	1.06	1.12	
45/40	TC	1.16	1.12	1.07	
15/12	PI	1.05	1.11	1.17	
15-24	TC	8	5 - 105 % of nomina	al	
(Protection Range)	PI	80 - 120 % of nominal			

LEGEND

- TC Total Cooling Capacity
- SC Sensible Capacity
- PI Power Input
- WB Wet Bulb Temperature (°C)
- DB Dry Bulb Temperature (°C)
- ID Indoor
- OD Outdoor

5.4.4 Capacity Correction Factors



SM YAZE218 1-A.2 GB | 5-7

Airwell

5.5 CNE012

5.5.1 Cooling Capacity Factors - Unit A,B

230[V] : Indoor Fan at High Speed.

		ID COIL ENTERING AIR DB/WB TEMPERATURE [°C]				RE [°C]	
OD COIL ENTERING AIR DB TEMPERATURE [°C]	DATA	22/15	24/17	27/19	29/21	32/23	
	TC		80 -	· 110 % of nom	ninal		
-10 - 20 (protection range)	SC	80 - 105 % of nominal					
	PI		25	- 50 % of nom	inal		
	TC	0.97	1.03	1.09	1.16	1.22	
25	SC	1.01	1.03	1.05	1.07	1.09	
	PI	0.79	0.80	0.82	0.83	0.85	
	TC	0.92	0.98	1.05	1.11	1.17	
30	SC	0.98	1.00	1.03	1.05	1.07	
	PI	0.88	0.89	0.91	0.92	0.94	
	TC	0.87	0.94	1.00	1.06	1.13	
35	SC	0.96	0.98	1.00	1.02	1.04	
	PI	0.97	0.99	1.00	1.02	1.03	
	TC	0.83	0.89	0.95	1.02	1.08	
40	SC	0.93	0.95	0.97	1.00	1.02	
	PI	1.06	1.08	1.09	1.11	1.12	
	TC	0.77	0.83	0.90	0.96	1.02	
46	SC	0.90	0.92	0.94	0.96	0.99	
	PI	1.17	1.19	1.20	1.22	1.23	

LEGEND

- TC Total Cooling Capacity
- SC Sensible Capacity
- PI Power Input
- WB Wet Bulb Temperature (°C)
- DB Dry Bulb Temperature (°C)
- ID Indoor
- OD Outdoor

5.5.2 Capacity Correction Factors



5—8 | SM YAZE218 1-A.2 GB

SM YAZE218 1-A.2 GB | 5-9

Airwell

5.5.3 Heating Capacity Factors - Unit A,B

230[V] : Indoor Fan at High Speed.

		ID COIL ENTERING AIR DB TEMPERATURE [°C]		
OD COIL ENTERING AIR DB/WB TEMPERATURE [°C]	DATA	15	20	25
15/ 16	TC	0.64	0.59	0.55
-15/-16	PI	0.60	0.66	0.72
40/ 42	TC	0.71	0.66	0.62
-10/-12	PI	0.72	0.78	0.85
7/ 0	TC	0.76	0.72	0.67
-//-8	PI	0.82	0.88	0.94
4/ 0	TC	0.79	0.75	0.70
-1/-2	PI	0.86	0.92	0.98
0/4	TC	0.81	0.76	0.72
2/1	PI	0.89	0.95	1.01
7/0	TC	1.04	1.00	0.96
//6	PI	0.94	1.00	1.06
40/0	TC	1.10	1.06	1.01
10/9	PI	1.00	1.06	1.12
45/40	TC	1.16	1.12	1.07
15/12	PI	1.05	1.11	1.17
	TC	8	5 - 105 % of nomina	al
15-24 (Protection Range)	PI	80 - 120 % of nominal		

LEGEND

- TC Total Cooling Capacity
- SC Sensible Capacity
- PI Power Input
- WB Wet Bulb Temperature (°C)
- DB Dry Bulb Temperature (°C)
- ID Indoor
- OD Outdoor

5.5.4 Capacity Correction Factors



SM YAZE218 1-A.2 GB | 5-9

Airwell

5.6 Tubing Length Capacity Correction Factor

5.6.1 Cooling







5-10 | SM YAZE218 1-A.2 GB

6. **OPERATING CURVES**

6.1 Model: YAZE218 DCI

6.1.1 Cooling – Technician Mode





SM YAZE218 1-A.2 GB | 6-1

6.1.2 Heating – Technician Mode



Airwell



6-2 | SM YAZE218 1-A.2 GB



6.1.3 Tubing Length correction Factor



Airwell

7. ELECTRICAL DATA

Power Supply	1 PH, 220-240 VAC, 50Hz	
Connected to	Outdoor	
Maximum Current	13.7 A	
Inrush Current	35 A	
Starting Current	10A	
Circuit breaker	20A	
Power supply wiring no. x cross section	3 X 2.0 mm ²	
Interconnecting cable no. x cross section	4 X 1.5 mm ² (For each IDU)	

Note:

- Inrush current is the current when power is up. (charging the DC capacitors at outdoor unit controller).
- Starting current is the current when starting the compressor

NOTE

Power wiring cord should comply with local lows and electrical regulations requirements.

7-1 | SM YAZE218 1-A.2 GB

8. WIRING DIAGRAMS

8.1 YAZE218 Wiring Diagrams



SM YAZE218 1-A.2 GB | 8-1

Airwell

9. **REFRIGERATION DIAGRAMS**

9.1 YAZE218 Cooling Mode



9.2 YAZE218 Heating Mode



Airwell

10. TUBING CONNECTIONS





Tube (inch) TORQUE(N.m.)	1/4"	3/8"	1/2"	5/8"	3/4"
FLARE NUTS	11-13	40-45	60-65	70-75	80-85
VALVE CAP	13-20	13-20	18-25	18-25	40-50
SERVICE PORT CAP	11-13	11-13	11-13	11-13	11-13

Tightening Torque Values

- 1. Valve Protection Cap-end
- 2. Use Allen Wrench to open/close
- the Refrigerant Valve
- 3. Valve Protection Cap
- 4. Refrigerant Valve
- 5. Service Port Cap
- 6. Flare Nut
- 7. Unit Back Side
- 8. Copper Tube

When the outdoor unit is installed above the indoor unit an oil trap is required every 5m along the suction line at the lowest point of the riser. In case the indoor unit is installed above the outdoor, no trap is required.

11. CONTROL SYSTEM

11.1 Abbreviations

Abbreviation	De nition
A/C	Air Condition
BMS	Building Management System
PWR	System Power
CTT	Compressor Top Temperature sensor
DCI	DC Inverter
EEV	Electronic Expansion Valve
HE	Heating Element
НМІ	Human Machine Interface
HST	Heat Sink Temperature sensor
Hz	Hertz (1/sec) – electrical frequency
ICT	Indoor Coil Temperature (RT2) sensor
IDU	Indoor Unit
MCU	Micro Controller Unit
OAT	Outdoor Air Temperature sensor
ОСТ	ODU Coil Temperature sensor
ODU	Outdoor Unit
OFAN	Outdoor Fan
PFC	Power Factor Corrector
RAC	Residential A/C
RC	Reverse Cycle (Heat Pump)
RGT	Return Gas Temperature sensor
RPS	Rounds per second (mechanical speed)
RV	Reverse Valve
SB,STBY	Stand By
SUCT	Compressor Suction Temperature sensor
S/W	Software
TBD	To Be De ned
TMR	Timer

11.2Product Overview

11.2.1 Compressor

DC brush less and sensor less motor inverter driven compressor.

11.2.2 Outdoor Fan

AC motor.

11.2.3 RV

Reverse Valve set the direction of refrigerant ow in the system, thus setting the operation mode for cooling or heating.

When the solenoid is powered, system will work in heat mode.

11.2.4 EEV's

Expansion valve operated by step motor which controls the size of the ori ce.

11.2.5 HMI

Three "7-Segments"

Hirwell

11.2.6 Temperature Sensors

- CTT Compressor Top Temperature
- OAT Outdoor Air Temperature
- OMT- Outdoor middle coil temperature
- OCT Outdoor Coil (heat exchanger) Temperature
- HST Heat Sink Temperature
- RGT1..4 Indoor Unit 1..4 Returned Gas Temperatures
- RLT 1..4 Indoor Unit 1..4 Returned Liquid Temperatures

11.2.7 Base Heater

Heating element designed to melt any ice that is accumulated on the outdoor unit base during low heating operation.

11.3 General Operating Rules

11.3.1 Initialization

Initialization process is the rst operation done each time power is up. The targets of the initialization are:

- Addressing of IDU's
- Identi cation of connected IDU's
- IDU Matching Check
- EEV's homing (reset position)
- Restoring Parameters from EEPROM/Jumpers/Dipswitches

11.3.1.1 IDU's Initialization

11.3.1.1.1 Capacity Codes Setting

The capacity groups of the IDU's are translated into capacity codes according to the following table:

Capacity group	Capacity Code
0 (2.0 - 2.9kw)	1.2
1 (3.0 - 3.9kw)	1.5
2 (4.0 - 4.9kw)	1.7
3 (5.0 to 6.0)	2
4 (6.1kw and above)	3

11.3.1.1.2 Indoor Total Capacity Test

This test is performed only for Multi split units.

The test comes to check the total IDU capacity code to match the outdoor unit capacity. The capacity groups of the IDU's are translated into capacity codes according to the following table:

Capacity group	Capacity Code
0	1
1	1.5
2	1.7
3	2
4	3

For Model Q (YBDE018/YAZE218)

	Total Detected IDU Code (Sum of IDU code)		
Detected IDU units	Minimum Allowed	Maximum Allowed	
2	2	3	

Whenever the sum of the IDU code is outside the range the unit will be forced to Idle Mode and report: "Mismatch between IDU and ODU models".

If the unit is forced to Idle Mode, then it will keep checking this condition (the indoor total capacity test) in order to prevent system latch up. Once the condition is ne, the fault will be cleared and the unit will proceed to normal operation.

11.3.1.1.3 Model Plug & Indoor Capacity Test

This test is performed for both single split channel and multi split channel:

Test	How to check?	Error to report?	System Action (ODU Mode)
Jumper is inserted/DIP is con gured	ODU model is 0 (zero).	"Missing ODU configuration"	Force to Idle mode.
Jumper/DIP is not de ned in the software	ODU model is not Q.	"Undefined ODU model"	Force to Idle mode
IDU-ODU capacity group mismatch	When ODU model is Q, and the capacity group is not allowed.	"Mismatch between IDU and ODU models"	Except for ITU mode, Force to Idle mode

The following combinations show the allowed and not allowed capacity group:

			Is it allowed capacity group?				
ODU Model	Communication channel		Indoor Capacity				
				1	2	3	4
Single- Non Hydro		No	No	No	Yes	No	
	Single- Hyd		No	No	No	No	No
Q		Com Channel 1	Yes	Yes	No	No	No
(YBDE018/YAZE218)		Com Channel 2	Yes	Yes	No	No	No
		Com Channel 3	No	No	No	No	No
		Com Channel 4	No	No	No	No	No

Notes

- 1. The outdoor will keep establishing normal communication with the indoor or DMSMP.
- 2. The outdoor will show diagnostics normally.
- 3. The SB LED will keep ON as long as the power is on.
- 4. Once the unit is forced to Idle due to either of the above, it will keep checking the above items, until the system is recovered.

11.3.2 Communication with Indoor Units

11.3.2.1 Communication Failures De nition

Two types of communication failures are diagnosed. The communication failures are checked separately for each IDU channel.

Airwell

11.3.2.2 'Bad Communication' fault

The system keeps a balance of a good/bad communication packet ratio for each active communication channel. When the ratio getting high , system enters 'Bad Communication' fault.

11.3.2.3 'No Communication' fault

If no legal transmission or no message received for 30 seconds, system enters 'No Communication' fault.

When in 'No Communication' fault, the system will act as following:

- If there is no communication in all channels, the following will be performed:
 - 1. The unit changes to SB.
 - 2. The system will scan all the communication.
 - 3. Each channel that is identi ed as 'no communication' channel will be referred as STBY unit.
 - 4. The unit resumes its normal operation with only the operative channels.

11.3.3 Temperature Measurements

11.3.3.1 Thermistor failures de nition

Thermistor	Type a – Disconnected	Type b – Shorted
OAT	Temp < -30°C	Temp > 75°C
OCT	Temp < -35°C	Temp > 75°C
CTT	Temp < -30°C	Temp > 125°C
HST	Temp < -30°C	Temp > 125°C
OMT	Temp < -35°C	Temp > 75°C
ICT	Temp < -30°C	Temp > 75°C
RGT	Temp < -30°C	Temp > 126°C
RLT	Temp < -30°C	Temp > 126°C

11.3.3.2 System responses for different thermistor failure

Thermistor	Default value	System Reaction
OCT	43°C	
OAT	6°C	
СТТ	43°C	Compressor is stopped.
OMT	43°C	Compressor is stopped in cooling mode.
HST	43°C	Compressor is stopped.
RGT	43°C	
RLT	43°C	
ICT	43°C	

11.3.4 Flash Memory Programming

In order to upgrade the ODU software the auxiliary port will be used. A special application should be run on a PC to transmit the new rmware. Special programmer (Panasonic) should be used to update the S/W.

11-4 | SM YAZE218 1-A.2 GB

11.4 Indoor Unit Control

11.4.1 Indoor Fan Control

10 Indoor fan speeds are determined for each model. 5 speeds for each mode cool/dry/fan or heat.

When user sets the indoor fan speed to a xed speed (Low/ Medium/ High), unit will operate constantly at set speed.

When Auto Fan is selected, indoor unit controller can operate in all speeds. The actual speed is set according to the cool/heat load.

Turbo Speed

The Turbo speed is activated during the rst 30 minutes of unit operation when auto fan speed is selected and under the following conditions:

Difference between set point and actual room temperature is higher than 3 degrees. Room temperature is higher than 22°C for cooling or less than 25°C for heating.

11.4.2 Cool Mode

NLOAD is calculated according to the difference between actual room temperature and user set point temperature by PI control.

In high/ medium/ low indoor fan user setting, unit will operate fan in selected speed. In Auto Fan user setting, fan speed will be adjusted automatically according to the calculated NLOAD.

11.4.3 Heat Mode

NLOAD is calculated according to the difference between actual room temperature and user set point temperature by PI control.

In high/ medium/ low indoor fan user setting, unit will operate fan in selected speed. In Auto Fan user setting, fan speed will be adjusted automatically according to the calculated NLOAD.

11.4.3.1 Temperature Compensation

In wall mounted, ducted, and cassette models, 3 degrees are reduced from room temperature reading (except when in I-Feel mode), to compensate for temperature difference between high and low areas in the heated room, and for coil heat radiation on room thermistor.

The temperature compensation can be enabled/disabled by shortening of J2 on the indoor unit controller.

Model	J2 Shorted	J2 Opened
Wall mounted	Compensation Disabled	Compensation Enabled
Cassette	Compensation Enabled	Compensation Disabled
Ducted	Compensation Enabled	Compensation Disabled
Floor/Ceiling	Compensation Disabled	Compensation Enabled
11.4.3.2 Indoor Fan Control in Heat Mode

Indoor fan speed depends on the indoor coil temperature:



11.4.4 Auto Cool/Heat Mode

When in auto cool heat mode unit will automatically select between cool and heat mode according to the difference between actual room temperature and user set point temperature (Δ T). Unit will switch from cool to heat when compressor is off for 3 minutes, and Δ T < -3. Unit will switch from heat to cool when compressor is off for 5 minutes, and Δ T < -3.

11.4.5 Dry Mode

As long as room temperature is higher then the set point, indoor fan will work in low speed and compressor will work between 0 and MaxNLOADIF1C Hz.

When the room temperature is lower than the set point, compressor will be switched OFF and indoor fan will cycle 3 minutes OFF, 1 minute ON.

11.4.6 Indoor Units Operation when Indoor Unit Mode is Different than

Outdoor Unit Mode

- Open louvers according to user selection.
- Indoor fan is forced to OFF.

11.4.7 Indoor Unit Dry Contact

Indoor unit Dry contact has two alternative functions that are selected by J9.

Status	Function	Contact = Open	Contact = Short
J9 = Open	Presence Detector Connection	No Limit	Forced to STBY
J9 = Short	Power Shedding Function	No Limit	Limit NLOAD

11.4.8 Operating the Unit from the Mode Button

Forced operation allows to start, stop and operate in Cooling or Heating, in pre-set temperature according to the following table:

Forced operation Mode	Pre-set Temperature
Cooling	200C
Heating	280C

11.4.9 On Unit Controls and Indicators

11.4.9.1 All Models Except for Floor/Ceiling model

STAND BY INDICATOR	Lights up when the Air Conditioner is connected to power and ready to receive the R/C commands	
OPERATION INDICATOR	Lights up during operation. Blinks for 300 msec to announce that a R/C infrared signal has been received and stored. Blinks continuously during protections (according to the relevant spec section).	
TIMER INDICATOR	Lights up during Timer and Sleep operation.	
FILTER INDICATOR	Lights up when Air Filter needs to be cleaned.	
COOLING INDICATOR	Lights up when system is switched to Cool Mode by using the Mode Switch on the unit.	
HEATING INDICATOR	Lights up when system is switched Heat Mode by using the Mode Switch on the unit.	
Mode SWITCH (COOL/HEAT/OFF)	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$	
RESET / FILTER SWITCH	For short pressing: When Filter LED is on - turn off the FILTER INDICATOR after a clean lter has been reinstalled. When Filter LED is off – enable/disable the buzzer announcer, if selected.	

Airwell

11.4.9.2 Floor/Ceiling Model

STANDBY INDICATOR	Lights up when the Air Conditioner is connected to power and is ready for operation	
OPERATE INDICATOR	 Lights up during operation. Blinks for 300 msec to announce that a R/C infrared signal has been received and stored. Blinks continuously during protections (according to the relevant spec section). 	
TIMER INDICATOR	Lights up during Timer and Sleep operation.	
FILTER INDICATOR	 Lights up when Air Filter needs to be cleaned. Blinks during Water Over Flow in PXD models. (Cf. Sect. 7.3) 	
COOLING INDICATOR	Lights up when system is switched to Cool Mode by using the Mode Switch on the unit.	
HEATING INDICATOR	Lights up when system is switched Heat Mode by using the Mode Switch on the unit.	
FAN MODE INDICATOR	Lights up in Fan Mode activated by local switches.	
FAN SPEED INDICATORS	 L Lights up when IFAN setting is Low. M Lights up when IFAN setting is Medium. H Lights up when IFAN setting is High. A Lights up when IFAN setting is Auto. 	
TEMP. SETTING INDICATORS	Each one of the seven indicators indicates the following SPT: 18, 20, 22, 24, 26, 28, 30 [°C]. The odd number temperatures are indicated by turning on the two adjacent indicators.	
FAN SPEED BUTTON	Press this button to change the speed of the IFAN. Each pressing change the speed in the sequence of: $L \to M \to H \to Auto \to L \to$	
TEMP. SETTING UP BUTTON	Pressing this button increases the SPT by 1°C. Note: The Max SPT is 30°C.	
TEMP. SETTING DOWN BUTTON	Pressing this button decreases the SPT by 1oc. Note: The Min SPT is 18oc.	
MODE BUTTON	Every short pressing , the next operation mode is selected, in this order: SB \rightarrow Cool Mode \rightarrow Heat Mode \rightarrow SB \rightarrow In long pressing system enters diagnostic mode.	
POWER BUTTON	Toggle the unit between OPER & STBY modes.	
RESET / FILTER BUTTON	For short pressing: When Filter LED is on - turn off the FILTER INDICATOR after a clean Iter has been reinstalled. When Filter LED is off – enable/disable the buzzer announcer, if selected. In long pressing system enters set up mode (if in SB).	

11-8 | SM YAZE218 1-A.2 GB

Airwell

11.5Run Mode

Run mode is the default operation mode of the system. This is the standard operation mode that is active in eld application (at customer site).

System can go from run mode to other operation modes through keyboard or serial ports.

11.5.1 Mode Setting

Mode de nes the ODU operation mode. There are three possible operation modes:

STBY – standby mode

COOL - the unit operating at cooling cycle

HEAT - the unit operating at heat pump cycle

The ODU de ne the system operation mode according to three methods set by the display key board:

11.5.1.1 First request priority

The rst IDU which requests different mode than STBY mode will set the new operation mode. The mode will change once all the units exit the current operation mode.

11.5.1.2 Priority unit

If an IDU is de ned as a priority unit, the operational mode will be de ned according to that unit request, unless the unit is at STBY mode.

In case priority unit is SB, the mode will be set acceding to rst request priority.

11.5.1.3 Forced operation mode

If forced mode is enabled than the ODU mode will be forced according to the Forced mode input: Open 7 COOL Short 7 HEAT

The ODU will go to SB if all the IDU are at SB or at different modes.

11.5.1.4 SB Input

The ODU will change mode between COOL/HEAT and Idle according to the STBY dry contact input as follows:

STBY input	ODU mode		
Short	SB		
Short 7 Open	last mode		
Open	according normal mode selection		

11.5.2 Compressor Speed Control

11.5.2.1 Compressor Min On/Off time

Compressor minimum OFF time is MinOFFTime minutes except during Deicing protection. Compressor minimum ON time is MinOnTime minutes, minimum ON time is ignored during protections, and when unit is turned to STBY.

Airwell

11.5.2.2 Compressor Speed calculation

During normal operation (excluding protections), the compressor speed is limited by the following table:

Min Speed Cool (check) Max Speed Cool		Min Speed Heat	Max Speed Heat	
20	95	20	95	

11.5.2.3 Indoor Units NLOAD calculation

The NLOAD setting is done by the indoor unit controller, based on a PI control scheme. The actual NLOAD to be sent to the outdoor unit controller is based on the preliminary LOAD calculation, the indoor fan speed, and the power shedding function.

NLOAD limits as a function of indoor fan speed:

Indoor Fan Speed	Maximum NLOAD Cooling	Maximum NLOAD Heating	
Low	Max NLOADIF1C	127	
Medium	Max NLOADIF2C	127	
High	Max NLOADIF3C	127	
Turbo	Max NLOADIF4C	127	
Auto	Max NLOADIF5C	127	

NLOAD limits as a function of power shedding:

Mode	Power Shedding OFF	Power Shedding ON
Cool	No limit	Nominal Cooling
Heat	No limit	Nominal Heating

11.5.2.4 Outdoor Unit NLOAD calculation





Compressor speed will be set between the minimum speed and the max speed according to the ODU NLOAD

11.5.2.5 Speed Step Limitations

11.5.2.5.1 Step 1 and step 2

The compressor speed cannot go below Step1Freq or above Step2Freq during 3 continuous minutes once after the compressor starts up when the ODU unit changes from STBY

11.5.2.5.2 Step 3 limit

The speed cannot go higher than Step3Freq unless it was operating for more than 1 continuous minute between Step3Freq – 5 and Step3Freq.

11.5.3 EEV Control

11.5.3.1 Operation Range

The EEV operation range is de ned according to the operation mode as following

ODU Mode	Normal operation	IDU inactive	Compressor off
SB	400		
COOL	50 to 480 0		400
HEAT	50 to 480	50 to 120	

11.5.3.2 Reaching target value rules

For all cases except at EEV initialization procedure, each EEV can move no more than 20 steps at a time.

When required the EEV's move, one by one in sequence, until the target position is achieved for every EEV.

The following diagram presents the EEV steps until the target position is set.



11.5.3.3 EEV homing

When compressor stops or unit is power on, the following is performed immediately:

- All EEV's are set to 400.
- They remain in this position for 80 Sec.
- Then, close to 60 steps below 0 to ensure full closure, then proceed to normal operation

11.5.3.4 EEV Opening Determination

The target EEV value is the sum of open loop value (OL) and a result of the accumulative correction values (CV).

 $EEVi = EEVOLi + \sum EEVCVi$

EEVi is the EEV opening for each 'i' IDU.

11.5.3.5 EEV initial value determination

The EEV initial value (open loop) is determined according to the number of the active indoor units, mode, and the capacity code of the unit.

11.5.3.6 Balance time

During the rst 5 minutes after SB, the correction is not calculated. After that, the correction value is updated every 30 seconds.

11.5.3.7 EEV corrections

The corrections in cool mode will keep the compressor in the proper operation temperature and will balance between the indoor units by controlling their super heat.

11-12 | SM YAZE218 1-A.2 GB

11.5.3.8 Accumulative correction value storage

For each combination of active IDUs, the accumulated EEV correction value (for each IDU) will be stored in the memory. Default correction values after power up are zero.

11.5.4 Outdoor Fan Speed Control

The OFAN operation keeps the outdoor heat exchanger temperature within a prede ned values by increasing or reducing the OFAN speed. Whenever the OFAN speed is abnormal, the OMT and OCT sensors need to be checked.

11.5.4.1 Behavior when there is a failure in OFAN

Whenever OFAN fault occurs, the compressor will be stopped immediately.

11.5.4.2 Protection Behavior

• In cool mode the OFAN will operate according to CTT or HST protection level:

Protection level	Action
SR, D1 or D2	OFAN will go to the Max. speed
Stop-Compressor	Continue to operate for maximum 3 minutes at 500 rpm or until normal level is achieved.

11.5.4.3 OFAN Force On condition

If HST is faulty, OFAN will continue to operate for 3 minutes at 500 rpm after COMP is OFF.

11.5.4.4 Night mode

Upon receiving night mode, the OFAN will be limited to max NightRPM speed only in Cool. It will be back to its normal operation when receiving the mode is cleared.

11.5.5 RV State Setting

During heat mode (except during Deicing) RV is ON. During cool/SB mode, RV is OFF. RV status will be changed only if COMP is OFF for 3 minutes or more.

11.5.6 Base Heater Setting

Base heater should be ON when unit is in heating and according to the below graph. If OAT is disconnected, Base heater will be ON when unit is in heating. Base Heater at heating mode



Airwell

11.5.7 Thermodynamic Protections

Protection level de nition

Five protection levels are de ned: Normal – No protection status is ON. Stop-Rise (SR) – System is in protection, rst level D1 - System is in protection, second level D2 - System is in protection third level Stop-Compressor (SC) – System is in protection fourth level

11.5.8 IDU Protection Level

The overall protection level of the indoor units will be the worst protection status among the all indoor units.

11.5.9 IDU Protections

ІСТ	ICT Trend					
	Fast Increasing	Increasing	No change	Decreasing	Fast Decrea- sing	
ICT < -2	SC	SC	SC	SC	SC	
-2 ≤ ICT < 0	D1	D1	D2	D2	D2	
0 ≤ ICT < 2	SR	SR	D1	D2	D2	
2 ≤ ICT < 4	SR	SR	SR	D1	D2	
4 ≤ ICT < 6	Norm	Norm	SR	SR	D1	
6 ≤ ICT < 8	Norm	Norm	Norm	SR	SR	
8 ≤ ICT	Normal					

11.5.9.1 Indoor Coil Defrost Protection

11.5.9.2 Indoor Coil over Heating Protection

	ICT Trend					
ICT	Fast Decreasing	Decreasing	No Change	Increasing	Fast Increasing	
ICT > 55	SC	SC	SC	SC	SC	
53 < ICT ≤ 55	D1	D1	D2	D2	D2	
49 < ICT ≤ 53	SR	SR	D1	D2	D2	
47 < ICT ≤ 49	SR	SR	SR	D1	D2	
45 < ICT ≤ 47	Norm	Norm	SR	SR	D1	
43 < ICT ≤ 45	Norm	Norm	Norm	SR	SR	
ICT ≤ 43	Normal					

11-14 | SM YAZE218 1-A.2 GB

11.5.10 ODU Protections

There are 3 ODU protections:

- Compressor overheating
- Heat sink overheating
- System over power

Operation logic of all protections is the same. The controlled input (CTT, HST, or PWR) is controlled by changing the protection level using the fuzzy logic algorithm according the input level and the change rate.

There are two sets of POWER values, the selection of the values are set according to the state of the Power-Shed dry contact input.

Power-Shed input open 7 Power1

Power-Shed input sort 7 Power2

Protection level	Comp Overheat (CTT)	Heat Sink (HST)	Power1	Power2
Stop compressor	105	84	2800	2100
Down 2	100	80	2650	1988
Down 1	95	77	2500	1875
Stop rise	90	74	2350	1763
Normal	85	71	2350	1763

The following table summarizes the basic levels of each protection.

11.5.10.1 Total Protection Level De nition

The total protection level is de ned by the higher level of protection received.

11.5.11 Deicing

11.5.11.1 Deicing Starting Conditions

Deicing operation will start when either one of the following conditions exist: Case 1: OCT < OAT – DST AND TLD > DI Case 2: OCT < OAT – 12 AND TLD > 30 minutes. Case 3: OCT is Invalid AND TLD > DI Case 4: Unit is just switched to STBY AND OCT < OAT – DST Case 5: NLOAD = 0 AND OCT < OAT - DST Case 6: OAT is invalid AND OCT< DST AND TLD > DI AND Compressor ON Time > CTMR minutes OCT – Outdoor Coil Temperature OAT – Outdoor Air Temperature TLD – Time from Last Deicing DI – Deicing Interval (Time Interval between Two Deicing) DST – Deicing static threshold (Temperature)

Deicing interval time when compressor is rst started in heat mode, is 10 minutes if OCT < -2, and is 40 minutes in other cases.

Deicing interval time is changed (increased/ decreased in 10 minutes steps) as a function of deicing time. If deicing time is shorter then former deicing time, the deicing interval time will be increased. If deicing time is longer then former deicing time, the deicing interval time will be decreased.

11.5.11.2 Deicing Protection Procedure



T1 = T2 = 36 seconds, T3 = 6 seconds

11.5.11.3 Condensate Water over Flow Protection



Level Connector Top View

Each of the pins P1, P2, P3 can have two options:

- 1 When it is shorted with P4
- 0 When it is not shorted to P4

11.5.11.4 3 Levels Logic (used in oor/ceiling models)

P2	P3	Level
0	0	L0
1	0	L1
1	1	L2&3
0	1	L4



11.5.11.5 1 Level Logic (used in all models except for oor/ceiling models)



Airwell

11.6Installation Test Mode

11.6.1 Test Objectives

- Find tube-communication wires mismatch.
- Instruct the technician to match the tubes to the communication wires.
- Find EEV or tubing problems.

11.6.2 Test Concept

- The unit will open each EEV separately in cooling mode.
- Detect a temperature drop on the indoor unit.
- Based on the temperature drop, the system can match the tube to the indoor unit.

11.6.3 Test Rules

Before starting the installation/technician test, make sure for the following:

- 1. No indoor communication channel is connected to non existing tube channel.
- 2. The number of the connected/installed indoor unit is set properly.
- 3. All the EEVs are connected properly to the right EEV channels.
- 4. No mix between the indoor unit's tubes, each indoor unit must have its own tubes connected properly to the outdoor unit.

If the rules above are not respected, the test results will make no sense.

11.6.4 Installation test menu



11.6.5 How to do installation test

1. While the power is off, set the following labels on the wires:

On unit Label	C _A	C _B	(C _c)	(C _D)
Wire name (Marked by technician)	1	2	3	4
For non connected indoor units, there is no need for label.				

2. Set the number of the connected/installed indoor units.

- Elect 'nID' number under 'it', the selected number blinks. The factory setting value is 4.
- 3. Enter installation test (by either of the following):
 - a. Select 'bgn' under 'it' menu.
 - b. According to the following:

11-18 | SM YAZE218 1-A.2 GB



4. During the test, the unit will show count down counter (in minutes). The test maximum time is 20 minutes.

5. When the test is nished, the system will show the test result, pass or fail.

- 6. You can scroll the menu to observe:
 - a. Observe the matrix result
 - b. Guide for problem correction.

7. For xing problem, copy on paper the results displayed results, power off the unit, and then x the problem accordingly. Do not do any wire xing under power!

Note:

You can exit the installation test any moment by pressing Esc for 5 seconds. When exiting the test, the system will still keep the latest result from the previous test.

Airwell

11.6.6 Faults during the test

Upon the following, the system will terminate installation test:

Fault (display)	Reasons
'OAT' blink	Outdoor ambient temperature is too clod, cannot run installation test.
ʻIDU' blink	The selected number of the installed indoor units by the technician does not match the number of indoor units detected by the system.
Display indoor or outdoor fault as in diagnostics	Check indoor and outdoor diagnostics. ICT disconnected will be tested during the rst 3 minutes of installation test.

Note: When the system terminates the tests due to the problem above, the matrix results will present partial test.

How to interpret the results (pf sub menu):

Test Result (pf)	Interpretation
NUL	The test has never been done before.
PAS	The test is pass
FAL	The test is fail
ΟΑΤ	Outdoor air temperature is lower than 5 degrees. The installation test cannot be done.
IDU	The selected number of the installed indoor units by the technician does not match the number of indoor units detected by the system.
FLT	IDU or ODU fault

11-20 | SM YAZE218 1-A.2 GB

11.6.7 Matrix Table Test Result (tbl) & Problem Correction (Crt)

The technician has to use labels on the indoor wires connected to the outdoor

On unit Label	C _A	C _B	(C _c)	(C _D)
x=Wire name (Marked by technician)	1	2	3	4
For non connected indoor units, there is no need for label.				

The result is presented in the following way:

Present for 2 sec	Present for 2 Sec.	Interpretation
x—:	Cz	 'x' is the wire name (1,2,3,4) 'z' is the communication channel (A,b,c,d) 'x—:Cz' is move wire 'x' to communication channel Cz
Ey—:	W	 'y' is the EEV channel name (A,b,c,d) 'w' can be: 1. 'c' is closed 2. 'o' is open 3. 'oc' is either close or open.
x—:	C_	 'x' is the wire name (1,2,3,4) 'C_' is unknown communication channel. 'x—:C_' is the system does not know where to move wire 'x'.

Possible reasons for 'o' and 'c':

Term	Possible reasons		
ʻC'	 Clogged EEV EEV Coil problem EEV driver problem Clogged indoor unit or part of it. Problem in ICT sensor Extremely high load at the indoor side 		
ʻO'	Valve always openEEV coil problemDriver Problem		

Examples:

#	¥			Problem Correction (Crt)		
	Display	Technician Interpretation	Display	Technician Interpretation		
	2:C b	Keep wire 2 on communication channel $C_{_B}$	1:C A	Keep wire 1 inside communication channel C_{A}		
1.2	3:C c	Keep Wire 3 on communication channel $\rm C_c$	2:C b	Keep wire 2 inside communication channel $C_{_{\rm B}}$		
	1:C d	Move wire 1 to communication channel $C_{_D}$	3:C c	keep wire 3 inside communication channel $\rm C_{c}$		
	4:C A	Move Wire 4 to communication channel C_A	4:C d	Keep wire 4 inside communication channel $\mathrm{C}_{_{\mathrm{D}}}$		
	HMI Display	Technician Interpretation	HMI Display	Technician Interpretation		
	1:C b	Move wire 1 to communication channel $\rm C_{_B}$	4:C d	Keep wire 4 to communication channel $\rm C_{_D}$		
3,4	2:C A	Move wire 2 to communication channel C_A	1:C b	Move wire 1 to communication channel $C_{_B}$		
			2:C A	Move wire 2 to communication channel C_A		
i			нмі			
	HMI Display	Technician Interpretation	Display	Technician Interpretation		
	4:C d	Keep wire 4 in communication channel C	1:C d	Move wire 1 to communication channel Cd		
5.6	1:C b	Move wire 1 to communication channel C	2:C c	Move wire 2 to communication channel Cc		
0,0	2:C c	Move wire 2 to communication Channel C	3:C_	Do not know where to put wire 3		
	3:C A	Move wire3 to communication Channel C	4:C_	Do not know where to put wire 4		
	EA -:0	EEV of channel A is always open	EA-:0	EEV of channel A is always open		
			Eb-:0	EEV of channel B is always open		
			НМІ			
	HMI Display	Technician Interpretation	Display	Technician Interpretation		
	1:C A	Keep wire 1 in communication channel C.	2:C c	Move wire 2 to communication Channel Cc		
78	2:C b	Keep wire 2 in communication channel Cb	3:C A	Move wire 3 to communication Channel C _A		
1,0	3:C d	Move wire 3 to communication channel Cd	1:C_	Do not know where to put wire 1		
	4:C c	Move wire 4 to communication channel Cc	4:C_	Do not know where to put wire 4		
	Ec-:c	EEV of channel C is always close	Eb-:c	EEV of channel B is always close		
			Ed-:c	EEV of channel D is always close		
	нмі					
	Display	Technician Interpretation	нмі			
	4:C d	Keep wire 4 in communication channel Cd	Display	Technician Interpretation		
	2:C c	Move wire 2 to communication channel Cc	3: Cc	Keep wire 3 in communication channel Cc		
9,10	1:C_	Do not know where to put wire 1	4:Cd	Keep wire 4 in communication channel Cd		
	3:C_	Do not know where to put wire 3	1:C A	Move wire 1 to communication channel C_A		
	EA-:Oc	EEV in channel A can be open or close	EA-:O	EEV in channel A is always open		
	EB-:Oc	EEV in channel B can be open or close				

11-22 | SM YAZE218 1-A.2 GB

Airwell

11.6.8 Matrix Table Test Result (tbl)

		IDU channels on the DMSMP			
		Channel1 (j=1)	Channel2 (j=2)	Channel3 (j=3)	Channel4 (j=4)
EEV channe- ls on the DMSMP	EEV1 (i=1)	X ₁ =T/F/N/C	Y ₁ =T/F/N/C	Z ₁ =T/F/N/C	W ₁ =T/F/N/C
	EEV2 (i=2)	X ₂ =T/F/N/C	Y ₂ =T/F/N/C	Z ₂ =T/F/N/C	W ₂ =T/F/N/C
	EEV3 (i=3)	X ₃ =T/F/N/C	Y ₃ =T/F/N/C	Z ₃ =T/F/N/C	W ₃ =T/F/N/C
	EEV4 (i=4)	X ₄ =T/F/N/C	Y ₄ =T/F/N/C	Z ₄ =T/F/N/C	W ₄ =T/F/N/C

Stored Matrix Type [Rows, Column]	How to present?
0 × 0	Repeat: r1(keep 2 sec) $\rightarrow X_1Y_1$ (keep 2 sec)
2 X 2	Repeat: r2 (keep 2 sec) $\rightarrow X_2Y_2 \rightarrow$ (keep 2 sec)
	Repeat: r1 (keep 2 sec) $\rightarrow X_1Y_1Z_1$ (keep 2 sec)
3 x 3	Repeat: r2 (keep 2 sec) $\rightarrow X_2Y_2Z_2$ (keep 2 sec)
	Repeat: r3 (keep 2 sec) $\rightarrow X_{3}Y_{3}Z_{3}$ (keep 2 sec)
	Repeat: r1 (keep 2 sec) \rightarrow X ₁ Y ₁ Z ₁ (keep 2 sec) \rightarrow W ₁ (keep 2 sec)
4 4	Repeat: r2 (keep 2 sec) $\rightarrow X_2Y_2Z_2$ (keep 2 sec) $\rightarrow W_2$ (keep 2 sec)
4 X 4	Repeat: r3 (keep 2 sec) $\rightarrow X_{3}Y_{3}Z_{3}$ (keep 2 sec) $\rightarrow W_{3}$ (keep 2 sec)
	Repeat: r4 (keep 2 sec) $\rightarrow X_4 Y_4 Z_4$ (keep 2 sec) $\rightarrow W_4$ (keep 2 sec)

Note: Scrolling between r1, r2, r3, and r4 is done through the 'Up' and 'Down' buttons

De nitions

Term	De nition
'F'	Clogged EEV EEV Coil problem EEV driver problem Clogged indoor unit or part of it. Problem in ICT sensor Extremely high load at the indoor side
'T'	Valve always open EEV coil problem Driver Problem
С	Non detected channel
N	Null- never done before

Airwell

11.7 Technician Test Mode

This test is aimed for the technicians to check the system under a preset compressor and outdoor fan values while the expansion values will function according to the normal running mode.

11.7.1 Entering technician mode

- This mode is entered through the outdoor unit using the HMI (refer to user interface section).
- o It can be selected either for cool or heat.
- Technician test is not possible to enter during deicer.

11.7.2 Technician mode procedure

- All the connected indoor units will enter technician test at high indoor fan speed.
- The outdoor unit will be working normally (according to the run mode control logic) except the following changes:
- o The dry contacts inputs will be ignored.
- Protections will be operative for stop compressor (not to be implemented in the current version).
- The compressor and the outdoor fan will be working in target preset values according to the following table:

Technician Test				
Lloit	Compresso	r Speed	OFAN aroud	
Unit	Cool	Heat	OFAN speed	
YAZ218	66	88	900rpm	

11.7.3 Exiting technician mode

Technician mode will be exited either when:

- Escaping by the HMI (exiting the ttC or ttH menus)
- o 60 minutes are passed from entering

11-24 | SM YAZE218 1-A.2 GB

11.8 User Interface

11.8.1 User interface description

- o The user interface uses three 7 segments, and 4 keys.
- **o** Keys, The 4 keys are:
 - Scroll used to scroll between options (up and down)
 - Select use to select an option
 - Escape Will go up one level in the menu
- o The user interface concept is Tree menus.
- o Active selection or status will be indicated by blinking the display.

11.8.2 Keys functionality

- o Scrolling will be done whenever the button is pressed.
- **o** When scrolling alpha values, if the scroll button is held in, the selection will change at the rate of one step per second.
- When changing/scrolling numeric value, if the scroll button is held in, the selection will change at the rate of one step per second. After 2 seconds, if the button continues to be held in, the rate of change will increase to 10 steps per second.
- **o** The display will not roll over during selection (for example stop/Ode/Dia/Stp/Par/stop)

Airwell

11.8.3 Menus

11.8.3.1 Main Menu

p		
Default (refer to the note)		
Technician Test (tt)		
	Technician Test Cool (ttC)	
· · · · · · · · · · · · · · · · · · ·	Technician Test Cool (ttH)	
Installation Test (it)		
	Number of IDUs (nID)- IDU Numbers	
		1
		2
		3
		4
	Begin test (bgn)	
	⁼Test Result (pf)- <i>InstTestResult</i>	
	(NUL/PAS/FAL/OAT/IDU/FLT)	
	Matrix Table Test Result (tbl) InstTestMatrixResult	
	Problem Correction (Crt)	
Diagnostics (dia)		
	Outdoor Unit (o)	
		Outdoor Unit (oxx)
· · · · · · · · · · · · · · · · · · ·	Indoor Unit A (a)	
		Indoor Unit A (axx)
	Indoor Unit B (b)	Indeer Linit D. (hyur)
ļ		Indoor Unit B (bxx)
,		Indoor Unit C (cvv)
<u>.</u>		
· · · · · · · · · · · ·		Indoor Unit D (dyy)
Set Up (Stp)		
	First IDU Wins (idu)	
l III		
° · · · · · · · · · · · · · · · · · · ·	=IDU A is master (a-p)	
	IDU B is master (b-p)	
	≓IDU C is master (c-p)	
	IDU D is master (d-p)	
	Forced mode' input (Frc)	
Status (Stt)		
	<u>= (i mer (i r)</u>	<u> </u>

Notes:

- 1. The default presentation will be alternating repeatedly among the following for single and multi split units:
 - o the mode of the unit (CI/Ht/Sb) shown for 2 sec.
 - o ('id' + the number of communicative IDUs number) shown for 2 sec.
 - o Active fault (among ODU or IDUs), each to be shown for 2 sec.
- 2. In diagnostics menu:
 - o xx means failure code.

11-26 | SM YAZE218 1-A.2 GB

Airwell

- Maximum 5 faults are presented for each unit (each IDUs/ODU). When no faults "-- " sign will be shown.
- o The active faults have higher priority for presentation than non active ones.
- Non active faults are presented according to their chronological order, starting from the latest one.
- o Whenever a new active fault occurs, it will be presented immediately.
- o Active faults are blinking, where non active ones do not.
- 3. The Status menu will be enabled to be presented and navigated, only by pressing select + escape together for more than 5 seconds under the main menu.
- 4. Exiting 'Status' menu and its sub-menus back to the main menu is done by either pressing escape or after continuous 60 minutes out of any press.
- 5. Technician Test mode, once is selected, is exited after 60 minutes from entry.
- 6. All the menus, except Status and its sub-menu, Technician Test once selected, are automatically exited to the main menu after 10 continuous minute out of any press.
- 7. When Technician test cool or heat menus are selected (operative), it will be blinking constantly until, this menu is escaped.
- 8. When the installation test begins, the system will show up count down based (refer to the installation test. At the end of the installation test, the result will be presented.
- 9. For the indoor diagnostics, whenever there is no-communication with indoor unit or indoor unit is not detected, 'no-communication' will be shown under the relevant indoor unit diagnostics. In addition to the indoor diagnostics, these faults will be also shown as well under the default show.
- 10. When Alpha and numeric values are combined, they will be separated by dot.

Airwell

11.8.3.2 Status (Sub Menu)



11-28 | SM YAZE218 1-A.2 GB

Notes:

- For the temperature display, when a thermistor is shorted, disconnected show FLT, when it's disabled show DIS.
- It is possible to present a number between 999 and 99,999 by alternating between two numbers (each number is presented for 1 second). The two numbers format is (off)xx, yyy.
- o The compressor time is measured in hour's units.
- **o** The modes: Cool, Heat, Dry, Fan Auto will be presented: CL, Ht, dr, FAn, AUt.
- o The current is the AC current of the unit.
- **o** The models A, b, C, and d will be presented -A-, -b-, -c-, and -d- respectively.

					ODU	Compres	sor Type
ODU4	ODU3	ODU2	ODU1	ODU0	Model	Single Split	Multi Split
ON	OFF	OFF	OFF	OFF	Р	Sanyo	Mitsubishi
ON	OFF	OFF	OFF	ON	Q	Panasonic	Panasonic
ON	OFF	OFF	ON	OFF	R		
ON	OFF	OFF	ON	ON	S		
ON	OFF	ON	OFF	OFF	Т		
ON	OFF	ON	OFF	ON	U		
ON	OFF	ON	ON	OFF	V		
ON	OFF	ON	ON	ON	W		
ON	ON	OFF	OFF	OFF	Х		
ON	ON	OFF	OFF	ON	Y		
ON	ON	OFF	ON	OFF	Z		
ON	ON	OFF	ON	ON	AA		
ON	ON	ON	OFF	OFF	AB		
ON	ON	ON	OFF	ON	AC		
ON	ON	ON	ON	OFF	AD		
ON	ON	ON	ON	ON	AE		

11.9Jumper settings

Airwell

11.10 System Parameters

11.10.1 General parameters

	1	Defect			1	Defect	1
#	Name	Value	Units	#	Name	Value	Units
1.	MinOFFTime	3	minute	35.	DEICT2	36	second
2.	MinONTime	3	minute	36.	DEICT3	6	second
3.	HzUp_CTTOH	2 / 60 /8	Hz / Sec/NA	37.	DSTF	12	°C
4.	HzDown1_CTTOH	-2 / 60 /5	Hz / Sec/NA	38.	ОМТОН0	50	°C
5.	HzDown2_CTTOH	-4 / 60 /3	Hz / Sec/NA	39.	OMTOH1	53	°C
6.	HzDown1_CCROC	-1 / 2 /1	Hz / Sec/NA	40.	OMTOH2	56	°C
7.	HzUp_ CCROC	1 / 30 /7	Hz / Sec/NA	41.	ОМТОН3	59	°C
8.	HzUp_ICTDef	2 /60 / 8	Hz / Sec/NA	42.	ОМТОН4	61	°C
9.	HzDown1_ICTDef	-3 / 60 / 4	Hz / Sec/NA	43.	ОМТОН5	63	°C
10.	HzDown2_ICTDef	-4 / 30 / 2	Hz / Sec/NA	44.	EEVLearning	1	
11.	HzUp_HSTOH	2 / 60 /8	Hz / Sec/NA	45.	EEVTimeSingleDSH	30	second
12.	HzDown1_HSTOH	-3 / 60 / 4	Hz / Sec/NA	46.	EEVTimeSingleCTT	40	second
13.	HzDown2_HSTOH	-4/30/2	Hz / Sec/NA	47.	EEVTimeMultiSHC	30	second
14.	HzUp_ICTOH	2 /60 / 8	Hz / Sec/NA	48.	EEVTimeCTTProtection	60	second
15.	HzDown1_ICTOH	-3/60/4	Hz / Sec/NA	49.	EEVTimeSCProtection	30	second
16.	HzDown2_ICTOH	-4 / 30 / 2	Hz / Sec/NA	50.	EEVTimeMultiDSHC	30	second
17.	HzUp_OMTOH	2 /60 / 8	Hz / Sec/NA	51.	EEVTimeMultiCTT	30	second
18.	HzDown1_OMTOH	-3 / 60 / 4	Hz / Sec/NA	52.	EEVTimeMultiSCH	30	second
19.	HzDown2_OMTOH	-4 / 30 / 2	Hz / Sec/NA	53.	EEVTimeMultiDSHH	30	second
20.	HzUp_ OVRPWR	1 / 30 /7	Hz / Sec/NA	54.	EEVTimeMultiFBH	30	Second
21.	HzDown1_OVRPWR	-1 / 2 /1	Hz / Sec/NA	55.	InstTestIFANHighITime	120	Second
22.	StopRise	0/1/6	Hz / Sec/NA	56.	InstTestIFANOffTime	120	Second
23.	DImin	30	minute	57.	InstTestDeltaICT	15	°C
24.	DImax	120	Minute	58.	OATInstTst	5	°C
25.	TimeD	1	Minute	59.	PI_Time_Cnst	50	Sec
26.	DTmin	2	Minute	60.	EEVLogicType	1	NA
27.	DIT	10	Minute	61.	MaxLWTHeating	59	°C
28.	CTMRUP	10	Minute		·		-
29.	DIF	30	Minute				
30.	ТСТ	240	Second				
31.	CompBalanceTimeA	5	minute				
32.	IDUChngBalanceTime	2	minute				
33.	CompBalanceTimeIA	10	minute				
34.	DEICT1	60	second				

11.10.2 ODU Model Dependent Parameters

#	Name	Q YAZ218	Unit	
1.	MinFreqC	20	Hz	
2.	MinFreqCA	40	Hz	
3.	MaxFreqCSingle	79	Hz	
4.	MaxFreqCMulti	95	Hz	
5.	MinFreqH	20	Hz	
6.	MinFreqHA	40	Hz	
7.	MaxFreqHSingle	84	Hz	
8.	MaxFregHMulti	95	Hz	
9.	HPAtMinFreaC	42	°C	
10.	HPAtMinFregCA	55	°C	
11	HPAtMinEreaH	42	0°C	
12	HPAtMinEreaHA	55	0°C	
13	LoadDeadZone	I-T	<u> </u>	
14	DeicerFreg	80	Hz	
15	ODUCodeC		112	
10.	ODUCodel			
10.	EEVCpatyCrat	1-1 1 T		
17.		1-1	LI-7	
10.	Step1Freq	40	HZ	
19.	Step2Freq	55	HZ	
20.	Step3Freq	65	Hz	
21.	Step4Freq	/5	HZ	
22.	Step1Time	3	min	
23.	Step2Time	5	min	
24.	Step3Time	1	min	
25.	Step4Time	1	min	
26.	OilLubricationFreq	32	Hz	
27.	OFMinRPMC	NA	*10RPM	
28.	OFMinRPMH	NA	*10RPM	
29.	OFMaxRPM	NA	*10RPM	
30.	NightRPM	NA	*10RPM	
31.	OFNNoiseMaxRPM	NA	*10RPM	
32.	СТТОНО	78	°C	
33.	CTTOH1	85	°C	
34.	СТТОН2	90	°C	
35.	СТТОНЗ	95	°C	
36	СТТОН4	100	0°	
37	СТТОН5	105	0°C	
38	CCROCO	9.0	A	
30	CCR0C1	10.5	Δ	
40		11.5	Δ	
40. /1	CCR0C3	13.0		
41.		65	× °C	
4 <u>2</u> .		71	°C	
43.		74		
44.	пътон2 нотона	/4	°C	
45.	HSTOH3	//	U U	
46.	HSTOH4	80	°C	
47.	HSTOH5	84	°C	
48.	EEVSCProtection	12	°C	
49.	EEVMinOperOpenC	50	Step	
50.	EEVMaxOperOpenC	480	Step	
51.	EEVMinOperOpenH	60	Step	
52.	EEVMaxOperOpenH	480	Step	
53.	EEVMinOperOpenHInactive	50	Step	
54.	EEVMaxOperOpenHInactive	120	Step	
55	InvAccel	3	NA	
55.		1		
JD.	IIIVDecei		NA	

#	Name	Q YAZ218	Unit
57.	OCTExitDeicer	12	°C
58.	MaxDeicerTime	15	Minute
62.	EEVDecierOpenSingle	200	Step
63.	EEVDecierOpenMulti	200	Step
59.	DeicerCoef	0.8	NA
60.	EEV_Active_H_Isotherm	6	°C
61.	EEV_Active_H_SC	10	°C
62.	EEV_Active_H_SC_Crct	1	°C
63.	EnableExceedCond	1	
64.	OVRPWR0	2350	Watt
65.	OVRPWR1	2500	Watt
66.	OVRPWR2	2650	Watt
67.	OVRPWR3	2800	Watt
68.	MinSumCapCode	2	NA
69.	MaxSumCapCode	3	NA
70.	Max_IDU_Number	2	NA
71.	Default_IDU_Number	2	
72.	InstTestCompSpeed	35	
73.	InstTestEEV	180	Step
74.	OCT_OFAN_Noise_Max	8	°C
75.	OMT_OFAN_Noise_Max	38	°C
76.	OFANType	2	NA
77.	OFMinPercentC	27	NA
78.	OFMinPercentH	27	NA
79.	OFNNoiseMaxPercent	85	NA
80.	NightPercent	50	NA
64.	Target_CTT_Alpha_C	1.528	NA
65.		0.861	NA
66.	Target_CTT_Gamma_C	0.016	NA
67.	Target_CTT_Delta_C	8.408	NA
68.	Iarget_CII_Alpha_H	0.773	NA
69. 70	Target_CTT_Beta_H	-0.248	NA
70.	Target_CTT_Gamma_H	0.465	NA
71.		5.101	NA °C
01. 02		10	°C
02. 83		8	°C
84	ICTDef3	6	°C
85	ICTDef4	3	0
86	ICTDef5	0	0° 0°
87.	ΙΟΤΟΗΟ	41	
88.	ICTOH1	45	°C
89.	ІСТОН2	49	°C
90.	ІСТОНЗ	53	°C
91.	ICTOH4	57	°C
92.	ICTOH5	61	°C
93.	EEV_OL_Alpha1_S_C	5.462	NA
94.	EEV_OL_Beta1_S_C	0.788	NA
95.	EEV_OL_ Gamma1 _S_C	1.747	NA
96.	EEV_OL_Delta1_S_C	-89	NA
97.	EEV_OL_Alpha2_S_C	6.244	
98.	EEV_OL_Beta2_S_C	-2.734	
99.	EEV_OL_Gamma2_S_C	1.714	
00.	EEV_OL_Delta2_S_C	-38	NA
101.	EEV OL Alpha3 S C	6.244	

SM YAZE218 1-A.2 GB | 11-31

Airwell

#	Name	Q YAZ218	Unit	#	Name	Q YAZ218	Unit
102.	EEV_OL_Beta3_S_C	-2.734		131.	EEV_OL_ Gamma _M3_C	NA	NA
103.	EEV_OL_ Gamma3_S_C	1.714		132.	EEV_OL_Delta _M3_C	NA	NA
104.	EEV_OL_Delta3_S_C	-38	NA	133.	EEV_OL_Alpha_M4_C	NA	NA
105.	EEV_OL_Alpha1_S_H	0	NA	134.	EEV_OL_Beta_M4_C	NA	NA
106.	EEV_OL_Beta1_S_H	3.308	NA	135.	EEV_OL_ Gamma _M4_C	NA	NA
107.	EEV_OL_ Gamma1_S_H	1.378	NA	136.	EEV_OL_Delta_M4_C	NA	NA
108.	EEV_OL_Delta1_S_H	26	NA	137.	EEV_OL_Alpha_M1_H	0	NA
109.	EEV_OL_Alpha2_S_H	0	NA	138.	EEV_OL_Beta_M1_H	7.266	NA
110.	EEV_OL_Beta2_S_H	3.308	NA	139.	EEV_OL_ Gamma _M1_H	5.016	NA
111.	EEV_OL_ Gamma2_S_H	1.378	NA	140.	EEV_OL_Delta _M1_H	-136	NA
112.	EEV_OL_Delta2_S_H	26	NA	141.	EEV_OL_Alpha_M2_H	0	NA
113.	EEV_OL_Alpha3_S_H	-0.078	NA	142.	EEV_OL_Beta_M2_H	7.782	NA
114.	EEV_OL_Beta3_S_H	2.453	NA	143.	EEV_OL_ Gamma _M2_H	3.336	NA
115.	EEV_OL_ Gamma3_S_H	1.368	NA	144.	EEV_OL_Delta_M2_H	-122	NA
116.	EEV_OL_Delta3_S_H	32	NA	145.	EEV_OL_Alpha_M3_H	NA	NA
117.	EEV_OL_OAT1_S_C	25	NA	146.	EEV_OL_Beta_M3_H	NA	NA
118.	EEV_OL_OAT2_S_C	35	NA	147.	EEV_OL_ Gamma _M3_H	NA	NA
119.	EEV_OL_OAT1_S_H	-3	NA	148.	EEV_OL_Delta _M3_H	NA	NA
120.	EEV_OL_OAT2_S_H	9	NA	149.	EEV_OL_Alpha_M4_H	NA	NA
121.	EEV_OL_Alpha_M1_C	6.736	NA	150.	EEV_OL_Beta_M4_H	NA	NA
122.	EEV_OL_Beta_M1_C	0.246	NA	151.	EEV_OL_ Gamma _M4_H	NA	NA
123.	EEV_OL_ Gamma _M1_C	3.067	NA	152.	EEV_OL_Delta _M4_H	NA	NA
124.	EEV_OL_Delta _M1_C	-132	NA				
125.	EEV_OL_Alpha_M2_C	5.246	NA				
126.	EEV_OL_Beta_M2_C	-0.312	NA				
127.	EEV_OL_ Gamma _M2_C	1.796	NA				
128.	EEV_OL_Delta_M2_C	-93	NA				
129.	EEV_OL_Alpha_M3_C	NA	NA				
130.	EEV_OL_Beta_M3_C	NA	NA				



11.10.3 Indoor Units SW Parameters

11.10.3.1 General Parameters for All Models:

Parameters de ning the indoor fan speed as a function of Indoor Coil temperature in heat mode (ICT):

ICTST Speed	ICT to stop indoor fan	25
ICTVLSpeed	ICT to go down to very low speed	28
ICTLSpeed	ICT to start in very low speed	30
ICTHSpeed	ICT to start in increase speed from very low	32
ICTTSpeed	ICT to enable Turbo fan speed	40

Parameters for IDU defrost protection:

ICTDef1	ICT to go back to normal	8
ICTDef2	ICT to 'stop rise' when ICT decrease	6
ICTDef3	ICT to 'stop rise' when ICT is stable	4
ICTDef4	ICT to 'Hz Down' when ICT decrease	2
ICTDef5	ICT to 'Hz Down' when ICT is stable	0
ICTDef6	ICT to stop compressor	-2

Parameters for indoor coil over heating protection:

ICTOH1	ICT to go back to normal	45
ICTOH2	ICT to 'stop rise' when ICT increase	48
ІСТОН3	ICT to 'stop rise' when ICT is stable	52
ICTOH4	ICT to 'Hz Down' when ICT increase	55
ICTOH5	ICT to 'Hz Down' when ICT is stable	60
ICTOH6	ICT to stop compressor	62

Airwell

12. TROUBLESHOOTING

WARNING!!!

When Power Up – the whole outdoor unit controller, including the wiring, is under HIGH VOLTAGE!!!

Never open the Outdoor unit before turning off the Power!!! When turned off, the system is still charged (400V)!!!

It takes about 1 Min. to discharge the system.

Touching the controller before discharging may cause an electrical shock!!! For safe handling of the controller, please refer to section 12.5 below.

12.1 General System Failures and Corrective Actions

No	SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION	
1.	Indoor unit power supply indicator (Red LED) does not light up.	No power supply	Check power supply. If OK, check display and display wiring. if OK, replace controller	
2.	Indoor unit does not respond to remote control message	Remote control message not reached the indoor unit	Check remote control batteries, if OK, check display and display wiring, if OK, replace display PCB. If still not OK replace controller	
3.	Indoor unit responds to remote control message but Operate indicator (Green LED) does not light up	Problem with display PCB	Replace display PCB. If still not OK replace controller	
		Unit in heat mode and coil is still not warm	Change to cool mode	
		Outdoor unit is in opposite mode	Change operation mode	
4.	Indoor fan does not start (louvers are opened and Green LED is ON)	Problem with controller or capacitor	Change to high speed and Check power supply to motor is higher than 130VAC (for triack controlled motor) or higher than 220VAC for xed speed motors, if OK replace capacitor, if not OK replace controller	
5.	Indoor fan works when unit is OFF, and indoor fan speed is not changed by remote control command.	Controller problem	Replace controller	
6.	Water leakage from indoor unit	Indoor unit drainage tube is blocked	Check and open drainage tube	
7.	One indoor unit or more are operating in cool mode with no capacity, and the other units have water leaks/freezing problems	The communication wires of	Check and correct the	
8.	One indoor or more are operating in heat mode with a limited capacity, and the coil on the other units are very hot.	the indoor units are switched	communication wires connection	
9.	Outdoor unit display board and leds are off	No power supply	Check the connections and the wiring on the main	

terminal - Repair if needed.

12-1 | SM YAZE218 1-A.2 GB

Airwell

No	SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
			- Repair if needed
		PFC Chock coil	Check the PFC Chock coil
		Burnt fuse	Check 20A fuse on the Filter (12.4.2)
		EEV problem	Check EEV (12.4.5)
	Compressor operates but one or more	Refrigerant leakage	Check refrigeration system (12.2)
10.	units generates no capacity	Indoor coil block	Clean Iters and/or remove block
		Outdoor coil block	Remove block and/or avoid air by-pass
		EEV problem	Check EEV (12.4.5)
	Compressor is over heated and unit	Refrigerant leakage	Check refrigeration system (12.2)
11.	does not generate capacity	Indoor coil block	Clean Iters and/or remove block
		Outdoor coil block	Remove block and/or avoid air by-pass
10		Electronic control	Check diagnostics (see 12.3 below)
12.		Refrigerant leakage	Check refrigeration system (12.2)
13.	Not all units are operating	Communication problems	
14.	Compressor does not start	Electronics control problem or protection	Check diagnostics (see 12.3 below)
15.	Unit works in wrong mode (cool instead of heat or heat instead of cool)	Electronics or RV problem	Check RV (12.4.4)
16.	All components are operating properly but no cooling or no heating	Refrigerant leak	Check refrigeration system (12.2)
17.	Compressor motor is generating noise and no suction occurs	Phase order to compressor is wrong	Check compressor phase order
18.	Freezing of outdoor unit in heat mode and outdoor unit base is blocked with ice		Connect base heater
19.	The unit stop suddenly during operation	EMC interference to the A/C	Check for EMC problems
20.	Indoor unit(s) Indicator(s) leds may icker	unit	(12.4.8.1)
21.	Other home appliances operation is faulty such as noise appears in the television picture, or the picture is distorted or static occurs in the radio sound	EMC interference by the A/C unit	Check for EMC problems (12.4.8.2)
22.	All others	Speci c problems of indoor or outdoor units	Check diagnostics (see 12.3 below)

12.2 Checking the refrigeration system

Checking system pressures and other thermodynamic measures should be done when system is in technician Mode where the system operates as in xed settings. The performance curves given in this manual are given for unit performance in Technician mode when high indoor fan speed is selected. For entering technician mode, refer to 11.7.

Airwell

12.3 Diagnostics

12.3.1 Fault Code for Outdoor unit

The last fault occurred in the system will be stored in the EEPROM.

If no fault exist in the system, no fault code will be displayed during normal operation mode.

For single Split units only, when system enters diagnostics mode (through IDU communication), the last fault code will be displayed even if the system has recover from that fault. The last fault will be deleted from the EEPROM after the system has exit diagnostics mode (through IDU communication). The current system operation mode (cool/ heat/ off) will not be changed when system enters diagnostics. The coding method is as follow:

STATUS LED is blinking 5 times in 5 seconds, and shut off for the next 5 seconds. FAULT LED will

No	Problem	5	4	3	2	1
1	OCT is shorted/disconnected	0	0	0	0	1
2	CTT is shorted/disconnected	0	0	0	1	0
3	HST is shorted/disconnected	0	0	0	1	1
4	OAT is shorted/disconnected	0	0	1	0	0
5	OMT is shorted/disconnected	0	0	1	0	1
6	RGT is shorted/disconnected	0	0	1	1	0
7	RLT is shorted/disconnected	0	0	1	1	1
8	High Pressure Protection (for water Hydro units)	0	1	0	0	0
9	Reserved (for 4-5-6 HP)	0	1	0	0	1
10	Reserved (for 4-5-6 HP)	0	1	0	1	0
11	 a) Compressor IPM Fault b) IPM Driver Pin c) Compressor Current Sensor Fault 	0	1	0	1	1
12	No Water Flow (For Hydro Units only)	0	1	1	0	0
13	Reserved	0	1	1	0	1
14	a) DC under voltage b) DC over voltage	0	1	1	1	0
15	a) AC under voltageb) AC over Voltagec) Zero Crossing detection	0	1	1	1	1
16	 a) Mismatch between IDU & ODU models b) Missing ODU configuration c) Undefined ODU Model d) HW Type and ODU model mismatch 	1	0	0	0	0
17	No Communication	1	0	0	0	1
18	System Over Power	1	0	0	1	0
19	PFC Current sensor	1	0	0	1	1
20	Heat sink Over Heating	1	0	1	0	0
21	Deicing	1	0	1	0	1
22	Compressor Over Heating		0	1	1	0
23	Compressor Over Current		0	1	1	1
24	No OFAN Feedback		1	0	0	0
25	a) OFAN IPM fault b) OFAN IPM Driver Pin		1	0	0	1
26	Compressor Lock		1	0	1	0
27	Indoor Coil defrost		1	0	1	1
28	Reserved	1	1	1	0	0
29	Indoor Sensor Fault (for water Hydro units and DX)	1	1	1	0	1
30	a) Outdoor Coil Overheatingb) Indoor Coil Overheating	1	1	1	1	0
31	Operation conditions exceeded	1	1	1	1	1

Only one code is shown. Order of priority is 1-24. Diagnostics is continuously ON as long power is on.

12.3.2 Outdoor unit diagnostics and corrective actions

No	Fault Name	Fault Description	Corrective Action		
1	OCT bad				
2	CTT bad				
3	HST bad				
4	OAT bad	Thermistor not connected or damaged	Check Thermistor (12.4.6)		
5	OMT bad				
6	RGT bad				
7	RLT bad				
8	Reserved	NA	NA		
9	Reserved	NA	NA		
10	Reserved	NA	NA		
11	 a) Compressor IPM Fault b) IPM Driver Pin c) CompressorCurrent Sensor Fault 	PM module detect shoot-through current / IPM driver control pin is unconditionally latch to high state / The quiescent reference voltage of sensor resistor is either too high or too low.	Disconnect the compressor plug and measure between U-V, U-W for resistance using multimeter. Resistance value should be below 1 OHM. If multimeter display high resistance, replace compressor. Make sure the phase sequence of U- V-W is correctly plug into the compressor, othewise replace controller if error is persistent		
12	No Water Flow (For Hydro Units only)	NA	NA		
13	Refrigerant Leakage (future option)	NA	NA		
14	a) DC under voltageb) DC over voltage	The capacitor bank DC voltage supply for the compressor is below operable/ too high value	Check AC input line voltage RMS value, it should read above 198VAC /below 264VAC. If voltage is above 198VAC/ below 264VAC, and DC over voltage error is continuously display, replace controller.		
15	 a) AC under voltage b) AC over Voltage c) Zero Crossing detection 	The AC input supply voltage is below the limit of 198V / The AC input supply voltage is above 264V / The AC line frequency is out of range from 45Hz to 55Hz.	Check AC input line voltage RMS value, it should read in the range of 198VAC – 264VAC. Check AC input line operating frequency, it should be in the range from 45Hz to 55Hz. If error is continuously being display, replace controller.		
16	 a) Mismatch between IDU & ODU models b) Missing ODU con guration c) Unde ned ODU Model d) HW Type and ODU model mismatch 	Miss-match between the IDUs connected to port A,B,C or D, or the total capacity code of IDUs is higher than the ODU maximum capacity code	Change con guration if needed.		
17	No Communication	No signals in lineA,B,C,D	Check communication (12.4.7)		
18	System Over Power	Compressor stopped due to over power protection	No action required		
19	PFC Current sensor	Controller cannot detect valid AC line current after compressor start	If error is continuously being display, replace controller.		

No	Fault Name	Fault Description	Corrective Action		
20	Heat sink Over Heating	Compressor stopped due to heatsink protection	Check that the air ow around the ODU is free and the fan is running free. Chec fan motor		
21	Deicing	During deicing procedure	No action required		
22	Compressor Over Heating	Compressor stopped due to over heat protection	Check if gas is missing in the system		
23	Compressor Over Current	Compressor stopped due to over current protection	No action required		
24	No OFAN Feedback	No encoder signal can be detected from the OFAN	Check DC-FAN hall sensor connection/ plug for damage. Check DC-FAN for any blockage. Measure between U-V, U-W for resistance using multimeter. Resistance value should be below 1 OHM. If multimeter display high resistance, replace DC-FAN motor, otherewise replace controller.		
25	a) OFAN IPM fault b) OFAN IPM Driver Pin	OFAN IPM module detect shoot- through current / OFAN IPM driver control pin is unconditionally latch to high state	Check DC-FAN hall sensor connection/ plug for damage. Check DC-FAN for any blockage. Measure between U-V, U-W for resistance using multimeter. Resistance value should be below 1 OHM. If multimeter display high resistance, replace DC-FAN motor. Return controller if error is persistent.		
26	Compressor Lock	No correct drive current can be detected from the compressor	Check compressor cable or compressor wire assembly. Make sure the phase sequence of U-V-W is correctly plug into the compressor.		
27	Indoor Coil defrost	Compressor stopped due to Indoor Coil defrost protection	No action required		
28	Indoor Unit Sweet (future option)	NA	NA		
29	Reserved	NA	NA		
30	a) Outdoor Coil Overheatingb) Indoor Coil Overheating	This protection combines the following: Overheating in cooling mode (based on OMT reading). Overheating in heating mode based on ICT.	Improper ventilation of the coils Over charged system Problem with ICT sensors or OMT sensor (fake up). Illegal too small indoor unit's installation (heating).		
31	Operation conditions are exceeded	For cooling:	This is not a fault but information on the ambient operation: The unit operates outside the de ned operation range. The OAT fakes and cause false alarm.		

12-5 | SM YAZE218 1-A.2 GB

12.3.3 DMSMP diagnostics

The DMSMP system has 4 IDU LEDs, 1 ODU LED, and 1 Power LED.

Each communication channel is built up from receiving and transmitting channels.

The outdoor controller is the master of communication (always initiated communication) while the DMSMP and indoor are slave (responds only when it receives).



Channel	LED		
R _i has communication	The relevant LED, will be ON.		
R _i has no communication	The relevant LED _i will be Off.		

Domogo	ODU	IDU	LED on DMSMP				How to aboak?			
Damage			1	2	3	4	0	HOW LO CHECK?		
To(ODU)	No Com	All no com	Off	Off	Off	Off	Off	Voltage To(ODU) no change		
Ro(DMSMP)	No Com	All no com	Off	Off	Off	Off	Off	Voltage To(ODU) changes Voltage Ro(DMSMP) no change		
To(DMSMP)	No com	All ok	On	On	On	On	On	Voltage Ro(DMSMP) changes Voltage To(DMSMP) no change		
Ro(ODU)	No com	All ok	On	On	On	On	On	Voltage To (DMSMP) changes Voltage To (ODU) no changes		
T4 (DMSMP)	Ok	Indoor 4	On	On	On	Off	On			
R4(IDU)	Ok	Indoor 4	On	On	On	Off	On	Exchange with other IDU to know		
T4(IDU)	Ok	All ok	On	On	On	Off	On	DMSMP.		
R4(DMMSP)	Ok	All ok	On	On	On	Off	On			

Airwell

12.3.4 Fault Code for Indoor unit

Pressing Mode button for long will activate diagnostic mode by the acknowledgment of 3 short beeps and lighting of COOL and HEAT LED's.

When Indoor diagnostics is displayed, all four LED's (STBY, Operate, Filter, TMR) are on. Entering diagnostics in STBY mode allows only viewing of status (fault-display).

In diagnostic mode, system problems / information will be indicated by blinking of Heat & Cool LED's. The coding method will be as follows:

Heat led will blink 5 times in 5 seconds, and then will be shut off for the next 5 seconds. Cool Led will blink during the same 5 seconds according to the following table:

No	Fault Name	5	4	3	2	1
1	RT-1 is disconnected	0	0	0	0	1
2	RT-1 is shorted	0	0	0	1	0
3	RT-2 is disconnected	0	0	0	1	1
4	RT-2 is shorted	0	0	1	0	0
	Reserved	0	0	1	0	1
7	Communication mismatch	0	0	1	1	1
8	No Communication	0	1	0	0	0
9	No Encoder	0	1	0	0	1
10	Reserved	0	1	0	1	0
11	Outdoor Unit Fault	0	1	0	1	1
	Reserved					
17	Defrost protection	1	0	0	0	1
18	Deicing Protection	1	0	0	1	0
19	Outdoor Unit Protection	1	0	0	1	1
20	Indoor Coil HP Protection	1	0	1	0	0
21	Over ow Protection	1	0	1	0	1
	Reserved					
24	EEPROM Not Updated	1	1	0	0	0
25	Bad EEPROM	1	1	0	0	1
26	Bad Communication	1	1	0	1	0
27	Using EEPROM data	1	1	0	1	1
28	Model A	1	1	1	0	0
29	Model B	1	1	1	0	1
30	Model C	1	1	1	1	0
31	Model D	1	1	1	1	1

1 - ON, 0 - OFF

Only one code is shown. Order of priority is lower to the higher number. Diagnostics is continuously ON as long power is on.

12-7 | SM YAZE218 1-A.2 GB

No.	Fault	Probable Cause	Corrective Action
1-4	Sensor failures	Sensors not connected or damaged	Check sensor connections or replace sensor
7	Communication mismatch	Indoor and Outdoor controllers are with different versions	Replace Indoor controller
8	No Communication	Communication or grounding wiring is not good	Check Indoor to Outdoor wiring and grounding
9	No Encoder	Indoor electronics or motor	Check motor wiring, if ok, replace motor, if still not ok, replace Indoor controller.
11	Outdoor Unit Fault	Outdoor controller problem	Switch to Outdoor diagnostics.
17-21	Protections	Indication	No action
24	EEPROM Not Updated	System is using ROM parameters and not EEPROM parameters	No action, unless special parameters are required for unit operation.
25	Bad EEPROM		No action, unless special parameters are required for unit operation.
26	Bad Communication	Communication quality is low reliability	Check Indoor to Outdoor wiring and grounding
27	Using EEPROM data	No problem	
28-31	IDU model	Indication : DCI-25,35,50,60	

12.3.5 Indoor unit diagnostics and corrective actions

12.4 Procedures for checking Main Parts

12.4.1 Checking Mains Voltage

Con rm that the Mains voltage is between 198 and 264 VAC. If Mains voltage is out of this range, abnormal operation of the system is expected. If in range check the Power (Circuit) Breaker and look for broken or loosed cable lugs or wiring mistake(s).

12.4.2 Checking Main fuse

Check 20A fuse on the Filter Board - If burnt – check the compressor, fan or any other peripheral that can cause a short. In case of a problematic peripheral - replace it.

In case no problematic peripheral, check the resistance on the DC bank (B+ & B- on the Power board), if it is less than 30Ω , replace the controller. Otherwise replace the burnt fuse. In case of frequent burning fuse, replace the controller.

12.4.3 Checking the Compressor

Check Compressor connections - Repair if needed.

Use a current probe ("Clamp") to assure that there is an AC current on each phase – no more than 15A.

In case there is no current, check the resistance between the three poles. Assure the three coil resistances are almost the same (between 0.8Ω to 1.5Ω).

Change to Stand-by or Power OFF and re-start - If the fault is still "Active" - replace controller.
Airwell

12.4.4 Checking the Reverse Valve (RV)

The RV has two parts, Solenoid and valve.

Solenoid - Running in heating mode, check the voltage between two pins of reverse valve connector, normal voltage is 230VAC. if no power supply to RV, Check RV operation with direct 230VAC power supply, if OK, replace outdoor controller.

Valve — if RV solenoid is OK (as above) but still no heating operation while compressor is On, replace the valve.

12.4.5 Checking the electrical expansion valve (EEV)

The EEV has two parts, drive and valve.

When Outdoor unit is powered on, EEV shall run and have click and vibration.

For assuring the problem is of the EEV parts, perform the installation test. check (11.6) and if fails and no other indications in the diagnostics, than the problem is with the EEV (one or more).

Drive - a step motor; ringed on the valve. Check the drive voltage, should be12VDC.

Valve – if drive is OK (as above) but still the indoor unit perform no conditioning replace the valve (no need to take out the refrigerant, just pump down and shut off the main valves).

12.4.6 Checking the thermistors

Check Thermistor connections and wiring — Repair if needed. Check Thermistor resistance — between 0°C and 40°C should be between $35K\Omega$ and $5K\Omega$.

12.4.7 Checking the communication

Change to Stand-by or Power OFF and re-start - If the fault is still "Active" check Indoor to Outdoor Communication wiring and grounding connections (should be less than 2.0Ω) — Repair if needed. If IDU failure — replace IDU controller that does not respond. If ODU failure — replace ODU.

12.4.8 Checking for electromagnetic interference (EMC problems)

12.4.8.1 EMC troubles to the A/C unit

Locations most susceptible to noise:

- 1. Locations near broadcast stations where there are strong electromagnetic waves.
- 2. Locations near amateur radio (short wave) stations.
- 3. Locations near electronic sewing machines and arc-welding machines.

Trouble:

Either of the following trouble may occur:

- 1. The unit may stop suddenly during operation.
- 2. Indicator lamps may icker

Correction:

The fundamental concept is to make the system less susceptible to noise (insulate for noise or distance from the noise source):

- 1. Use shielded wires.
- 2. Move unit away from the noise source.

12-9 | SM YAZE218 1-A.2 GB

12.4.8.2 EMC troubles to near by home appliances

Locations most susceptible to noise:

- 1. A television or radio is located near the A/C and A/C wiring.
- 2. The antenna cable for a television or radio is located close to the A/C and A/C wiring.
- 3. Locations where television and radio signals are weak.

Trouble:

- 1. Noise appears in the television picture, or the picture is distorted.
- 2. Static occurs in the radio sound.

Correction:

1. Select a separate power source.

2. Keep the A/C and A/C wiring at least 1 meter away from wireless devices and antenna cables.

- 3. Change the wireless device's antenna to a high sensitivity antenna.
- 4. Change the antenna cable to a BS coaxial cable.
- 5. Use a noise Iter (for the wireless device).
- 6. Use a signal booster.

12.5 Precaution, Advise and Notice Items

12.5.1 High voltage in Outdoor unit controller

Whole controller, including the wires, connected to the Outdoor unit controller may have the potential hazard voltage when power is on. Touching the Outdoor unit controller may cause an electrical shock.

Advise: Don't touch the naked lead wire and don't insert nger, conductor or anything else into the controller when power is on.

12.5.2 Charged Capacitors

Three large-capacity electrolytic capacitors are used in the Outdoor unit controller. Therefore, charging voltage (380VDC) remains after power down. Discharging takes about one minute after turned off. Touching the Outdoor unit controller before discharging may cause an electrical shock. When open the Outdoor unit controller cover, don't touch the soldering pin by hand or by any conductive material.

Advise:

- Open the Outdoor unit controller cover only after one minute from power off.
- Measure the electrolytic capacitors voltage before farther checking controller.

Additional advises

- When disassemble the controller or the front panel, turn off the power supply.
- When connecting or disconnecting the connectors on the PCB, hold the whole housing, don't pull the wire.
- There are sharp fringes and sting on shell. Use gloves when disassemble the A/C units.

13. EXPLODED VIEW AND SPARE PART LIST

13.1 Multi YAZE218 – Exploded View



13—1 | SM YAZE218 1-A.2 GB

13.2 Multi YAZ218 DCI – Spare Part List

Item Seq.	ltem	Description	Quantity
1	G433218	Front Panel A	1
2	G464250118	Fireproo ng plate/ONG3 DIC	1
3	G4526340	Air inlet ring-420	1
4	G433223P5	Painting Insulation Plate	1
5	G464600111P1	Base painting assy./DCI DUO 50 Z	1
6	G466100034R	Metal Motor /DCR 50 Z	1
7	G4527203	Motor Support	1
8	G464160024	Partition Plate/DCR 50 Z	1
9	G433203P1	Valve Support(painting plate)	1
10	G461000004	Liquid Valve 1/4" R410A	2
11	G461010004	Gas Valve 3/8" R410A	2
12	G467000001	Compressor Power Cord/DCR CR 25/35	1
13	G460150020R	Compressor Assy./ Panasonic 5RS132ZAD21	1
14	G469120013	Insulation Felt+PVC/Compressor Panasonic 5RS132	1
15	G469120020	Outside Insulation Felt+PVC/ Compressor	1
16	G452823600	Terminal Plate Assy.	1
17	G467420027	3 Poles Terminal Block	2
18	G467420026	4 Poles Terminal Block	1
19	G204107	Cable clip Nylon	3
20	G467400056	OCT Outdoor Coil Temperature Sensor/10K/Copper-capsulation Ø6	1
21	G467400040	Condenser Middle Temperature Sensor/OAT & OMT/DCR LC 25/35	1
22	G467400200	CTT Compressor Top Temperature Sensor/10K/Resin-capsulation	1
23	G467400082	Return Gas Temperature Sensor(RGT)/ø6/DCI YAZ218	1
24	G467400083	Return Liquid Temperature Sensor(RLT) /@6/DCI YAZ218	1
25	G4516540	ground wire.UL1015 12AWG.	2
26	G455015206	ground wire.UL1015 16AWG.680mm	1
27	G455014409	Connect Wire UL1015 14AWG	1
28	G4510677	Nut With Flange M8 -D=24 GB6187-86	3
29	G467300232R	Communication Board /DMSMP	1
30	G464250161	Communication Board Box Cover /DMSMP/DCI YAZ218 R410A	1
31	G4526827	Electronical expansion valve CAM-BD15 FKS-1	2
32	G452682800	EEV coil CAM-MD12FKS-1 (Red, 530mm)	1
33	G452682802	EEV coil CAM-MD12FKS-2 (White connector, 530mm)	1
34	G461700045	Electronic Expansion Valve assy./DCI YAZ218	1
35	G467300355R	Controller/DCRS 2.8KW Sine Wave (PS21997) Main BD	1
36	G465340083	Valve Cover/PP+UV 5VA/DCI DUO	1
37	G4527365P1	Right Side Panel Painting Plate	1
38	G461600095	4-Way valve assy./DCI DUO 50Z	1
39	G461030007	4-W valve coil /SHF(L)-4H/7H(DCI)	1
40	G461020004	4-W valve /SHF(L)-7H-34U	1
41	G433228	Back Side Net	1
42	G462300153	Condenser Assy./DCI DUO 50 Z	1
43	G467550005R	Choke/ DCR 50 Z	1
44	G452813200	coil stopper	1
45	G4519251	Axial Fan OD=400	1
46	G4519300	Nut M5 L	1
47	G433231P1	Painting Top Cover	1
48	G4526298	Bridge	1
49	G433224P1	Left Side Panel Painting Plate	1
50	G433225	Handle	1

Airwell

14. APPENDIX A

INSTALLATION AND OPERATION MANUAL

14-1 | SM YAZE218 1-A.2 GB



SERVICE MANUAL

