


# OPERATING MANUAL

**HEAT & COOL MODEL  
(REVERSE CYCLE)**

**ROOM AIR CONDITIONER  
WALL MOUNTED TYPE**

**Indoor Unit  
AST7RSB-W**

**Outdoor Unit  
AOT7RSB**

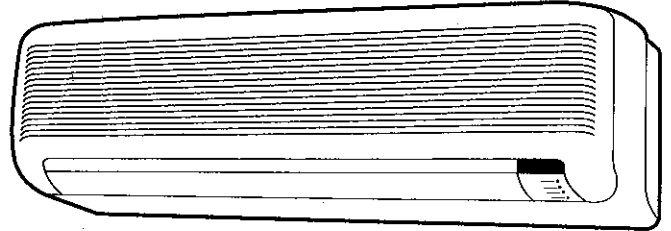

Supplied by

**FUJITSU GENERAL (AUST.) PTY LIMITED**

ACN 001229554

A Subsidiary of FUJITSU GENERAL LIMITED

HEAD OFFICE  
SYDNEY

: E&F Rydalmere Business Park,  
10-16 South Street, Rydalmere, N.S.W. 2116 TEL.[02] 9638 5199

MELBOURNE

: 2nd Floor, 1-3 Wellington Street, Windsor, VIC. 3181  
[also all Tasmanian enquiries] TEL.[03] 9510 8652

BRISBANE

: 5th Floor, 301 Coronation Drive Milton, QLD. 4064  
TEL.[07] 3367 2008

ADELAIDE

: 146 Fullarton Road, Rose Park, S.A. 5067 TEL.[08] 8364 0588

PERTH

: Unit 6, 103 Erindale Road Balcatta W.A. 6021 TEL.[09] 345 2011

**KEEP THIS OPERATION MANUAL  
FOR FUTURE REFERENCE**

**FUJITSU GENERAL LIMITED**

P/N9305942152-01

# CONTENTS

SAFETY PRECAUTIONS .....	1	TIMER OPERATION .....	8
NAME OF PARTS .....	2	SLEEP TIMER OPERATION .....	9
FEATURES AND FUNCTIONS .....	3	SUPER QUIET BUTTON .....	10
PREPARATION .....	4	MANUAL AUTO OPERATION .....	10
OPERATION .....	5	CLEANING AND CARE .....	11
ADJUSTING THE DIRECTION OF AIR CIRCULATION .....	7	TROUBLESHOOTING .....	12
		OPERATING TIPS .....	13

## SAFETY PRECAUTIONS

### WARNING!

- If the power supply cord of this air conditioner is damaged, it must be replaced by the manufacturer or its authorized service personnel only in order to avoid a safety hazard.

### DANGER!

- Do not attempt to install this air conditioner by yourself.
- This unit contains no user-serviceable parts. Always consult authorized service personnel for repairs.
- When moving, consult authorized service personnel for disconnection and installation of the unit.
- Do not become excessively chilled by staying for lengthy periods in the direct cooling airflow.
- Do not insert fingers or objects into the outlet port or intake grilles.
- Do not start and stop air conditioner operation by disconnecting the power supply cord and so on.
- Take care not to damage the power supply cord.
- In the event of a malfunction (burning smell, etc.), immediately stop operation, disconnect the power supply plug, and consult authorized service personnel.

### CAUTION!

- Provide occasional ventilation during use.
- Do not direct air flow at fireplaces or heating apparatus.
- Do not climb on, or place objects on, the air conditioner.
- Do not hang objects from the indoor unit.
- Do not set flower vases or water containers on top of air conditioners.
- Do not expose the air conditioner directly to water.
- Do not operate the air conditioner with wet hands.
- Do not pull power supply cord.
- Turn off power source when not using the unit for extended periods.
- Check the condition of the installation stand for damage.
- Do not place animals or plants in the direct path of the air flow.
- Do not drink the water drained from the air conditioner.
- Do not use in applications involving the storage of foods, plants or animals, precision equipment, or art works.
- Connection valves become hot during Heating; handle with care.
- Do not apply any heavy pressure to radiator fins.
- Operate only with air filters installed.
- Do not block or cover the intake grille and outlet port.
- Ensure that any electronic equipment is at least one metre away from either the indoor or outdoor units.
- Avoid installing the air conditioner near a fireplace or other heating apparatus.
- When installing the indoor and outdoor unit, take precautions to prevent access to infants.
- Do not use inflammable gases near the air conditioner.

# FEATURES AND FUNCTIONS

---

## **AUTOMATIC OPERATION**

Merely press the START/STOP button, and the unit will begin automatic operation in either the Heating, Cooling, Dry, or Monitor modes as appropriate, in accordance with the thermostat setting and the actual temperature of the room.

## **SLEEP TIMER**

When the SLEEP timer button is pressed during heating mode, the air conditioner's thermostat setting is gradually lowered during the period of operation; during cooling mode, the thermostat setting is gradually raised during the period of operation. When the set time is reached, the unit automatically turns off.

## **AUTO RESTART**

During air conditioner operation, if power is temporarily interrupted due to a power failure or other reason, the air conditioner will automatically restart in the same mode when power is restored.

## **WIRELESS REMOTE CONTROL UNIT**

The wireless remote control unit allows convenient control of air conditioner operation.

## **REMOVABLE INTAKE GRILLE**

The indoor unit's intake grille can be removed for easy cleaning and maintenance.

## **MILDEW-RESISTANT FILTER**

The air filter has been treated to resist mildew growth, thus allowing cleaner use and easier care.

## **SUPER QUIET OPERATION**

When the SUPER QUIET button is pressed, the speed of the indoor unit's fan is reduced, thus allowing whisper-quiet heating and cooling.

## **AIR CLEAN FILTER (Optional)**

The optional air clean filter (Model APS-04A) uses an electrostatic principle to clean the air of fine particulate matter such as tobacco smoke and plant pollen.

# PREPARATION

## Turn on the Power

- 1 Connect the Power Supply Plug (Fig. 1 ⑮) to an electrical outlet; in the case of a direct line connection, turn on the circuit breaker.**
- 2 Set the POWER switch (Fig. 2 ②) to ON.**

## Load Batteries (R03/LR03 x 2)


- 1 Press and slide the battery compartment lid on the reverse side to open it.**

Slide in the direction of the arrow while pressing the ▼ mark.

- 2 Insert batteries.**

Be sure to align the battery polarities (⊕/⊖) correctly.

- 3 Close the battery compartment lid.**

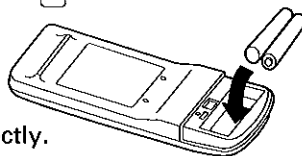

## ⚠ CAUTION!

- Take care to prevent infants from accidentally swallowing batteries.
- When not using the remote control unit for an extended period, remove the batteries to avoid possible leakage and damage to the unit.
- If leaking battery fluid comes in contact with your skin, eyes, or mouth, immediately wash with copious amounts of water, and consult your physician.
- Dead batteries should be removed quickly and disposed of properly, either by placing in a public battery collection receptacle, or by returning to appropriate authority.
- Do not attempt to recharge dry batteries.

Never mix new and used batteries, or batteries of different types. Batteries should last about one year under normal use. If the remote control unit's operating range becomes appreciably reduced, replace the batteries and press the ACL button with the tip of a ball-point pen or other small object.

## Set the Current Time


- 1 Press the TIME ADJUST button (Fig. 7 ⑳).**  
Use the tip of a ball-point pen or other small object to press the button.
- 2 Use the ⊕/⊖ SET TIME buttons (Fig. 6 ㉔) to adjust the clock to the current time.**
  - ⊕ **button:** Press to advance the time.
  - ⊖ **button:** Press to reverse the time.

(Each time the buttons are pressed, the time will be advanced/reversed in one-minute increments; hold the buttons depressed to change the time quickly in ten-minute increments).
- 3 Press the TIME ADJUST button again.**  
This completes the time setting and starts the clock.


## To Use the Remote Control Unit

- The remote control unit must be pointed at signal receiver (Fig.1 ④) to operate correctly.
- Operating Range: About 7 meters.
- When a signal is properly received by the air conditioner, a beeping sound will be heard.
- If no beep is heard, press the remote control unit button again.


## Remote Control Unit Holder

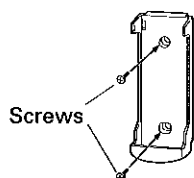

① Mount the Holder.

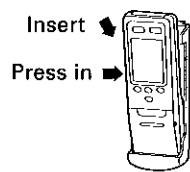

② Set the remote control unit.

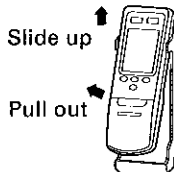

③ To remove the remote control unit (when use at hand).

# OPERATION


## To Select Mode Operation

### 1 Press the **START/STOP** button (Fig. 6 ㉘).


The air conditioner will start operation.

### 2 Press the **MASTER CONTROL** button (Fig. 6 ㉙) to select the desired mode.

Each time the button is pressed, the mode will change in the following order.



About three seconds later, the entire display will reappear.

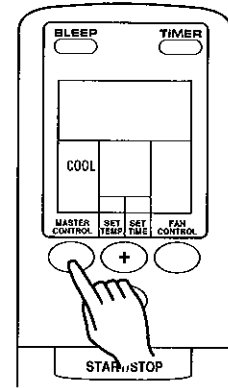

Example: When set to COOL.

## To Set the Thermostat

### Press the **SET TEMP.** buttons (Fig. 6 ㉚).

- + button: Press to raise the thermostat setting.
- button: Press to lower the thermostat setting.


#### ● Thermostat setting range:

AUTO .....	Standard temperature setting $\pm 2^{\circ}\text{C}$
Heating .....	16 - 30°C
Cooling/Dry .....	18 - 30°C

The thermostat cannot be used to set room temperature during the FAN mode (the temperature will not appear on the remote control unit's display).

About three seconds later, the entire display will reappear.

The thermostat setting should be considered a standard value, and may differ somewhat from the actual room temperature.

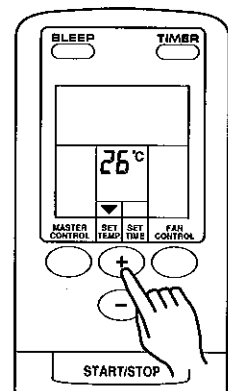


Example: When set to 26°C.

## To Set the Fan Speed

### Press the **FAN CONTROL** button (Fig. 6 ㉛).

Each time the button is pressed, the fan speed changes in the following order:



About three seconds later, the entire display will reappear.

#### When set to **AUTO**:


**Heating:** Fan operates so as to optimally circulate warmed air.

However, the fan will operate at very low speed when the temperature of the air issued from the indoor unit is low.

**Cooling:** As the room temperature approaches that of the thermostat setting, the fan speed becomes slower.

**Fan:** Fan operates at the MED speed setting.

The fan will operate at very low setting during monitor operation and at the start of the heating mode.

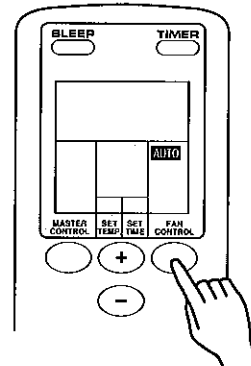

Example: When set to AUTO.

## To Stop Operation

Press the **START/STOP** button.

# OPERATION

## About Mode Operation

- AUTO:**
- Depending on the room temperature at the time operation begins, the operating mode will be switched automatically as shown in the accompanying table.
- Also, depending on the operating mode, the room temperature setting will cause the standard temperature to be set as shown.

Actual Room Temperature		Operating Mode		Thermostat Setting (standard setting)
30° or above	→	Cooling	→	27°C
27°C-30°C	→	Cooling	→	26°C
25°C-27°C	→	Dry	→	24°C
22°C-24°C	→	Monitor		
Below 22°C	→	Heating	→	23°C

The operating mode and standard thermostat settings are selected automatically when operation begins.

- When automatic operation is initiated, the fan will run at very low speed for about one minute while the unit detects and selects the proper operating mode.
- Once the operating mode has been set, the mode will not change even if the room temperature changes.  
However, during the monitor operation mode, if the room temperature changes to below 22°C, the mode will automatically switch to Heating, and when it rises above 24°C the mode will automatically switch to Dry.
- When in the monitor mode, the fan will operate very slowly.
- If the START/STOP button is pressed to recommence operation within two hours after stopping automatic operation, the unit will begin operating from the same mode as before.

- Heating:**
- Use to warm your room.
  - When Heating mode is selected, the air conditioner will operate at very low fan speed for about 3 to 5 minutes, after which it will switch to the selected fan setting. This period of time is provided to allow the indoor unit to warm up before begin full operation.
  - When the room temperature is very low, frost may form on the outside unit, and its performance may be reduced. In order to remove such frost, the unit will automatically enter the defrost cycle from time to time. During Automatic Defrosting operation, the DEFROST indicator Lamp (red) will light, and the heat operation will be interrupted.

- Cooling:**
- Use to cool your room.

- Dry:**
- Use for gently cooling while dehumidifying your room.
  - You cannot heat the room during Dry mode.
  - During Dry mode, the unit will operate at low speed; in order to adjust room humidity, the indoor unit's fan may stop from time to time. Also, the fan may operate at very low speed when detecting room humidity.
  - The fan speed cannot be changed manually when Dry mode has been selected.

- Fan:**
- Use to circulate the air throughout your room without changing its temperature.

### During Heating mode:

Set the thermostat to a temperature setting that is higher than the current room temperature. The Heating mode will not operate if the thermostat is set lower than the actual room temperature.

### During Cooling/Dry mode:

Set the thermostat to a temperature setting that is lower than the current room temperature. The Cooling and Dry modes will not operate if the thermostat is set higher than the actual room temperature (in Cooling mode, the fan alone will operate).

### During Fan mode:

You can not use the unit to heat and cool your room.

# ADJUSTING THE DIRECTION OF AIR CIRCULATION

Adjust the air flow direction in accordance with the operating mode.

## Vertical Air Direction Adjustment

Adjust the air direction louvers as shown in Fig. 1 ⑫.

### During Heating Mode

- Set the air direction louvers downward, or at a downward diagonal, so that warm air reaches the floor area.

### During Cooling/Dry Modes

- Set the air direction louvers horizontally to allow cool air to circulate throughout the room.

### During Fan Mode

- Set the louvers in the direction you prefer.

## About the Deflection Range Label

- The blue mark on the label indicates the recommended direction range during cooling and dry modes.
- The red mark on the label indicates the recommended direction range during heating mode.


## Left-Right Adjustment

Adjust the left-right louvers


- Move the left-right louvers to adjust air flow in the direction you prefer.

## ⚠ DANGER!


- Never place fingers or foreign objects inside the outlet ports, since the internal fan operates at high speed and could cause personal injury.
- Do not operate the air conditioner when the air-deflection louvers are closed or blocked, as damage or malfunction may result.

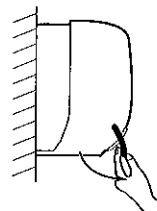


Downward

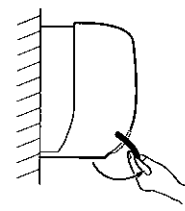

Downward diagonal

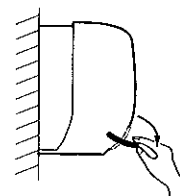

Horizontal

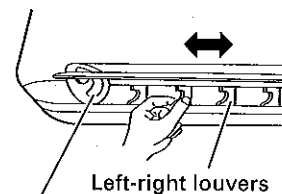

Left-right louvers  
Direction Range Label

- During cooling operation, if the air-deflection louvers are adjusted in the heating mode range, water may condense around the louvers and drip inside the room. If you choose to use this setting do so only for short periods.
- When used in a room with infants, children, elderly or sick persons, the air direction and room temperature should be considered carefully when making settings.

# TIMER OPERATION

Before using the timer function, be sure that the remote control unit is set to the correct current time (see page 4).


## To Use the ON timer or OFF timer

- 1 Press the START/STOP button (Fig. 6 29) (if the unit is already operating, proceed to step 2).**

The indoor unit's red OPERATION lamp (Fig. 3 6) will light.

- 2 Press the TIMER button (Fig. 6 26) to select the OFF timer or ON timer operation.**

Each time the button is pressed the timer function changes in the following order:



The indoor unit's green TIMER lamp (Fig. 3 7) will light.

- 3 Use the SET TIME buttons (Fig. 6 24) to adjust the desired OFF time or ON time.**

Set the time while the time display is flashing (the flashing will continue for about five seconds).

- + button:** Press to advance the time.
- button:** Press to reverse the time.

About five seconds later, the entire display will reappear.

### To Cancel the Timer

Use the TIMER button to select "TIMER RESET."  
The air conditioner will return to normal operation.

### To Change the Timer Settings

Perform steps 2 and 3.

### To Stop Air Conditioner Operation while the Timer is Operating

Press the START/STOP button.

### To Change Operating Conditions

If you wish to change operating conditions (Mode, Fan Speed, Thermostat Setting, SUPER QUIET mode), after making the timer setting wait until the entire display reappears, then press the appropriate buttons to change the operating condition desired.

## To Use the Program Timer

- 1 Press the START/STOP button (Fig. 6 29) (if the unit is already operating, proceed to step 2).**

The indoor unit's red OPERATION lamp (Fig. 3 6) will light.

- 2 Set the desired times for OFF timer and ON timer.**

See the section "To Use the ON Timer or OFF Timer" to set the desired mode and times.

About three seconds later, the entire display will reappear.

The indoor unit's green TIMER lamp (Fig. 3 7) will light.

- 3 Press the TIMER button (Fig. 6 26) to select the desired sequence (either OFF → ON or OFF ← ON).**

The display will alternately show "OFF timer" and "ON timer", then change to show the time setting for the operation to occur first.

- The program timer will begin operation. (If the ON timer has been selected to operate first, the unit will stop operating at this point).

About five seconds later, the entire display will reappear.

### To Cancel the Timer

Use the TIMER button to select "TIMER RESET."  
The air conditioner will return to normal operation.

### To Change the Timer Settings

1. Follow the instructions given in the section "To Use the ON Timer or OFF Timer" to select the timer setting you wish to change.
2. Press the TIMER button to select either OFF → ON or OFF ← ON.

### To Stop Air Conditioner Operation while the Timer is Operating

Press the START/STOP button.

### To Change Operating Conditions

If you wish to change operating conditions (Mode, Fan Speed, Thermostat Setting, SUPER QUIET mode), after making the timer setting wait until the entire display reappears, then press the appropriate buttons to change the operating condition desired.

## About the Program Timer

- The program timer allows you to integrate OFF timer and ON timer operations in a single sequence. The sequence can involve one transition from OFF timer to ON timer, or from ON timer to OFF timer, within a twenty-four hour period.
- The first timer function to operate will be the one set nearest to the current time. The order of operation is indicated by the arrow in the remote control unit's display (OFF → ON, or OFF ← ON).
- One example of program timer use might be to have the air conditioner automatically stop (OFF timer) after you go to sleep, then start (ON timer) automatically in the morning before you arise.



# SLEEP TIMER OPERATION

Unlike other timer functions, the SLEEP timer is used to set the length of time until air conditioner operation is stopped.

## To Use the SLEEP Timer

- 1 While the air conditioner is operating or stopped, press the SLEEP button (Fig. 6 ㉒).

The indoor unit's red OPERATION lamp (Fig. 3 ㉖) lights and the green TIMER lamp (Fig. 3 ㉗) light.

## To Change the Time Settings

Press the SLEEP button (Fig. 6 ㉒) once again and set the time using the SET TIME buttons (Fig. 6 ㉔).

Set the time while the time display is flashing (the flashing will continue about five seconds).

⊕ button: Press to advance the time.

⊖ button: Press to reverse the time.

About five seconds later, the entire display will reappear.

## To Cancel the Timer:

Use the TIMER button to select "TIMER RESET"  
The air conditioner will return to normal operation.

## To Stop the Air Conditioner During Timer Operation:

Press the START/STOP button.


## About the SLEEP Timer

To prevent excessive warming or cooling during sleep, the SLEEP timer function automatically modifies the thermostat setting in accordance with the time setting. When the set time has elapsed, the air conditioner completely stops.

### During Heating operation:

When the SLEEP timer is set, the thermostat setting is automatically lowered 1°C every thirty minutes. When the thermostat has been lowered a total of 4°C, the thermostat setting at that time is maintained until the set time has elapsed, at which time the air conditioner automatically turns off.


SLEEP timer setting

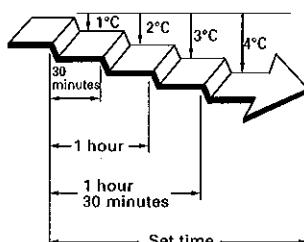

### During Cooling/Dry operation:

When the SLEEP timer is set, the thermostat setting is automatically raised 1°C every sixty minutes. When the thermostat has been raised a total of 2°C, the thermostat setting at that time is maintained until the set time has elapsed, at which time the air conditioner automatically turns off.

SLEEP timer setting

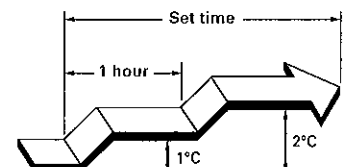

# SUPER QUIET BUTTON

Press this button only after beginning operation.

## To Select Super Quiet Operation

**Press the SUPER QUIET button (Fig. 6 ㉑).**

Super quiet operation will begin.

The SUPER QUIET indicator lamp (yellow) (Fig. 3 ㉑) will turn ON.

## To Cancel Super Quiet Operation

**Press the SUPER QUIET button (Fig. 6 ㉑) again.**

The operating mode will return to normal.

The SUPER QUIET indicator lamp (yellow) (Fig. 3 ㉑) will turn OFF.

- Super quiet operation cannot be used during dry mode.
- During super quiet operation, if the fan speed setting is changed manually, the super quiet operation will be canceled.
- During super quiet operation, heating and cooling performance will be reduced somewhat.
- If the SUPER QUIET button is pressed while the ON timer function is operating, super quiet operation will begin together with the ON timer.
- If the SUPER QUIET button is pressed during ON TIMER operation, the TIMER indicator lamp (green) and the SUPER QUIET indicator lamp (yellow) light simultaneously.

# MANUAL AUTO OPERATION

Use the MANUAL AUTO operation in the event the remote control unit is lost or otherwise unavailable.

## How To Use the Main Unit Controls

**Press the MANUAL AUTO button (Fig. 2 ㉓) on the main unit control panel.**

To stop operation, press the MANUAL AUTO button once again, or set the POWER switch (Fig. 2 ㉒) to OFF.

(Controls are located inside the front grille)

- When the air conditioner is operated with the controls on the main unit, it will operate under the same mode as the AUTO mode selected on the remote control unit (see page 6).
- The fan speed selected will be "AUTO" and the thermostat setting will be standard.

# CLEANING AND CARE

## CAUTION!


- Before cleaning the air conditioner, be sure to turn it off and disconnect the power supply cord.
- Be sure the intake grille (Fig. 1 ⑩) is installed securely.
- When removing and replacing the air filters, be sure not to touch the heat exchanger, as personal injury may result.

### Cleaning the Indoor Unit

- The intake grille may be removed for cleaning.
- Use a vacuum cleaner to remove accumulated dust, then wipe the outside cover with a clean cloth dipped in warm water; wipe dry with a clean dry cloth.


### Removing the Intake Grille

- Place your fingers behind the front lower edges of the grille, and pull open fully. (The grille will not come off unless pulled fully open).
- Lift upward and off.

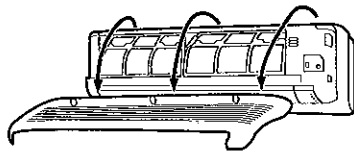

### Replacing the Intake Grille

- Hold the grille diagonally to the main unit, and locate the three tabs on the top of the main unit.

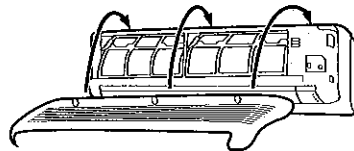

- Swing the grille down and snap into place.


### Cleaning the Air Filter

- Dust can be cleaned from the air filter either with a vacuum cleaner, or by washing the filter in a solution of mild detergent and warm water. If you wash the filter, be sure to allow it to dry thoroughly in a shady place before reinstalling.
- If dirt is allowed to accumulate on the air filter, air flow will be reduced, lowering operating efficiency and increasing noise.
- During periods of normal use, the air filters should be cleaned every two weeks.

### Removing the Air Filter (Fig. 1 ⑪)

- ① Open the intake grille (Fig. 4).
- ② Hold the air filter handle and lift up slightly, releasing the two lower holding tabs, then pull out.

Air filter handle

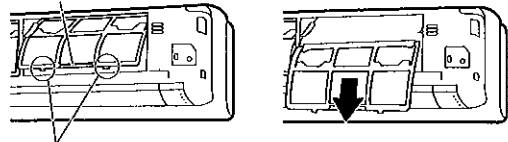


Hooks (two places).

(For purposes of example, the illustration shows the unit without the intake grille installed).

### Reinstalling the Air Filter (Fig. 1 ⑫)

- ① Align the air filter with the panel and push in gently as far as it will go.
- ② Fasten the two lower holding tabs in the frame of the main unit panel.

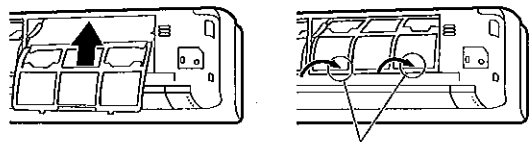

Hooks (two places)

- ③ Close the intake grille (Fig. 4).

(For purposes of example, the illustration shows the unit without the intake grille installed).

### When using the optional Air clean filter

- Install the optional air clean filter (model APS-04A).
- When used for extended periods, the unit may accumulate dirt inside, reducing its performance. We recommend that the unit be inspected regularly, in addition to your own cleaning and care. For more information, consult authorized service personnel.
- When cleaning the unit's body, do not use water hotter than 40°C, harsh abrasive cleansers, or volatile agents like benzene or thinner.
- Do not expose the unit body to liquid insecticides or hairsprays.
- When shutting down the unit for one month or more, first allow the fan mode to operate continuously for about one-half day to allow internal parts to dry thoroughly.

# TROUBLESHOOTING



## WARNING!

In the event of a malfunction (burning smell, etc.), immediately stop operation, disconnect the power supply plug, and consult authorized service personnel.

Merely turning off the unit's power switch will not completely disconnect the unit from the power source. Always be sure to disconnect the power supply plug or turn off your circuit breaker to ensure that power is completely off.

Before requesting service, perform the following checks:

	Symptom	Problem	See Page
NORMAL FUNCTIONS	Doesn't operate immediately:	<ul style="list-style-type: none"> <li>● If the unit is stopped and then immediately started again, the compressor will not operate for about 3 minutes, in order to prevent fuse blowouts.</li> <li>● Whenever the power supply plug is disconnected and then reconnected to a power outlet, the protection circuit will operate for about 3 minutes, preventing unit operation during that period.</li> </ul>	—
	Noise is heard:	<ul style="list-style-type: none"> <li>● During operation and immediately after stopping the unit, the sound of water flowing in the air conditioner's piping may be heard. Also, noise may be particularly noticeable for about 2 to 3 minutes after starting operation (sound of coolant flowing).</li> <li>● During operation, a slight squeaking sound may be heard. This is the result of minute expansion and contraction of the front cover due to temperature changes.</li> </ul>	—
		<ul style="list-style-type: none"> <li>● During Heating operation, a sizzling sound may be heard occasional. This sound is produced by the automatic defrosting operation.</li> </ul>	13
	Smells:	<ul style="list-style-type: none"> <li>● Some smell may be emitted from the indoor unit. This smell is the result of room smells (furniture, tobacco, etc.) which have been taken into the air conditioner.</li> </ul>	—
	Mist or steam are emitted:	<ul style="list-style-type: none"> <li>● During Cooling or Dry operation, a thin mist may be seen emitted from the indoor unit. This results from the sudden Cooling of room air by the air emitted from the air conditioner, resulting in condensation and misting.</li> </ul>	—
		<ul style="list-style-type: none"> <li>● During Heating operation, the outdoor unit's fan may stop, and steam may be seen rising from the unit. This is due to operation of the defrosting mode.</li> </ul>	13
	Airflow is weak or stops.	<ul style="list-style-type: none"> <li>● When Heating operation is started, fan speed is temporarily very low, to allow internal parts to warm up.</li> <li>● During Heating operation, if the room temperature rises above the thermostat setting, the outdoor unit will stop, and the indoor unit will operate at very low fan speed. If you wish to warm the room further, set the thermostat for a higher setting.</li> </ul>	—
		<ul style="list-style-type: none"> <li>● During Heating operation, the unit will temporarily stop operation (between 7 and 15 minutes) as the automatic defrosting mode operates. During defrosting operation, the OPERATION indicator lamp and DEFROST indicator lamp will light.</li> </ul>	13
		<ul style="list-style-type: none"> <li>● The fan may operate at very low speed during Dry operation or when the unit is monitoring the room's temperature.</li> </ul>	6
		<ul style="list-style-type: none"> <li>● During super quiet operation, the fan will operate at very low speed.</li> </ul>	10
		<ul style="list-style-type: none"> <li>● In the monitor AUTO operation, the fan will operate at very low speed.</li> </ul>	6
	Water is produced from the outdoor unit.	<ul style="list-style-type: none"> <li>● During Heating operation, water may be produced from the outdoor unit due to automatic defrosting operation.</li> </ul>	13

# TROUBLESHOOTING

	Symptom	Items to Check	See Page
CHECK ONCE MORE	Doesn't operate at all:	<ul style="list-style-type: none"> <li>● Is the power supply plug disconnected from its outlet?</li> <li>● Has there been a power failure?</li> <li>● Has a fuse blown out, or a circuit breaker been tripped?</li> </ul>	—
		<ul style="list-style-type: none"> <li>● Is the main power switch set to the OFF position?</li> </ul>	4
		<ul style="list-style-type: none"> <li>● Is the timer operating?</li> </ul>	8-9
	Poor Cooling (or Heating) performance:	<ul style="list-style-type: none"> <li>● Is the air filter dirty?</li> <li>● Are the air conditioner's intake grille or outlet port blocked?</li> <li>● Did you adjust the room temperature settings (thermostat) correctly?</li> <li>● Is there a window or door open?</li> <li>● In the case of cooling operation, is a window allowing bright sunlight to enter? (Close the curtains.)</li> <li>● In the case of Cooling operation, are there heating apparatus and computers inside the room, or are there too many people in the room?</li> </ul>	—
		<ul style="list-style-type: none"> <li>● Is the unit set for super quiet operation?</li> </ul>	10
	The unit operates differently from the remote control unit's setting:	<ul style="list-style-type: none"> <li>● Are the remote control unit's batteries dead?</li> <li>● Are the remote control unit's batteries loaded properly?</li> </ul>	4

If the problem persists after performing these checks, or if you notice burning smells, or the TIMER lamp (Fig. 3, ⑦) flashes, immediately stop operation, disconnect the Power Supply Plug (Fig. 1 ⑤), and consult authorized service personnel.

## OPERATING TIPS

### Operation and Performance

#### Heating Performance

- This air conditioner operates on the heat-pump principle, absorbing heat from outdoor air and transferring that heat indoors. As a result, the operating performance is reduced as outdoor air temperature drops. If you feel that insufficient heating performance is being produced, we recommend you use this air conditioner in conjunction with another kind of heating appliance.
- Heat-pump air conditioners heat your entire room by recirculating air throughout the room, with the result that some time may be required after first starting the air conditioner until the room is heated.

#### Microcomputer-controlled Automatic Defrosting

- When using the heating mode under conditions of low outdoor air temperature high humidity, frost may form on the outdoor unit, resulting in reduced operating performance. In order to prevent this kind of reduced performance, this unit is equipped with an automatic microcomputer-controlled defrosting function. If frost forms, the air conditioner will temporarily stop, and the defrosting circuit will operate briefly (for about 7-15 minutes).

# OPERATING TIPS

## In Event of Power Interruption

- During air conditioner operation, if power is temporarily interrupted due to a power failure or other reason, the air conditioner will automatically restart in the same mode when power is restored.
- When the power supply plug is reinserted into its power outlet, or when power is restored after a power failure, the OPERATION lamp (red) and TIMER lamp (green) will flash alternately (the lamps will not flash if indoor unit's POWER switch is in the OFF position).

The flashing will stop when the remote control unit is used to restart the air conditioner.

- Use of other electrical appliances (electric shaver, etc.) or nearby use of a wireless radio transmitter may cause the air conditioner to malfunction. In this event, temporarily disconnect the power supply plug, reconnect it, and then use the remote control unit to resume operation.

## Temperature and Humidity Range

	Cooling Mode	Drying Mode	Heating Mode
Outdoor temperature	About 21-43°C	About 21-43°C	About 21°C or less
Indoor temperature	About 18-32°C	About 18-32°C	About 30°C or less
Indoor humidity	About 80% or less If the unit is used for long periods under high-humidity conditions, condensation may form on the surface of the indoor unit, and drip onto the floor or other objects underneath.	If the unit is used for long periods under high-humidity conditions, condensation may form on the surface of the indoor unit, and drip onto the floor or other objects underneath.	

- If the air conditioner is used under higher temperature conditioner than those listed, the built-in protection circuit may operate to prevent internal circuit damage. Also, during cooling and dry modes, if the unit is used under conditions of lower temperature than those listed above, the heat-exchanger may freeze, leading to water leakage and other damage.
- Do not use this unit for any purposes other than the cooling, heating, and dehumidifying, and air-circulation of rooms in ordinary dwellings.





**FUJITSU GENERAL LIMITED**

1116, Suenaga, Takatsu-ku, Kawasaki 213, Japan

Printed in Japan